

Component Procedures: Brake Caliper

Table of Contents

1. Parts and Labor (itype_189)
2. Specifications Quick Reference (itype_439)

Component Procedures: Brake Caliper

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Front Brakes	5811233000	Caliper Piston	46.76	
Front Brakes > Caliper > Kor?	58180F2A50	Left	375.40	
Front Brakes > Caliper > Kor?	58190F2A50	Right	375.40	
Front Brakes > Caliper > Kor?	58110F2000	Left	580.37	
Front Brakes > Caliper > Kor?	58130F2000	Right	580.37	
Front Brakes > Caliper > Us ?	58180F3A00	Left	407.90	
Front Brakes > Caliper > Us ?	58190F3A00	Right	407.90	
Front Brakes > Caliper Seal ?	5811433000	Piston Boot	10.56	
Front Brakes > Caliper Seal ?	58113D3000	Piston Seal	6.27	
Rear Brakes	58213F2300	Caliper Piston	134.47	
Rear Brakes > Caliper > Kore?	58310F2A30	Left	381.50	
Rear Brakes > Caliper > Kore?	58311F2A30	Right	381.50	
Rear Brakes > Caliper > Us B?	58310F3A30	Left	260.87	
Rear Brakes > Caliper > Us B?	58311F3A30	Right	260.87	
Rear Brakes > Caliper Seal K?	5823328300	Piston Boot	19.47	
Rear Brakes > Caliper Seal K?	5823228300	Piston Seal	6.60	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Brake Components > Brakes, R&R > Front Pads	B	0.9	0.0
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.2	
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.3	
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.2	
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.1	
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.2	
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.5	
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.6	
Remove & Replace	Brake Components > Brakes, R&R > Front Pads >?		0.4	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?	B	0.9	0.0
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.2	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.3	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.2	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.1	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.2	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.5	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.6	
Remove & Replace	Brake Components > Brakes, R&R > Rear Pads/Sh?		0.4	

Specifications Quick Reference (itype_439)

Quick Specifications

- item