

Component Procedures: Seat Latch


Table of Contents

1. Rear Seat Folding Lever - Components and Components Location (Article 45091)
2. Rear Seat Folding Lever - Repair Procedures (Article 45092)

Component Procedures: Seat Latch

Rear Seat Folding Lever - Components and Components Location (Article 45091)

- Components

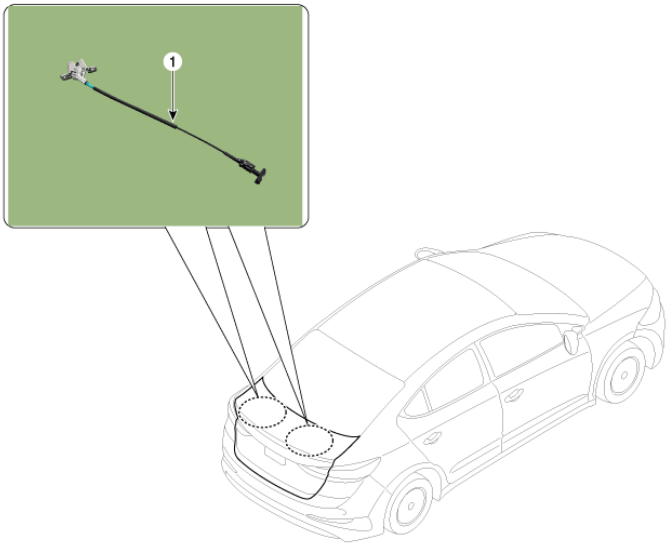



1. Rear seat folding lever

Rear Seat Folding Lever - Repair Procedures (Article 45092)

- Replacement

- Fold the rear seat back assembly (A) by pulling the folding lever in the direction of the arrow.

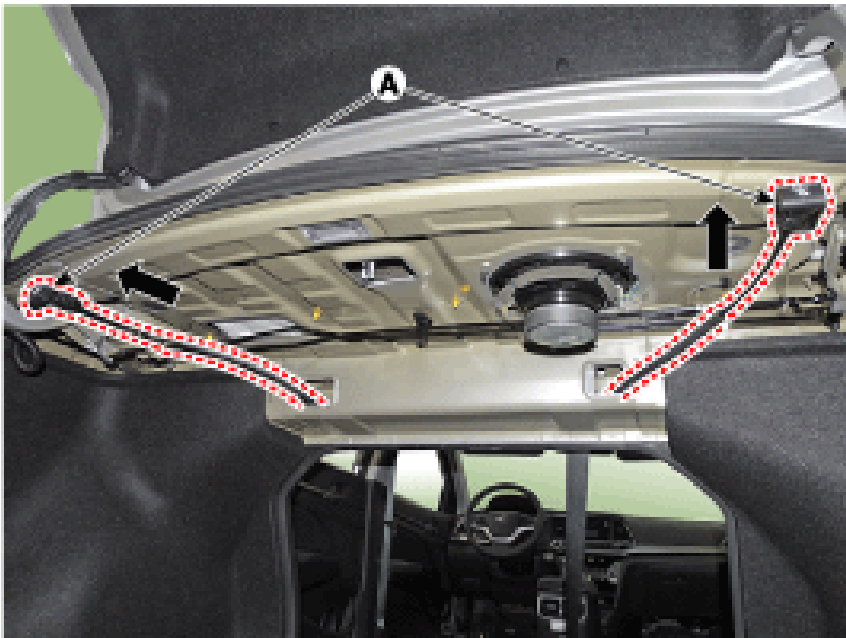

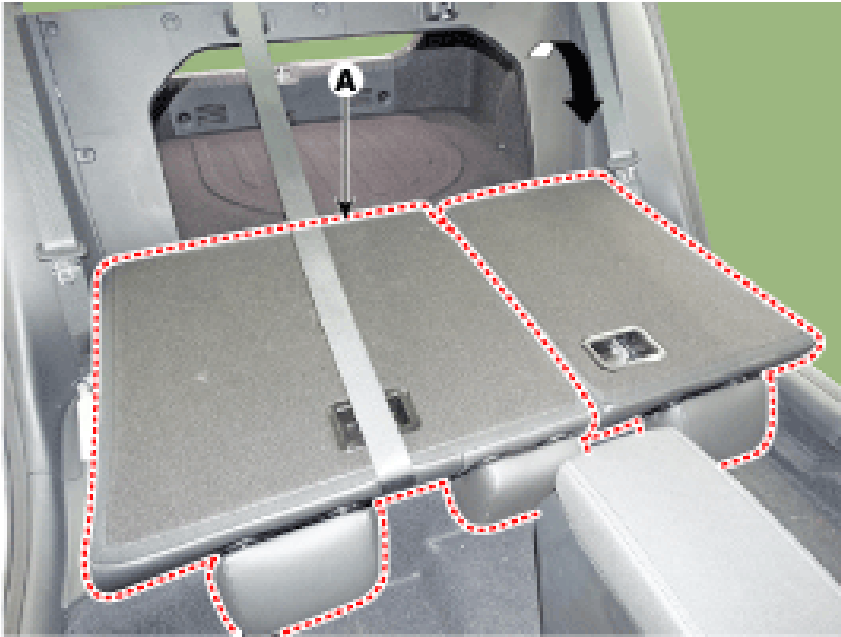

- Loosen the mounting clips and bolts, remove the rear seat folding lever (A).



- To install, reverse the removal procedure.