

# **Component Procedures: Steering Angle Sensor**

## **Table of Contents**

1. Parts and Labor (itype\_189)

# Component Procedures: Steering Angle Sensor

## Parts and Labor (itype\_189)

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Calibrate	Steering Column > Position Sensor, Calibrate	B	0.4	0.0