

Component Procedures: Oil Pressure Sensor

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Oil Pressure Sensor

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Senders	9475037100	Oil Pressure Sending U?	36.23	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Senders > Oil Pressure Sending Unit, R&R	B	0.9	0.0