

Component Procedures: Trim Panel


Table of Contents

1. Center Pillar Trim - Components and Components Location (Article 45045)
2. Cowl Side Trim - Components and Components Location (Article 45041)
3. Front Pillar Trim - Components and Components Location (Article 45043)
4. Luggage Side Trim - Components and Components Location (Article 45049)
5. Rear Pillar Trim - Components and Components Location (Article 45051)
6. Rear Transverse Trim - Components and Components Location (Article 45047)
7. Center Pillar Trim - Repair Procedures (Article 45046)
8. Cowl Side Trim - Repair Procedures (Article 45042)
9. Front Pillar Trim - Repair Procedures (Article 45044)
10. Luggage Side Trim - Repair Procedures (Article 45050)
11. Rear Pillar Trim - Repair Procedures (Article 45052)
12. Rear Transverse Trim - Repair Procedures (Article 45048)

Component Procedures: Trim Panel

Center Pillar Trim - Components and Components Location (Article 45045)


- Component Location

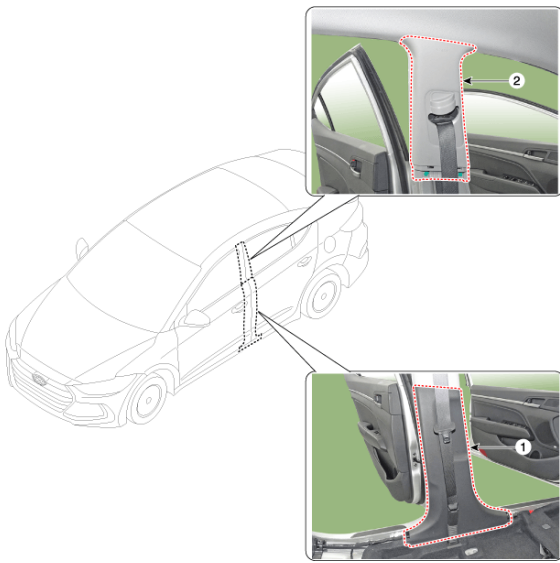

1. Center pillar lower trim 2. Center pillar upper trim

Cowl Side Trim - Components and Components Location (Article 45041)


- Component Location

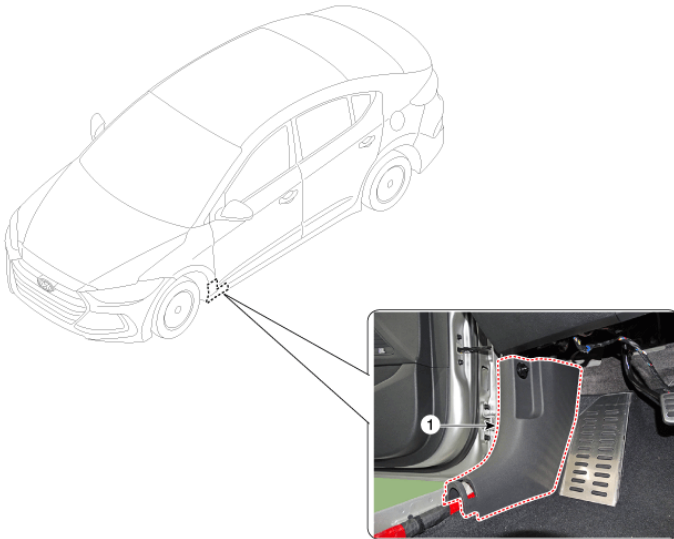

1. Cowl side trim

Front Pillar Trim - Components and Components Location (Article 45043)


- Component Location

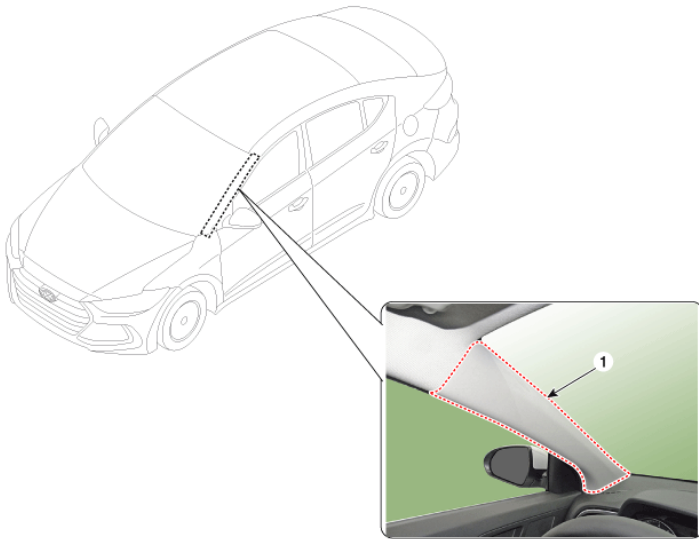

1. Front pillar trim

Luggage Side Trim - Components and Components Location (Article 45049)


- Component Location

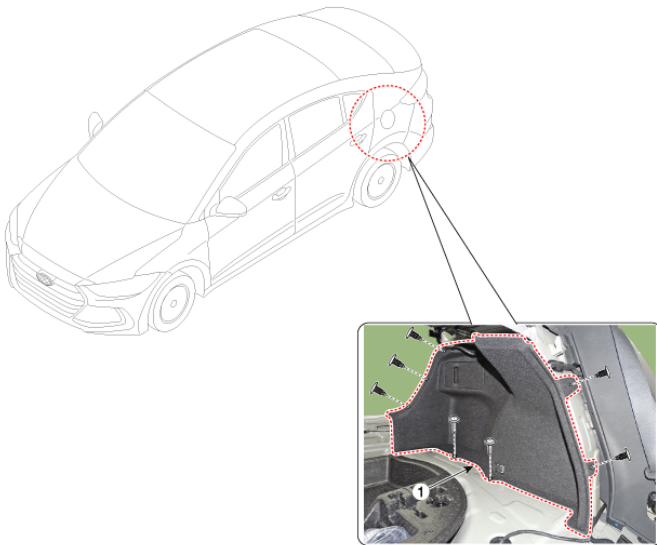

1. Luggage side trim

Rear Pillar Trim - Components and Components Location (Article 45051)


- Component Location

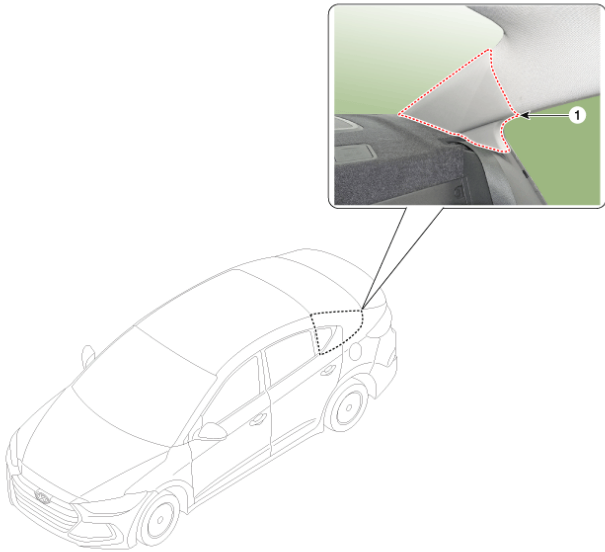

1. Rear pillar trim

Rear Transverse Trim - Components and Components Location (Article 45047)

- Component Location

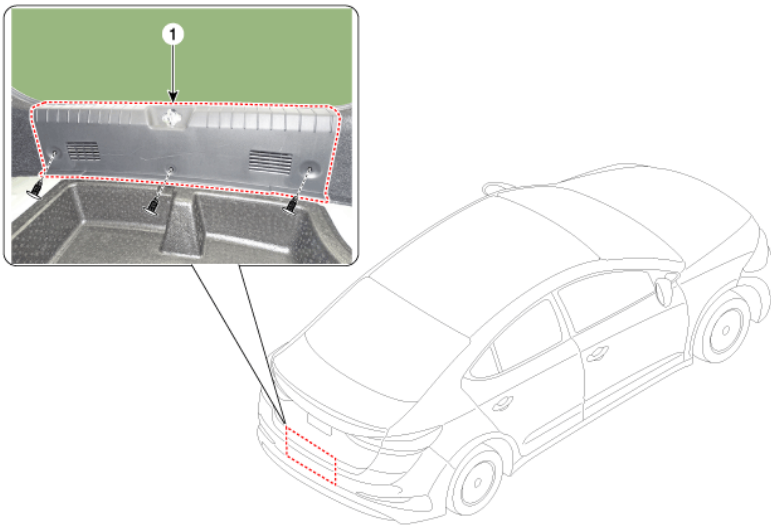

1. Rear transverse trim

Center Pillar Trim - Repair Procedures (Article 45046)

- Replacement

[Center pillar lower trim]

Put on gloves to prevent hand injuries.

⚠ CAUTION

- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.

NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.

- Take care not to bend or scratch the trim and panels.


- Carefully remove the front door body side weatherstrip .

- Carefully remove the rear door body side weatherstrip.


- Remove the front door scuff trim. (Refer to Interior Trim - "Door Scuff Trim")

- Remove the rear door scuff trim. (Refer to Interior Trim - "Door Scuff Trim")

- Using a screwdriver or remover, remove the center pillar lower trim (A).

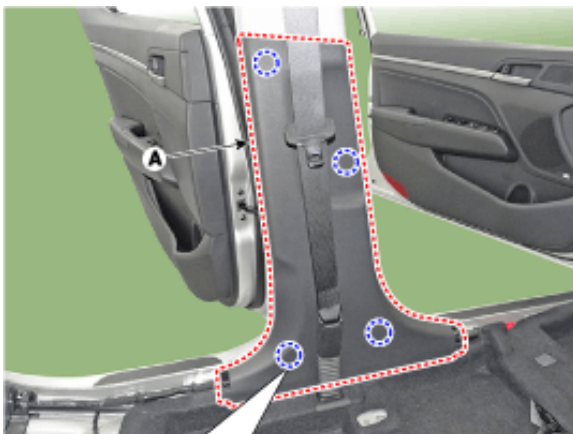


- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).

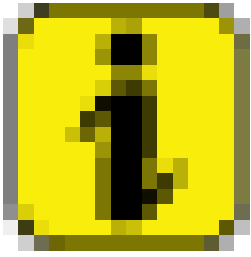

Information

- Replace any damaged clips (or pin-type retainers).
[Center pillar upper trim]
- Remove the center pillar lower trim. (Refer to Interior Trim - "Center Pillar Trim")
- Remove the anchor seat belt connector. (Refer to Restraint - "Emergency Fastening Device (EFD)")
- Using a screwdriver or remover, remove the center pillar upper trim (A).

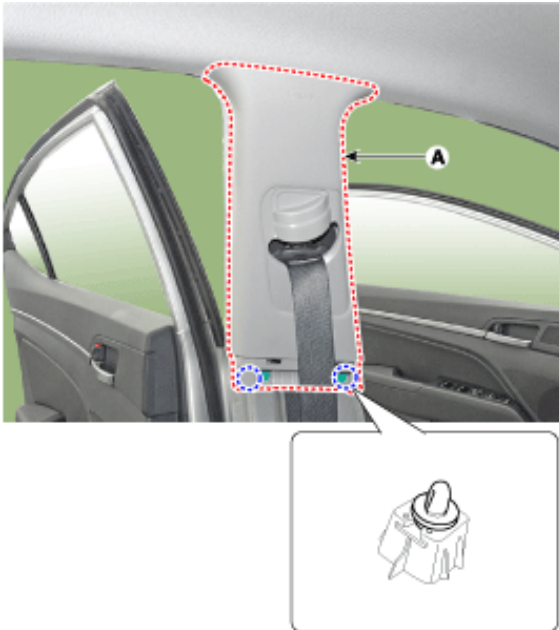

Cowl Side Trim - Repair Procedures (Article 45042)


- Replacement
Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.
When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.

NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
- Take care not to bend or scratch the trim and panels.
- Remove the front door scuff trim. (Refer to Interior Trim - "Door Scuff Trim")
- Remove the hood latch release handle. (Refer to Hood - "Hood Latch Release Handle")
- Carefully remove the front door body side weatherstrip .
- Using a screwdriver or remover, remove the cowl side trim (A).

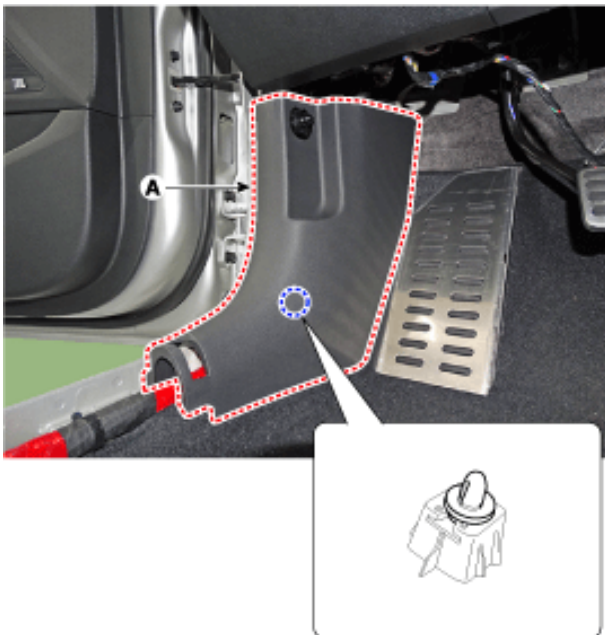

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).



Information

- Replace any damaged clips (or pin-type retainers).

Front Pillar Trim - Repair Procedures (Article 45044)

- Replacement
Put on gloves to prevent hand injuries.

⚠ CAUTION

- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.

NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.

- Take care not to bend or scratch the trim and panels.

- Remove the front pillar trim. To remove the front pillar trim, the fastener remover (A) below must be used. After slightly lifting up the front pillar trim and putting the tool in, remove the mounting clip (A) by pulling it. Be sure to replace the existing clips with new ones when removing or replacing the front pillar trim. Remove the front pillar trim (A).


- To remove the front pillar trim, the fastener remover (A) below must be used.




- After slightly lifting up the front pillar trim and putting the tool in, remove the mounting clip (A) by pulling it. Be sure to replace the existing clips with new ones when removing or replacing the front pillar trim.

Be sure to replace the existing clips with new ones when removing or replacing the front pillar trim.

- Be sure to replace the existing clips with new ones when removing or replacing the front pillar trim.

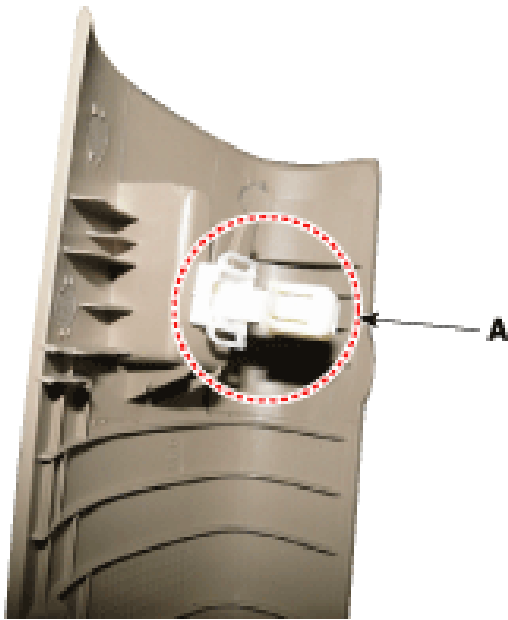

- Remove the front pillar trim (A).

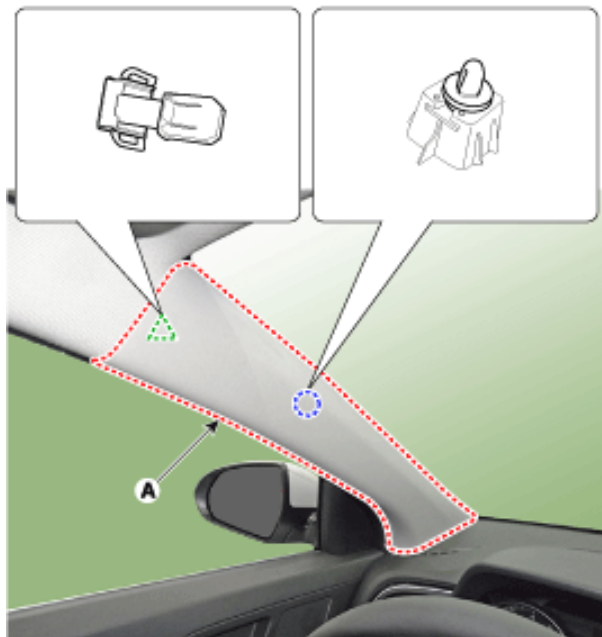

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers). Be sure to replace the existing clips with new ones when removing or replacing the front pillar trim.
Replace any damaged clips (or pin-type retainers). Be sure to replace the existing clips with new ones when removing or replacing the front pillar trim.




Information

- Replace any damaged clips (or pin-type retainers).

Luggage Side Trim - Repair Procedures (Article 45050)

- Replacement

Put on gloves to prevent hand injuries.

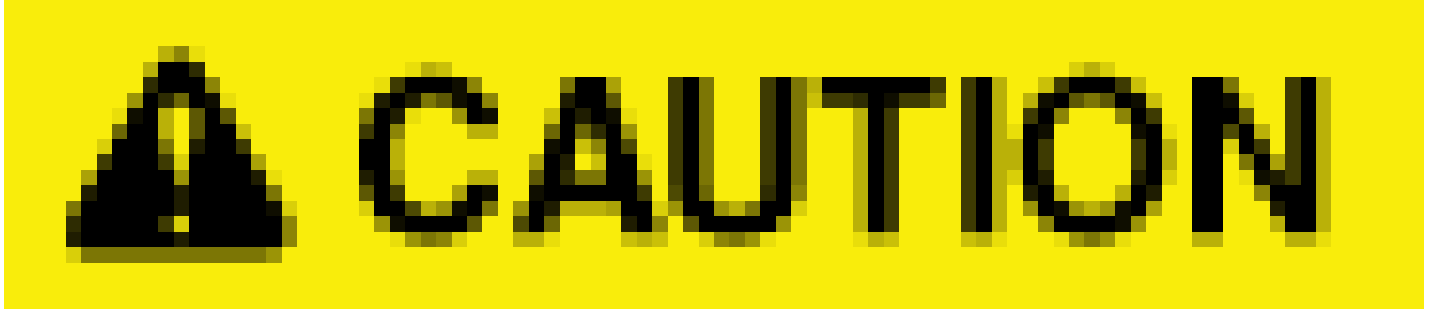

- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.

- Take care not to bend or scratch the trim and panels.


- Remove the rear seat assembly (Refer to Rear Seat - "Rear Seat Assembly")

- Carefully remove the rear door body side weatherstrip .


- Remove the rear door scuff trim. (Refer to Interior Trim - "Door Scuff Trim")

- Remove the rear transverse trim. (Refer to Interior Trim - "Rear Transverse Trim")


- Loosen the mounting clips and screws, remove the luggage partition side trim (A).

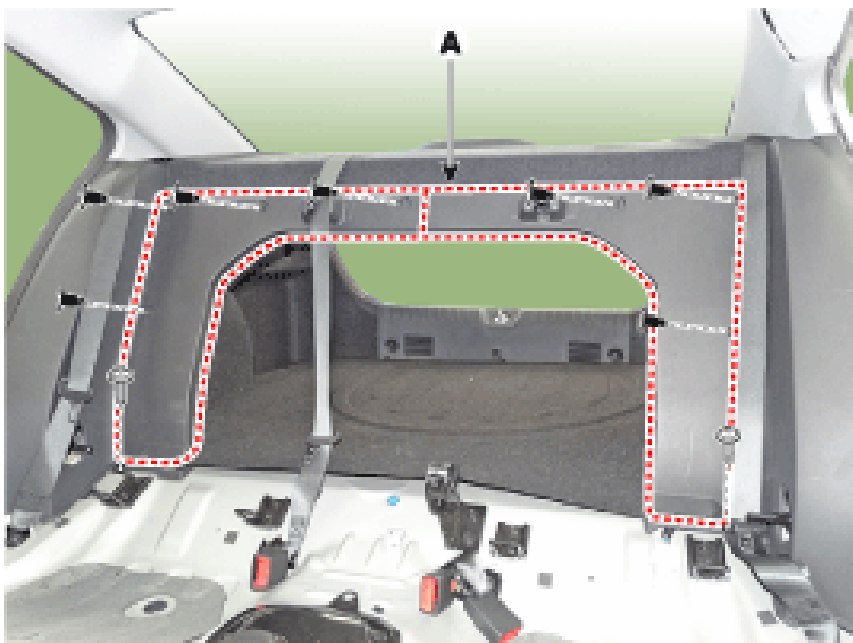

- After loosening the mounting bolts and screws, remove the luggage side trim (A).

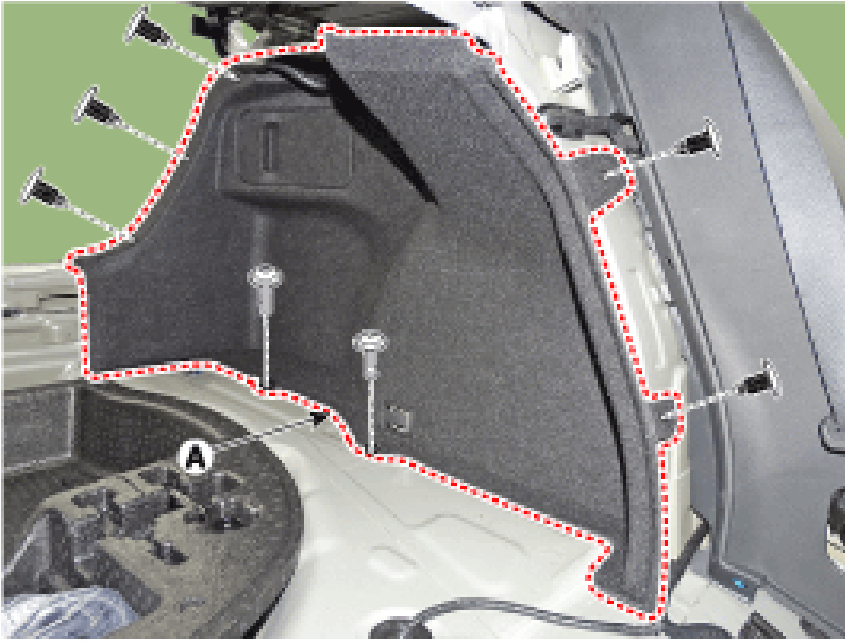

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).

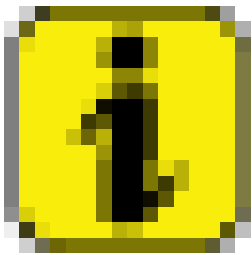

Information

- Replace any damaged clips (or pin-type retainers).

Rear Pillar Trim - Repair Procedures (Article 45052)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.

NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
- Take care not to bend or scratch the trim and panels.
- Slightly remove the rear door body side weatherstrip .
- Remove the rear pillar trim. To remove the rear pillar trim, the fastener remover (A) below must be used. After slightly lifting up the rear pillar trim and putting the tool in, remove the mounting clip (A) by pulling it. Be sure to replace the existing clips with new ones when removing or replacing the rear pillar trim. Remove the rear pillar trim (A). Be sure to replace the existing clips (B) with new ones when removing or replacing the rear pillar trim.
- To remove the rear pillar trim, the fastener remover (A) below must be used.




- After slightly lifting up the rear pillar trim and putting the tool in, remove the mounting clip (A) by pulling it. Be sure to replace the existing clips with new ones when removing or replacing the rear pillar trim.
- Be sure to replace the existing clips with new ones when removing or replacing the rear pillar trim.

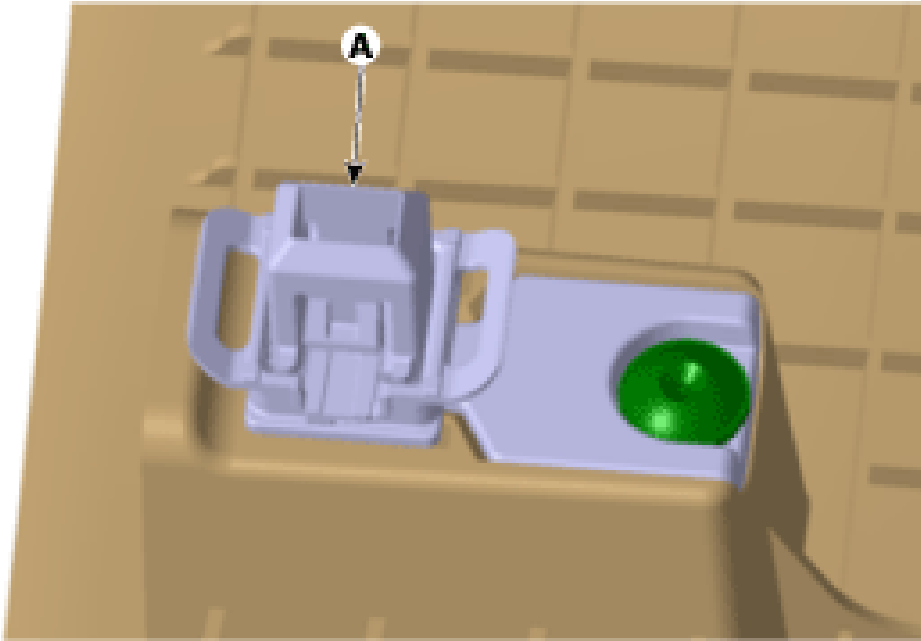

- Remove the rear pillar trim (A). Be sure to replace the existing clips (B) with new ones when removing or replacing the rear pillar trim.

Be sure to replace the existing clips (B) with new ones when removing or replacing the rear pillar trim.

- Be sure to replace the existing clips (B) with new ones when removing or replacing the rear pillar trim.

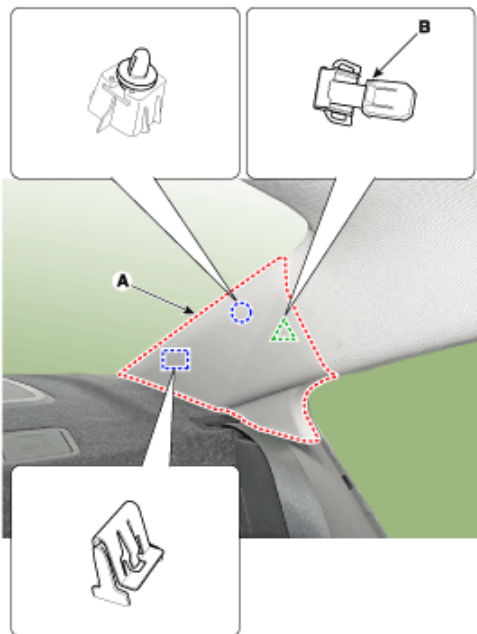

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).

Replace any damaged clips (or pin-type retainers).




Information

- Replace any damaged clips (or pin-type retainers).

Rear Transverse Trim - Repair Procedures (Article 45048)


- Replacement

Put on gloves to prevent hand injuries.

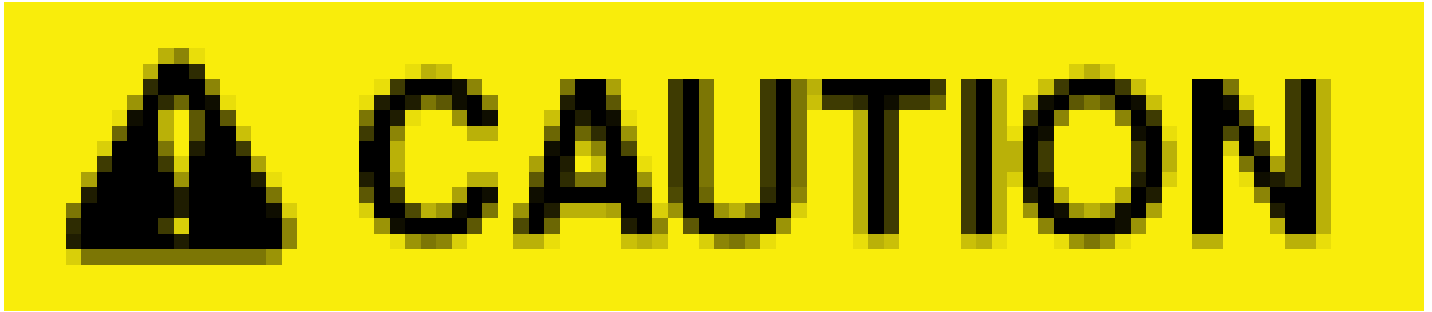

- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.

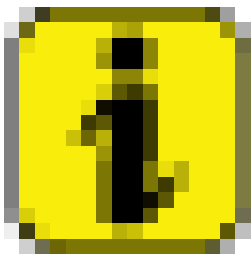


Information

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.


- Take care not to bend or scratch the trim and panels.

- Remove the luggage board (A).

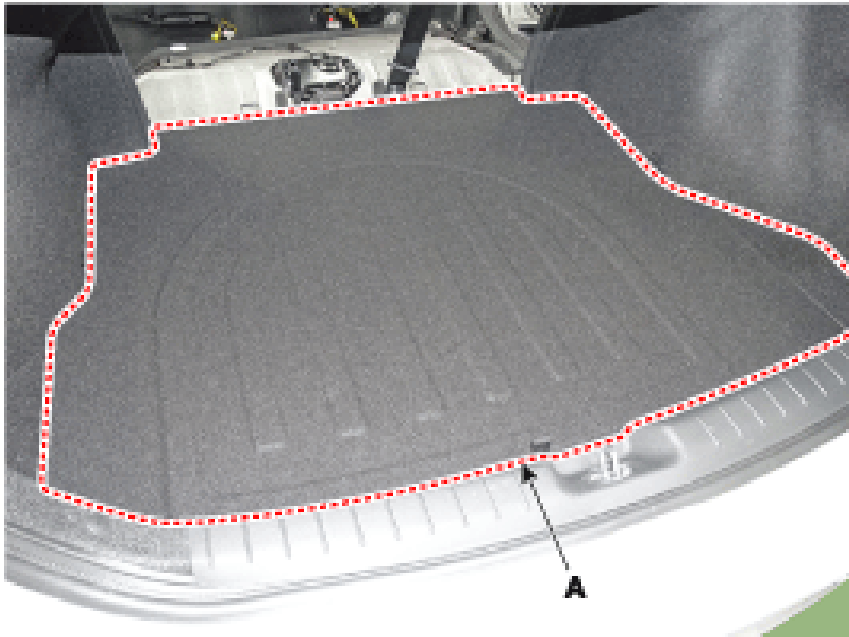

- Remove the tail gate weatherstrip .

- Loosen the mounting clips and remove the rear transverse trim (A).

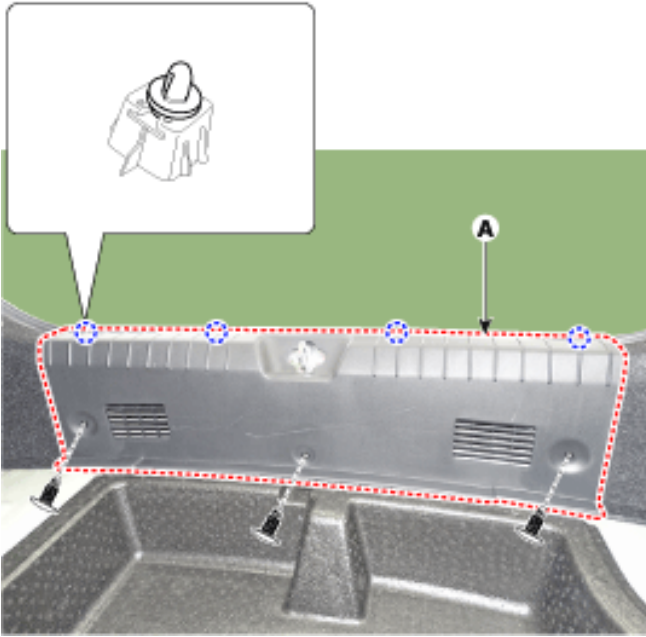

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
- Replace any damaged clips (or pin-type retainers).
- Replace any damaged clips (or pin-type retainers).