

Component Procedures: Air Cleaner Housing

Table of Contents

1. Parts and Labor (itype_189)
2. Air Cleaner - Components and Components Location (Article 45390)
3. Air Cleaner - Repair Procedures (Article 45391)

Component Procedures: Air Cleaner Housing

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Filters	28113F2000	Air Filter	23.00	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Filters > Air Filter, R&R	C	0.2	0.0

Air Cleaner - Components and Components Location (Article 45390)

- Components

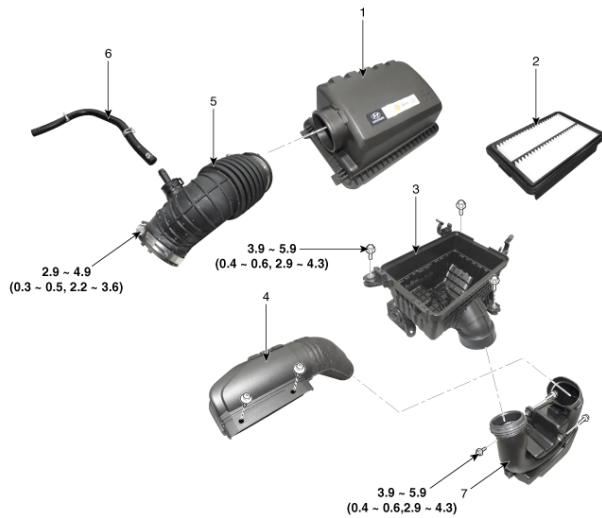

Tightening torque : N.m (kgf.m, lb-ft)


1. Air cleaner cover 2. Air cleaner element 3. Air cleaner body 4. Air duct 5. Air intake hose 6. Breather hose 7. Resonator

Air Cleaner - Repair Procedures (Article 45391)


- Removal and Installation

Air Cleaner Assembly


- Remove the engine cover . (Refer to Engine and Transaxle Assembly - "Engine Cover")
- Disconnect the battery negative terminal.
- Remove the air duct (A).

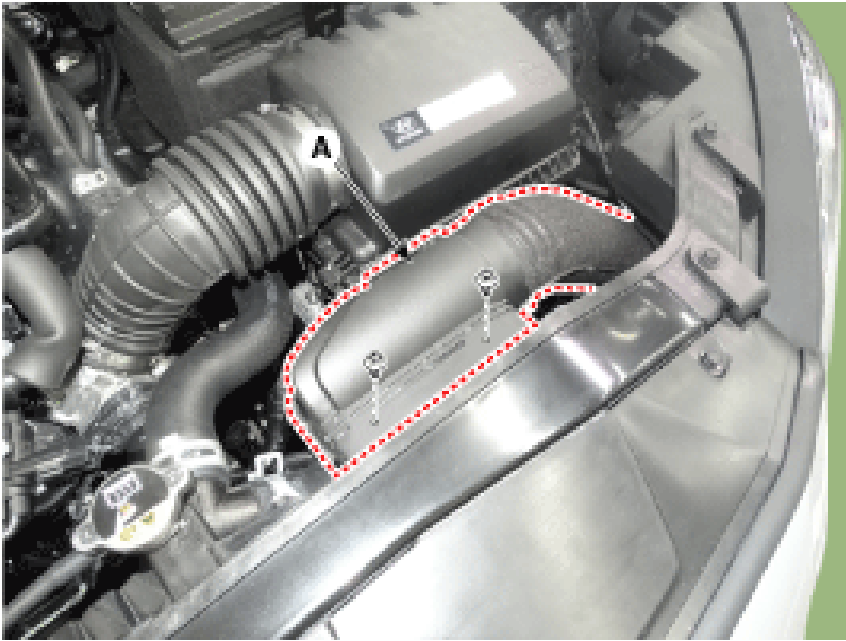


- Disconnect the breather hose (A).
- Disconnect the intake hose (B) and air cleaner assembly (C). Tightening torque Hose clamp : 2.9 - 4.9 N.m (0.3 - 0.5 kgf.m, 2.2 - 3.6 lb-ft) Air cleaner bolts : 3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

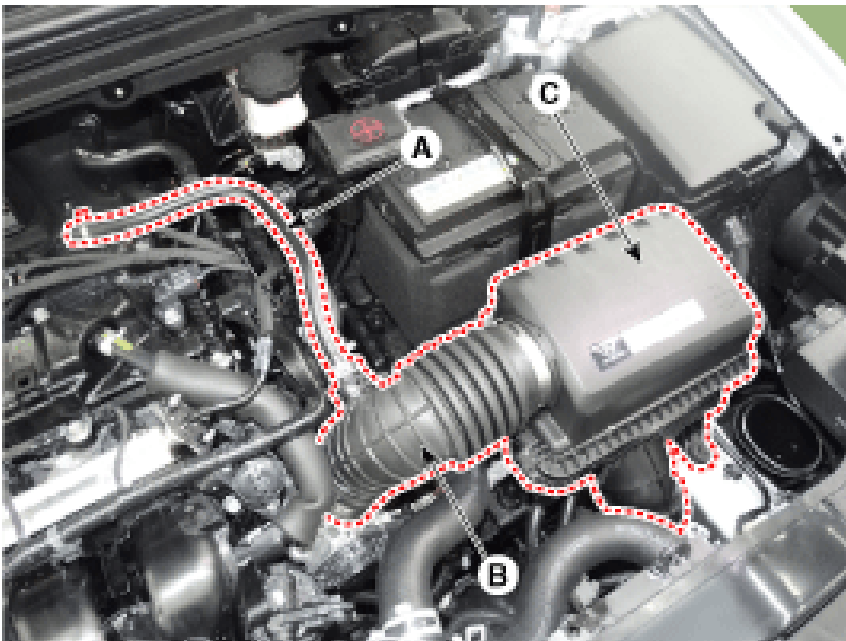


- Install in the reverse order of removal.
- Resonator
- Remove the air duct and air cleaner assembly. (Refer to Intake and Exhaust System - "Air Cleaner")
 - Disconnect the wiring connectors and harness clamps and remove the connector brackets around the resonator.

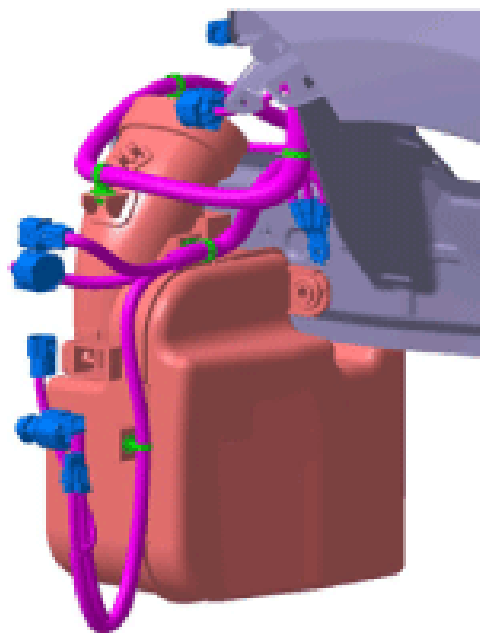


- Remove the resonator (A). Tightening torque : 3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

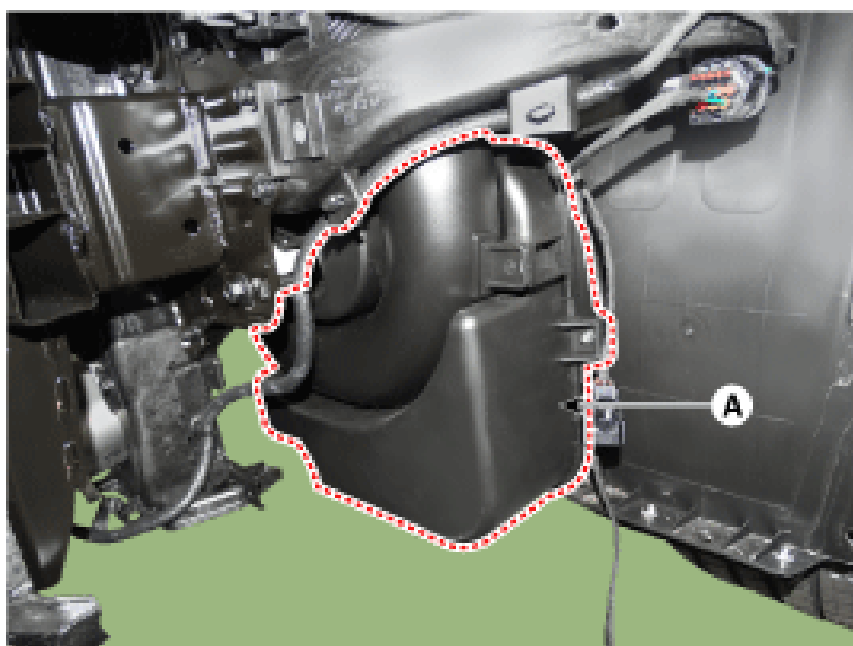

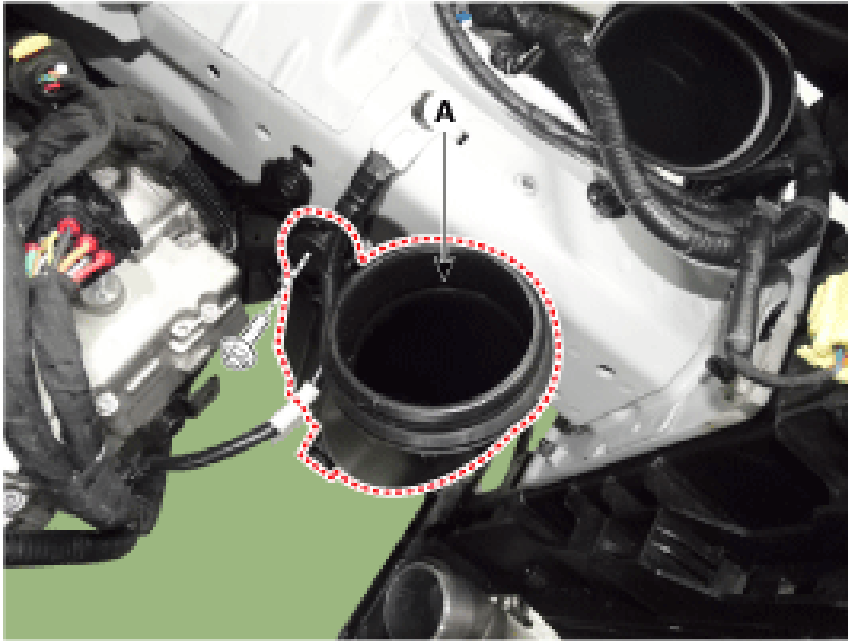


Air Cleaner Element Replacement

- Remove the clamp and open the air cleaner cover .

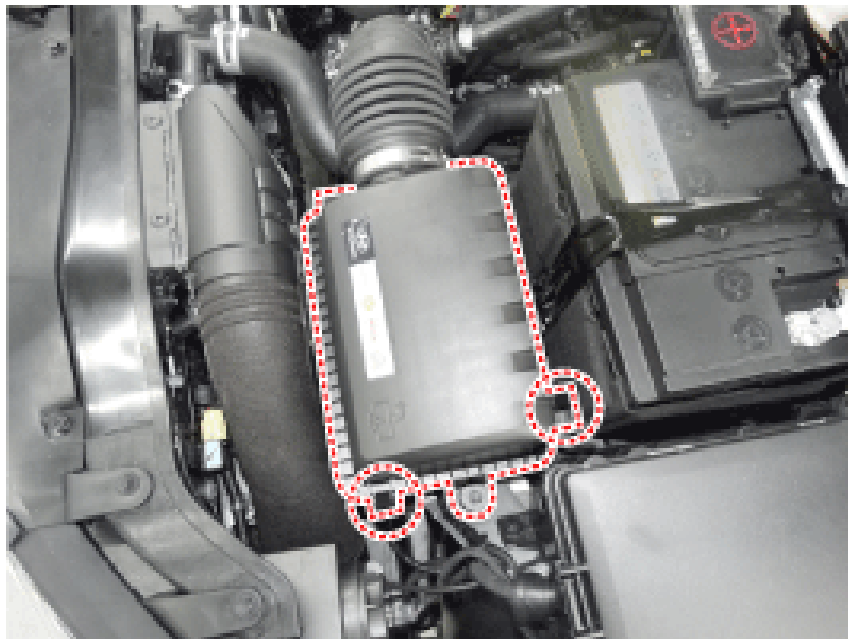

- Replace the air cleaner element (A) with a new one. If there is any foreign substance inside the air cleaner assembly, clean the inside and replace the air cleaner element.

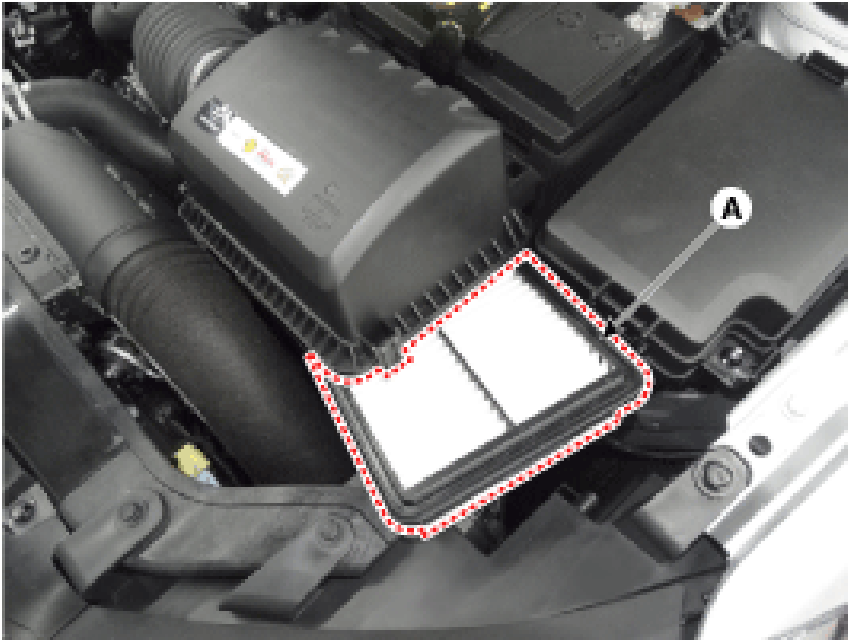

If there is any foreign substance inside the air cleaner assembly, clean the inside and replace the air cleaner element.

NOTICE

- If there is any foreign substance inside the air cleaner assembly, clean the inside and replace the air cleaner element.
 - Close the air cleaner cover and engage the clamp. Insert the hinge (A) and engage the clamp when mounting the air cleaner cover.
- Insert the hinge (A) and engage the clamp when mounting the air cleaner cover.
- Insert the hinge (A) and engage the clamp when mounting the air cleaner cover.

