

Component Procedures: Fuel Filler Neck

Table of Contents

1. Parts and Labor (itype_189)
2. Filler-Neck Assembly - Repair Procedures (Article 44226)

Component Procedures: Fuel Filler Neck


Parts and Labor (itype_189)

Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Fuel Supply > Filler Neck, R&R	B	0.8	0.0

Filler-Neck Assembly - Repair Procedures (Article 44226)


- Removal
- Remove the rear-LH wheel, tire, and the inner wheel house.
- Disconnect the fuel filter hose (A) and the ventilation hose (B).

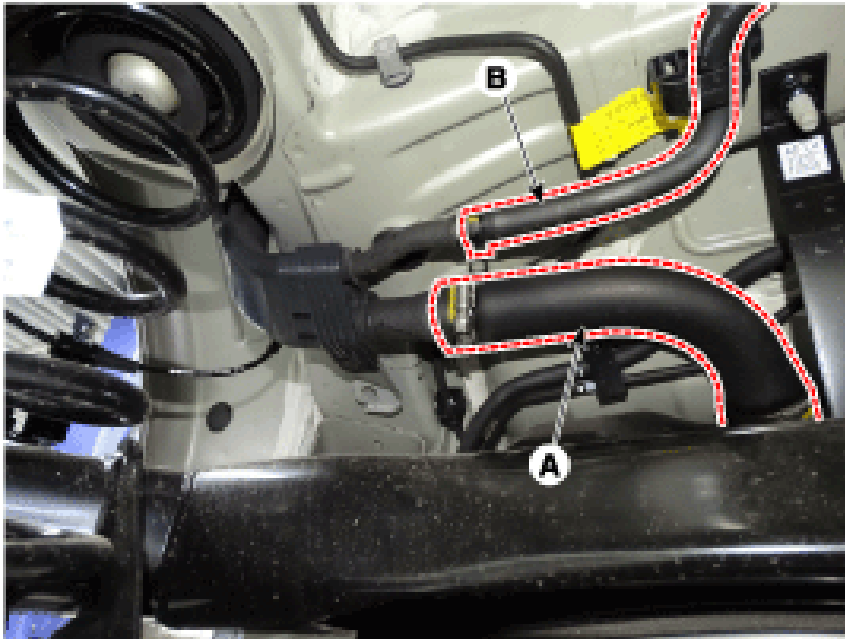

- Open the fuel filler door and unfasten the filler-neck assembly mounting screw (A).

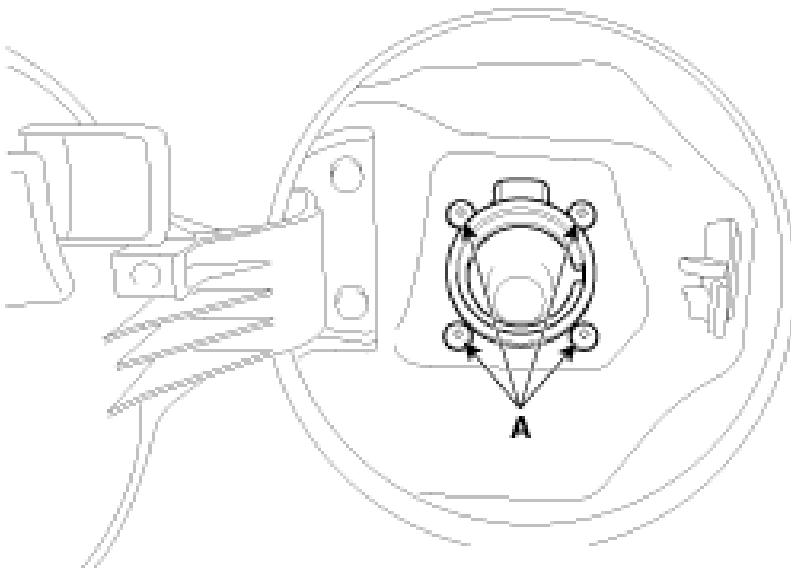

- Remove the filler-neck assembly from the vehicle after removing the bracket mounting bolts (A).

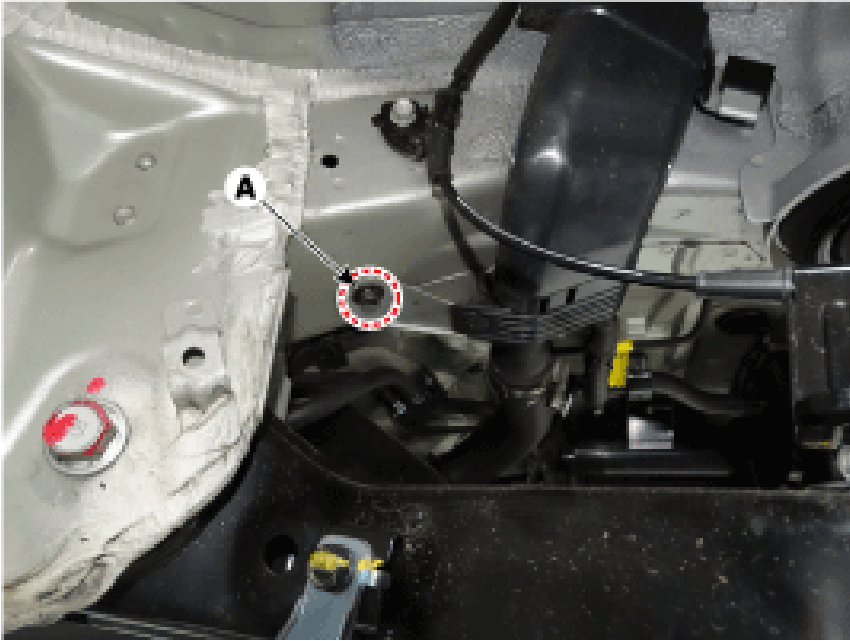

- Installation
- Installation is reverse of removal. Filler-neck assembly bracket installation bolt : 7.8 - 11.8 N.m (0.8 - 1.2 kgf.m, 5.8 - 8.7 lb-ft)