

Component Procedures: Seat Cover

Table of Contents

1. Front Seat Back Cover - Components and Components Location (Article 45077)
2. Front Seat Cushion Cover - Components and Components Location (Article 45079)
3. Front Seat Shield Inner Cover - Components and Components Location (Article 45075)
4. Front Seat Shield Outer Cover - Components and Components Location (Article 45073)
5. Rear Seat Back Cover - Components and Components Location (Article 45086)
6. Rear Seat Cushion Cover - Components and Components Location (Article 45088)
7. Front Seat Back Cover - Repair Procedures (Article 45078)
8. Front Seat Cushion Cover - Repair Procedures (Article 45080)
9. Front Seat Shield Inner Cover - Repair Procedures (Article 45076)
10. Front Seat Shield Outer Cover - Repair Procedures (Article 45074)
11. Rear Seat Back Cover - Repair Procedures (Article 45087)
12. Rear Seat Cushion Cover - Repair Procedures (Article 45089)
13. All New Technical Service Bulletins (itype_432)
14. All Technical Service Bulletins (itype_100)
15. OEM Policies and Procedures (itype_120)

Component Procedures: Seat Cover

Front Seat Back Cover - Components and Components Location (Article 45077)

- Component Location



1. Front seat back cover

Front Seat Cushion Cover - Components and Components Location (Article 45079)

- Component Location



1. Front seat cushion cover

Front Seat Shield Inner Cover - Components and Components Location (Article 45075)

- Component Location



1. Front seat shield inner cover

Front Seat Shield Outer Cover - Components and Components Location (Article 45073)

- Component Location



1. Front seat shield outer cover

Rear Seat Back Cover - Components and Components Location (Article 45086)

- Component Location



1. Rear seat back cover [LH] 2. Rear seat back cover [RH]

Rear Seat Cushion Cover - Components and Components Location (Article 45088)

- Component Location



1. Rear seat cushion cover

Front Seat Back Cover - Repair Procedures (Article 45078)

- Replacement


Put on gloves to prevent hand injuries.

⚠ CAUTION

- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

Take care not to bend or scratch the trim and panels.

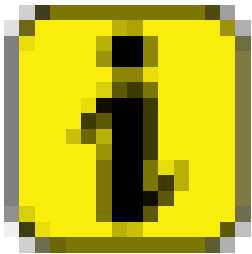

Information

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.


- Take care not to bend or scratch the trim and panels.

- Remove the front seat assembly. (Refer to Front Seat - "Front Seat Assembly")

- Remove the front seat shield outer cover. (Refer to Front Seat - "Front Seat Shield Outer Cover")

- Remove the front seat shield inner cover. (Refer to Front Seat - "Front Seat Shield Inner Cover")

- Remove the front seat lower protector (A).

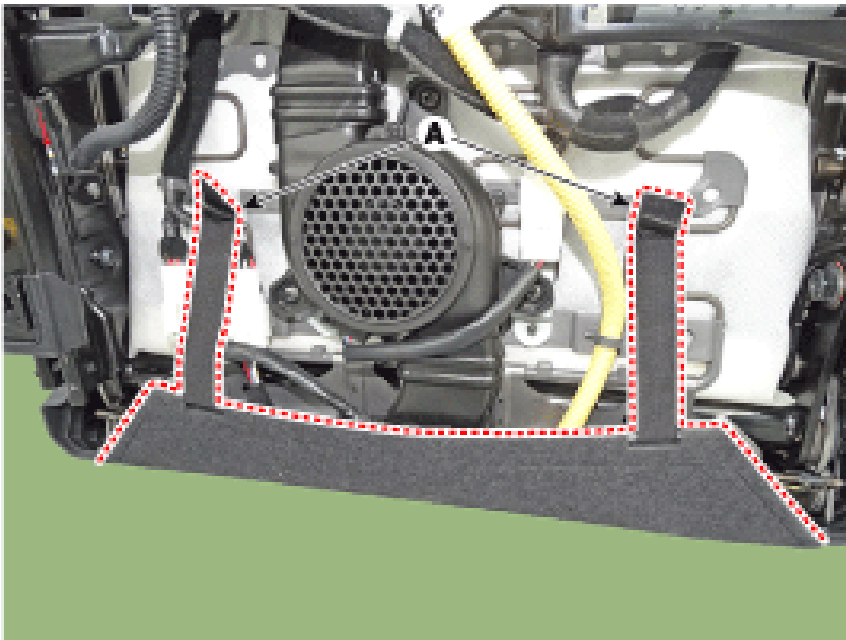



- Loosen the mounting screws and remove the airbag wiring (A).





- Push the lock pin, remove the front seat headrest (A).





- Remove the front seat back board (A). Separate the upper back cover by pushing the lock pin in the direction of the arrow. Remove the front seat back cover by lifting in the direction.
- Separate the upper back cover by pushing the lock pin in the direction of the arrow.
- Remove the front seat back cover by lifting in the direction.

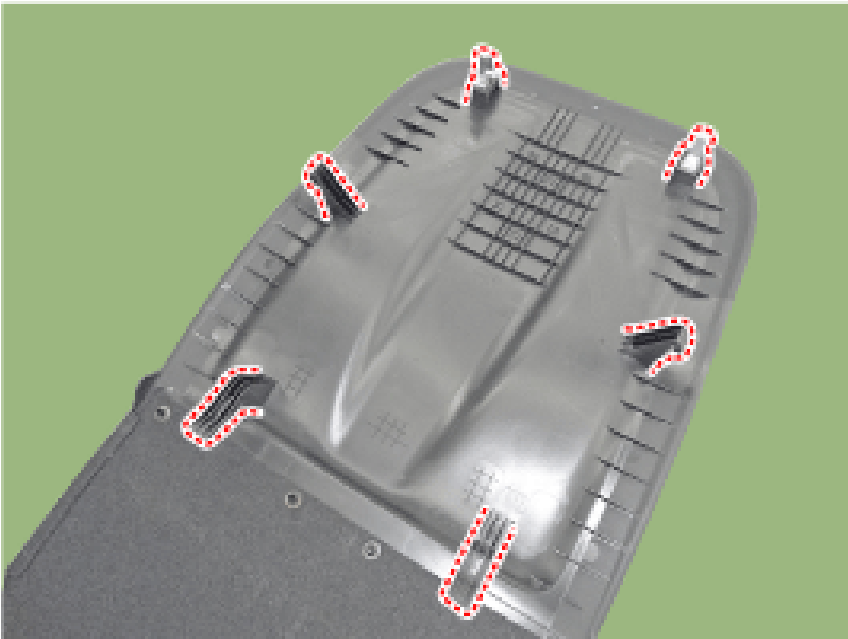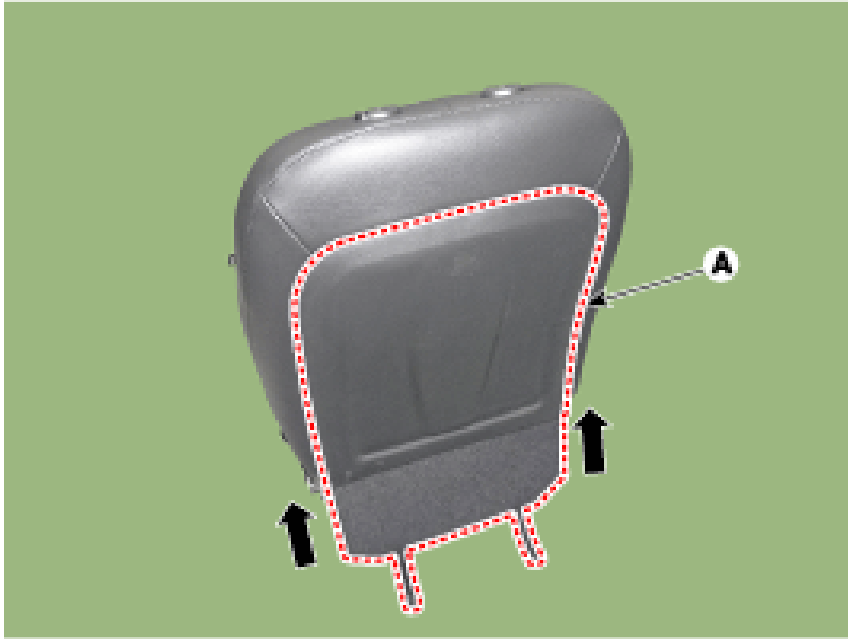

- Turn the front seat back cover inside out. Then pull out the headrest guides (A) while pinching both side of the lower part of the guides, and remove them.

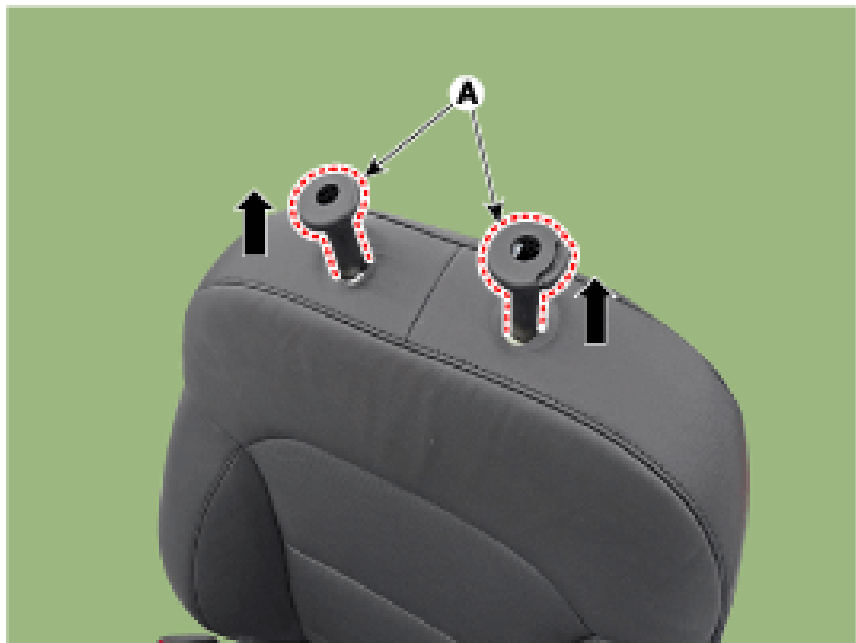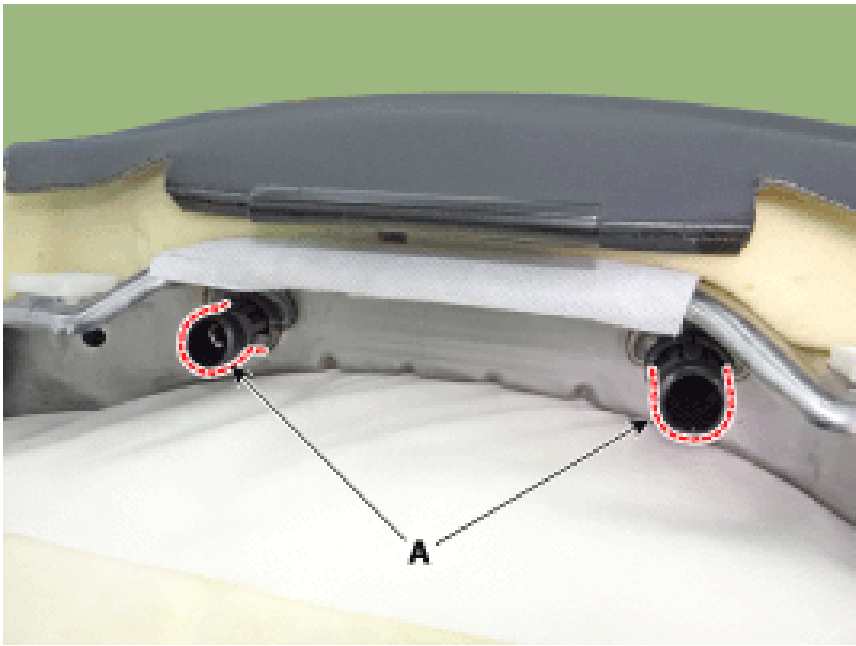


- Disconnect the front air ventilation duct (A). [Upper] [Lower]

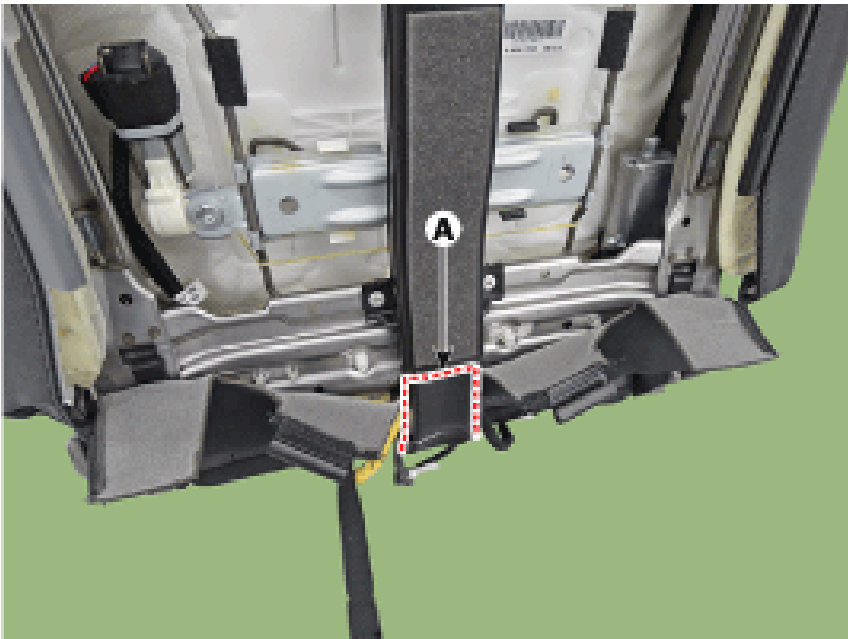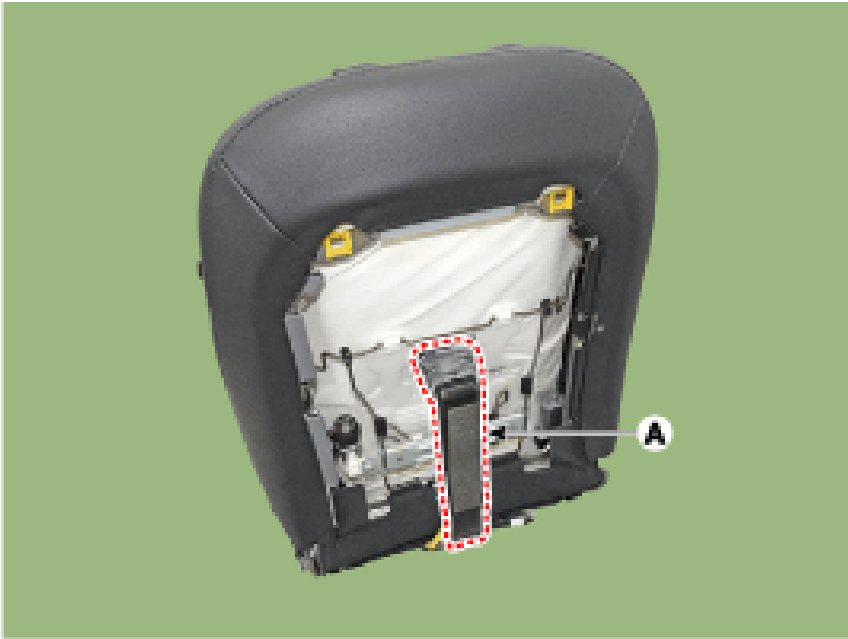


- Remove the protector (A) from the front seat back frame .



- After removing the Velcro tape (A) and hog-ring clips (B) inside the front seat back cover, remove the seat back cover (C). Be careful not to allow the sponge insert wire to separated in its place.
- Be careful not to allow the sponge insert wire to separated in its place.

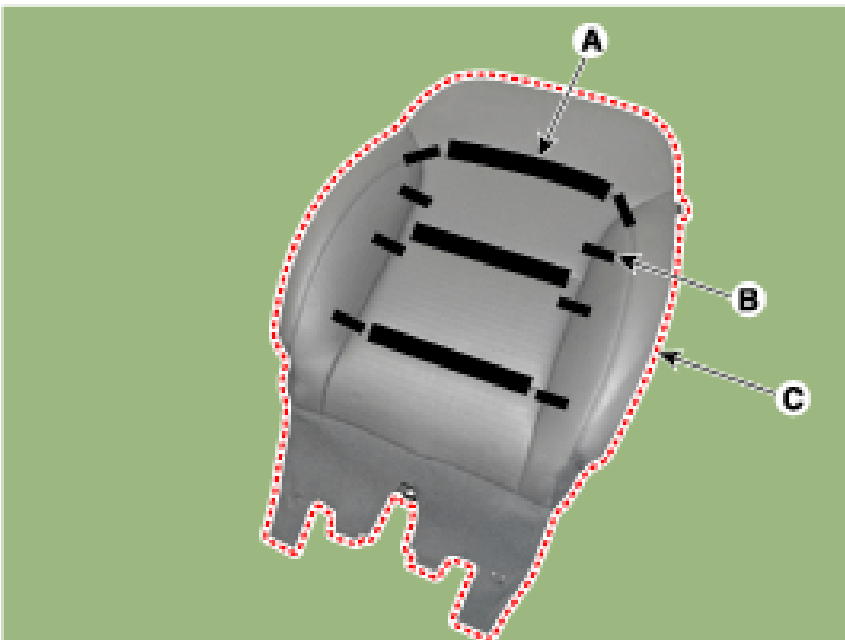

- To intall, reverse the removal procedure. Make sure that the connectors are connected completely Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).
- Make sure that the connectors are connected completely
- Replace any damaged clips (or pin-type retainers).
- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

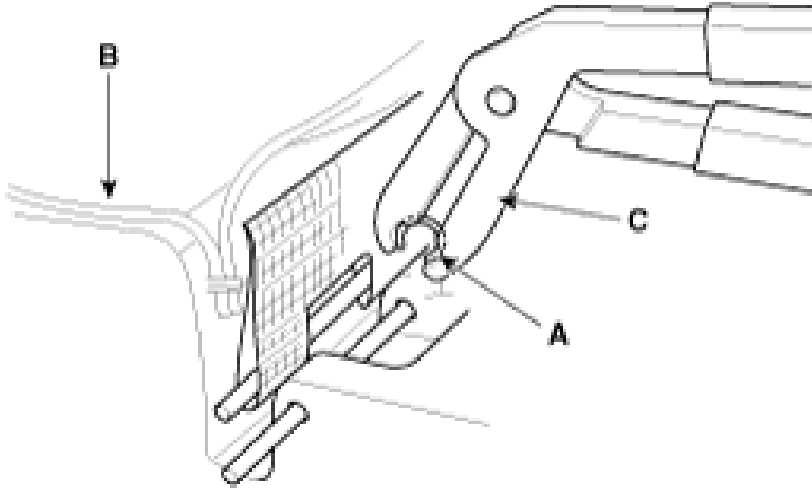

Front Seat Cushion Cover - Repair Procedures (Article 45080)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

Take care not to bend or scratch the trim and panels.



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.


- Take care not to bend or scratch the trim and panels.

- Remove the front seat assembly. (Refer to Front Seat - "Front Seat Assembly")


- Remove the front seat shield inner cover. (Refer to Front Seat - "Front Seat Inner Cover")

- Remove the front seat shield outer cover. (Refer to Front Seat - "Front Seat Outer Cover")


- Remove the front seat lower protector (A).

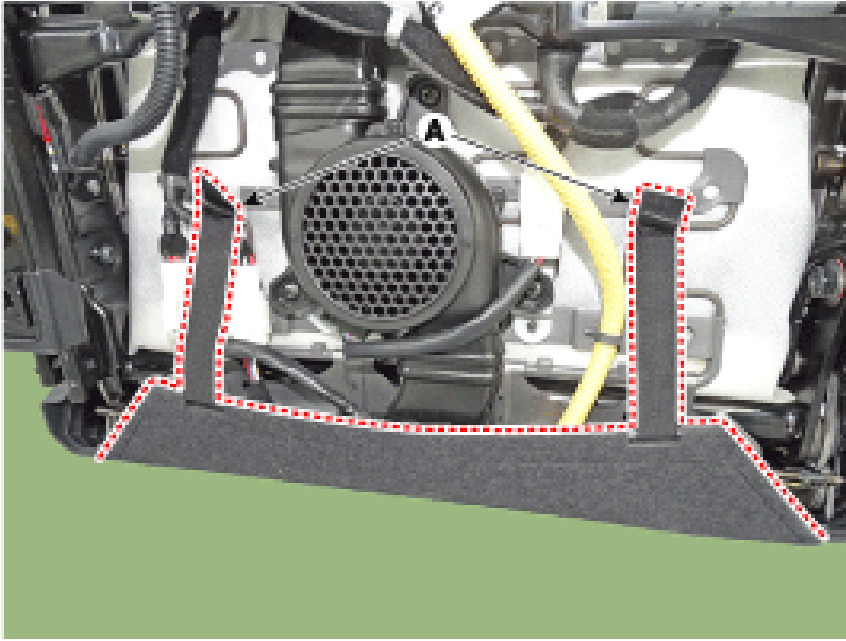


- Separate the clip and remove the air ventilation duct (A).


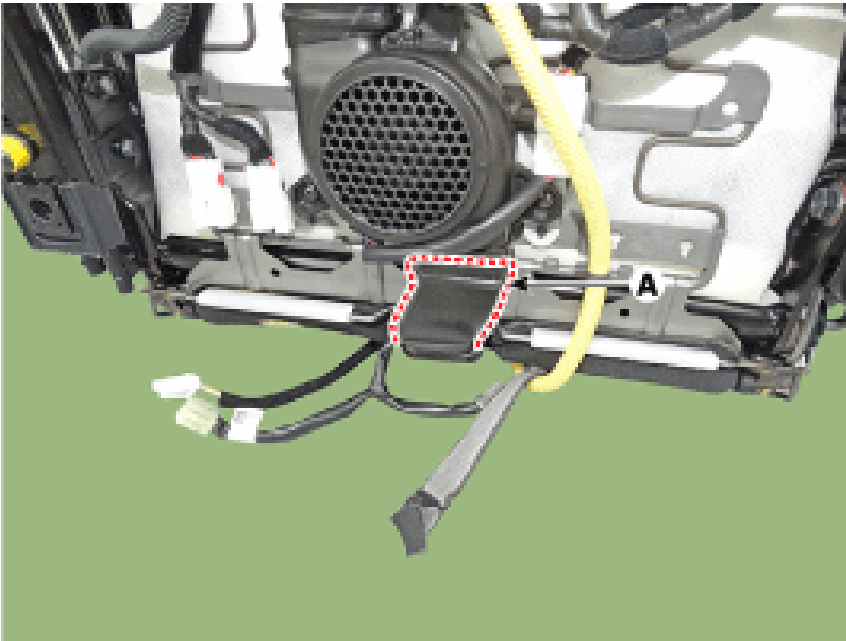


- Disconnect the front seat motor connectors (A).

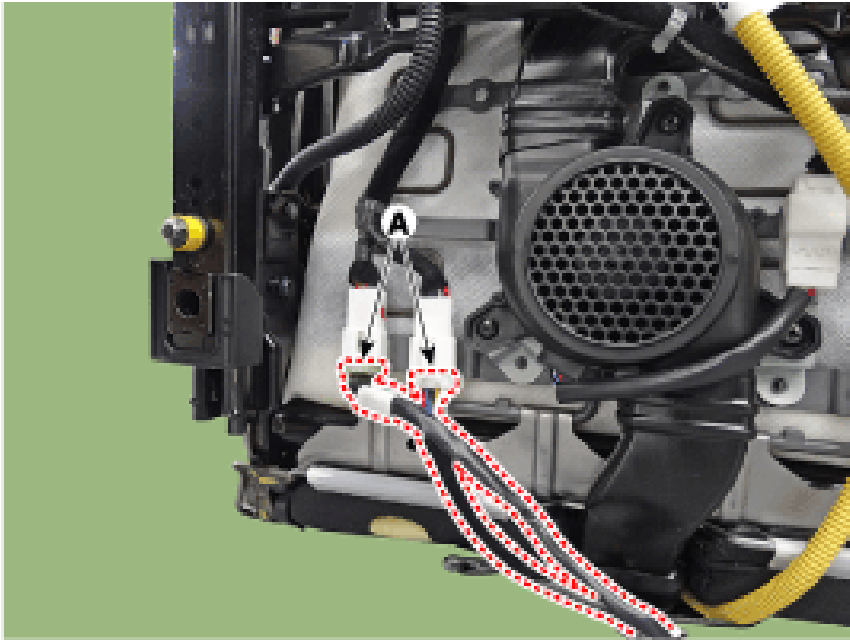

- Remove the protector (A) from the front seat cushion frame . [Center] [LH] [RH]

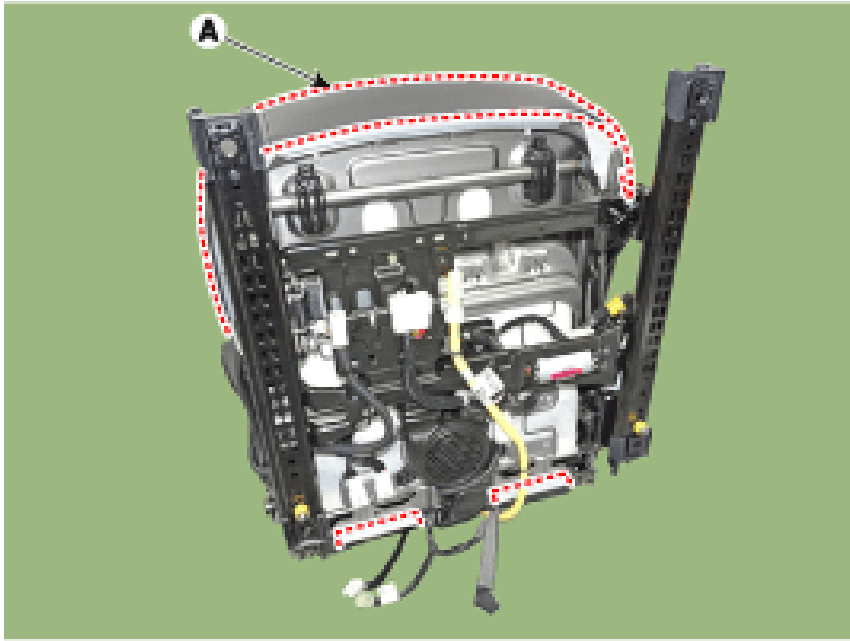


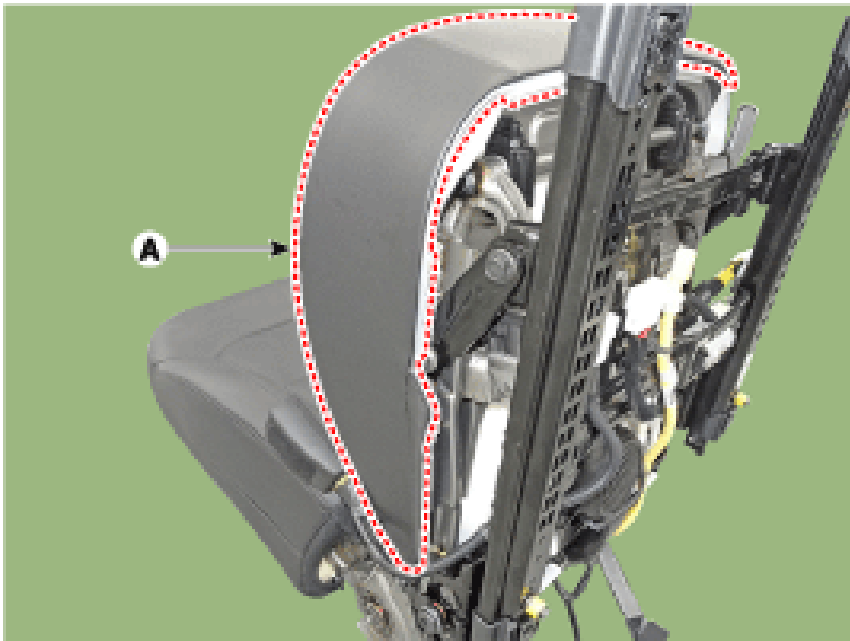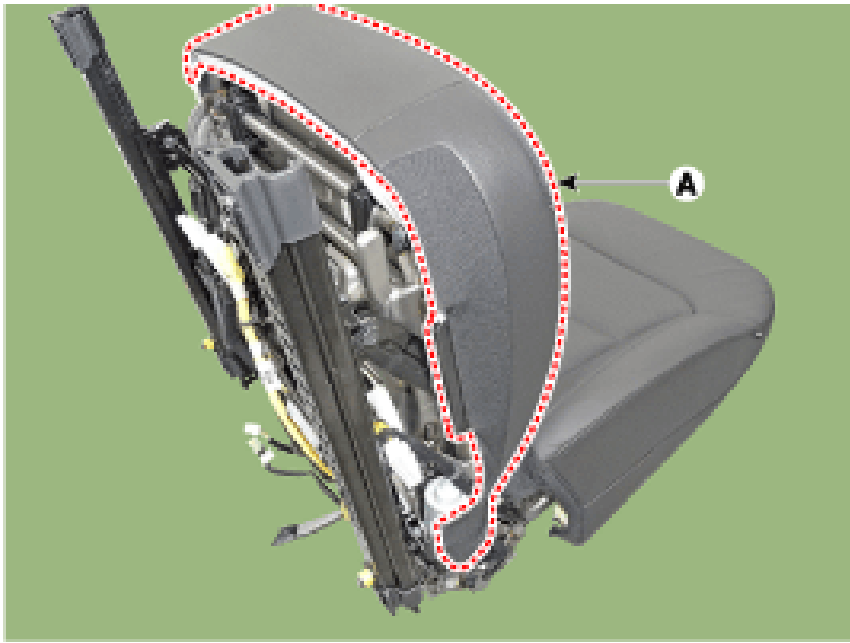

- Remove the front seat cushion cover (A) from the front seat cushion frame.



- After removing the Velcro tape (A) and hog-ring clips (B) inside the front seat cushion cover, remove the seat cushion cover (C). Be careful not to allow the sponge insert wire to separated in its place. Be careful not to allow the sponge insert wire to separated in its place.
- Be careful not to allow the sponge insert wire to separated in its place.

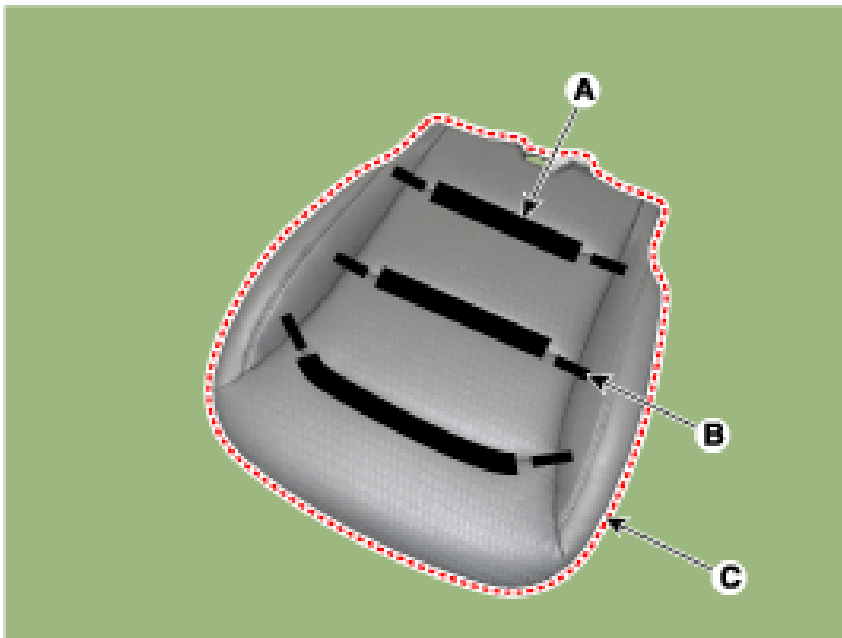


- To intall, reverse the removal procedure. Make sure that the connectors are connected completely Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).
- Make sure that the connectors are connected completely Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).



Information

- Make sure that the connectors are connected completely
- Replace any damaged clips (or pin-type retainers).
- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

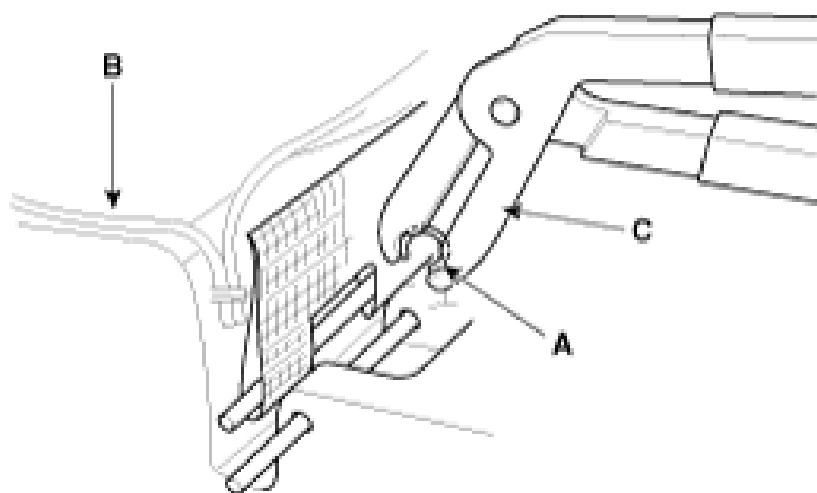

Front Seat Shield Inner Cover - Repair Procedures (Article 45076)


- Replacement
- Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.
- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface. Take care not to bend or scratch the trim and panels.

NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.
- Take care not to bend or scratch the trim and panels.
- Remove the front seat assembly. (Refer to Front Seat - "Front Seat Assembly")
- Loosen the screws and remove the front seat shield inner cover (A).

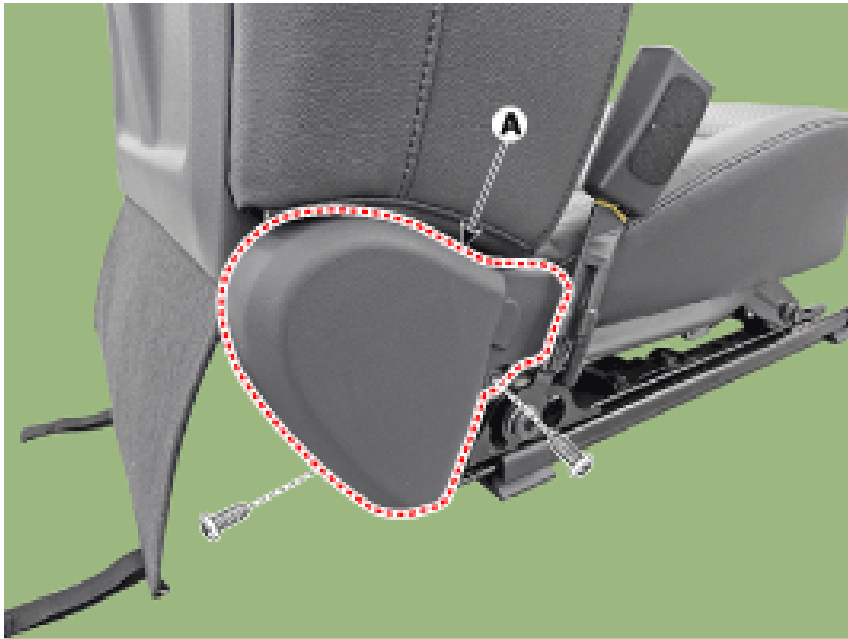

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).



Information

- Replace any damaged clips (or pin-type retainers).

Front Seat Shield Outer Cover - Repair Procedures (Article 45074)


- Replacement
Put on gloves to prevent hand injuries.

CAUTION

- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

Take care not to bend or scratch the trim and panels.

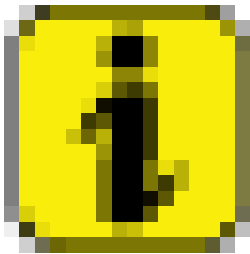


Information

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.

- Take care not to bend or scratch the trim and panels.

- Remove the front seat outer shield cover (A) by pulling forward in the direction of the arrow using screw driver or remover.

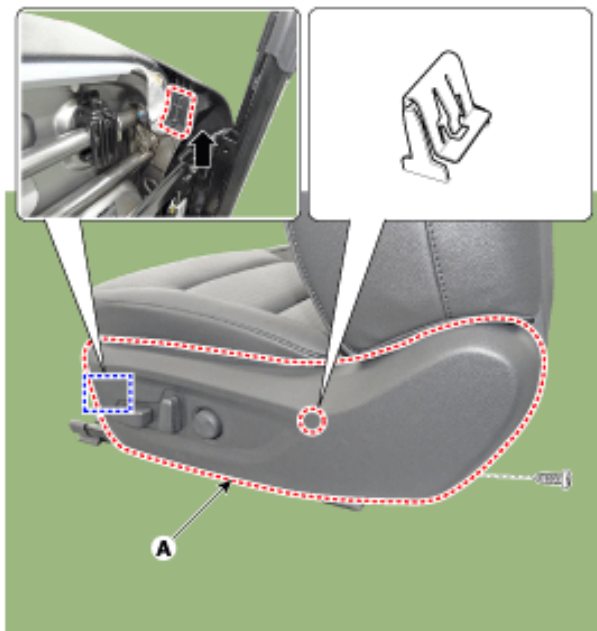

- Disconnect the front seat power switch connector (A).



- To install, reverse the removal procedure. Make sure the connector is plugged in properly. Replace any damaged clips (or pin-type retainers).
- Make sure the connector is plugged in properly. Replace any damaged clips (or pin-type retainers).
- Make sure the connector is plugged in properly.
- Replace any damaged clips (or pin-type retainers).

Rear Seat Back Cover - Repair Procedures (Article 45087)

- Replacement
- [LH]
Put on gloves to prevent hand injuries.




- Put on gloves to prevent hand injuries.
- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.




Information

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
- Take care not to bend or scratch the trim and panels.


- Remove the rear seat assembly [LH]. (Refer to Rear Seat - "Rear Seat Assembly")
- Push the lock pins, and remove the rear seat headrest (A).

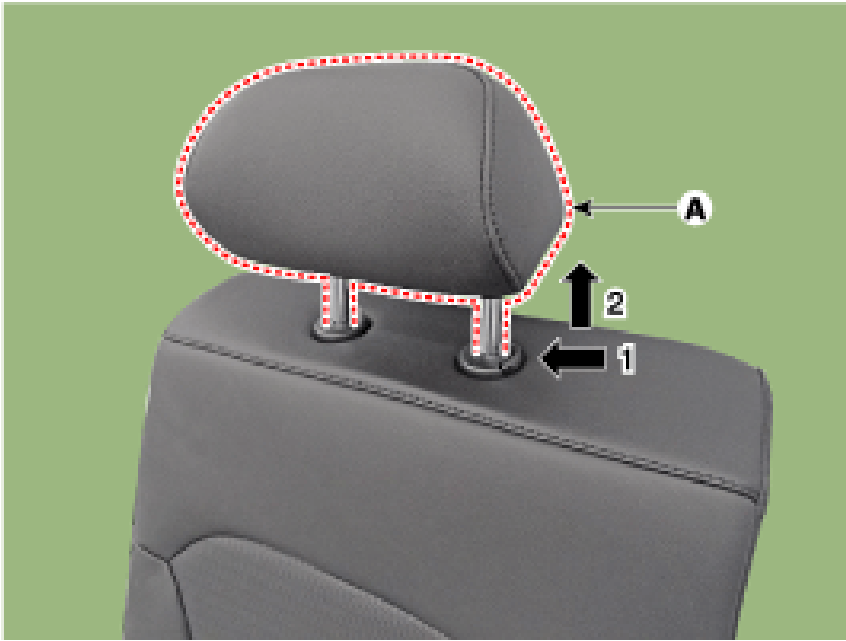


- Using a screwdriver or remover, remove the cap (A).

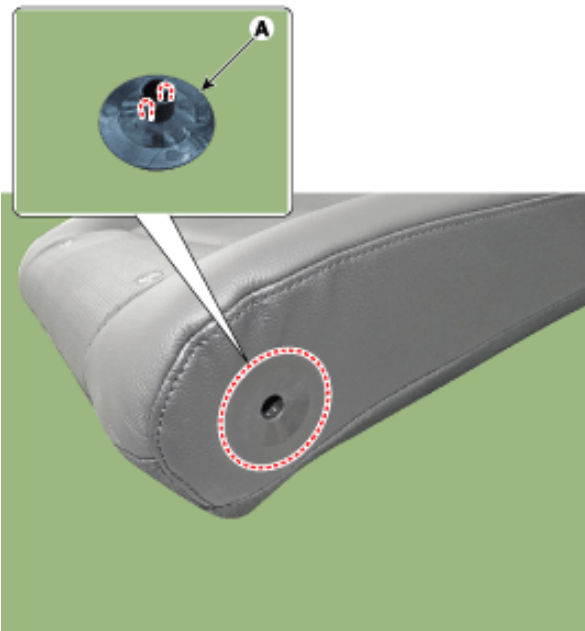


- Using a screwdriver or remover, remove the rear seat back cover (A).

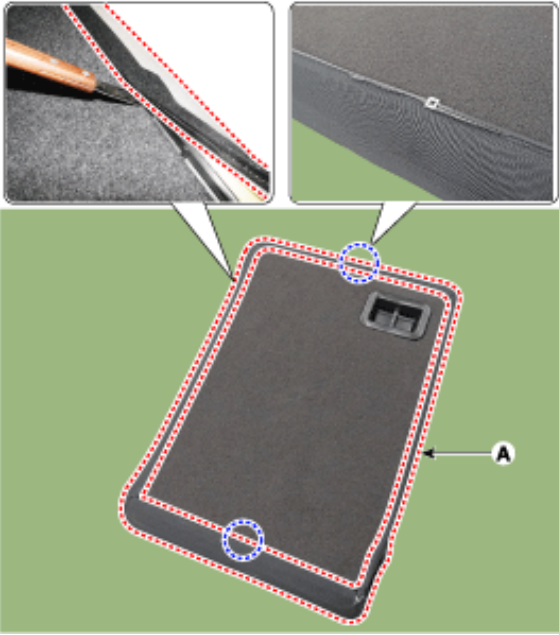


- Pull out the rear seat headrest guides (A) while pinching both sides of the lower part of the guides, and remove them.

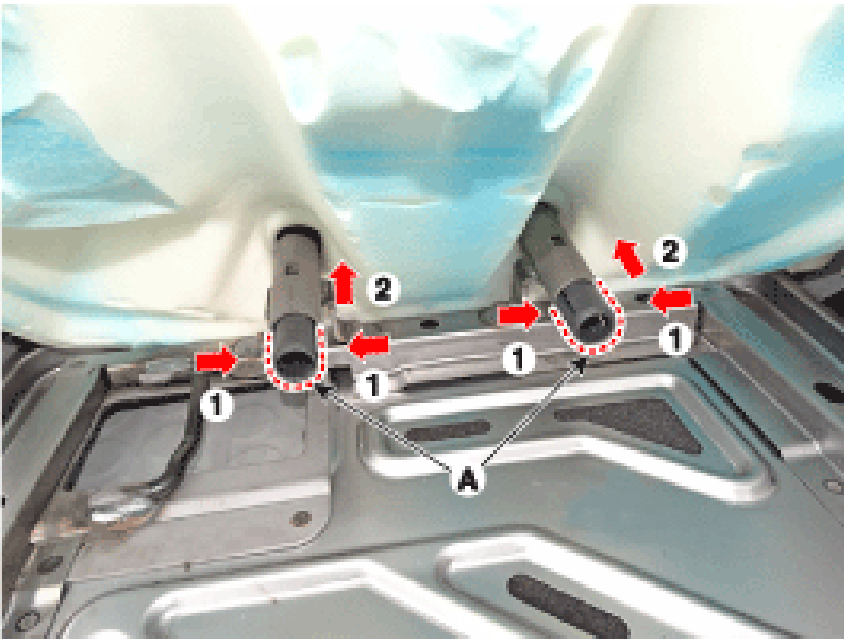

- Remove the rear seat back cover assembly (A) from the rear seat back frame .

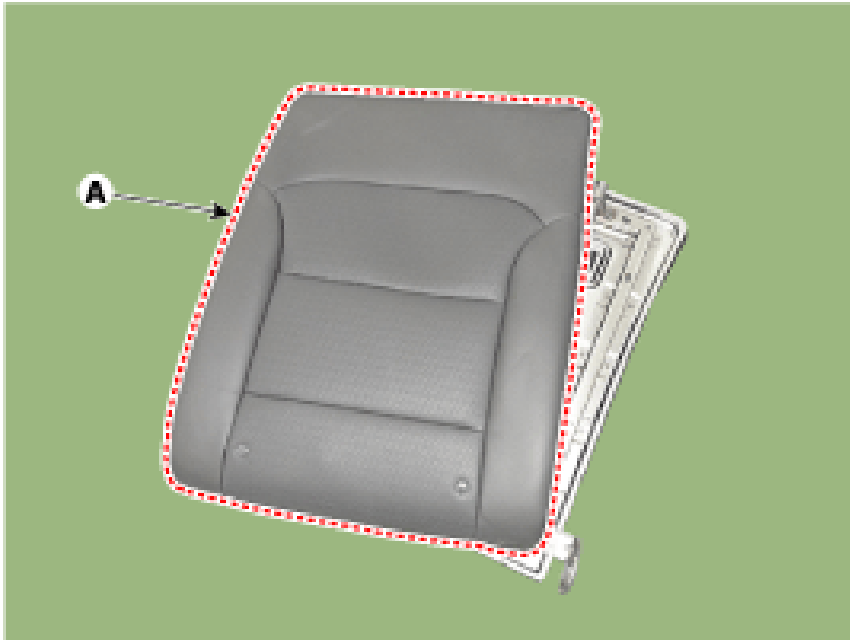

- After removing the Velcro tape (A) and hog-ring clips (B) inside the rear seat cushion cover , remove the seat cushion cover (C).

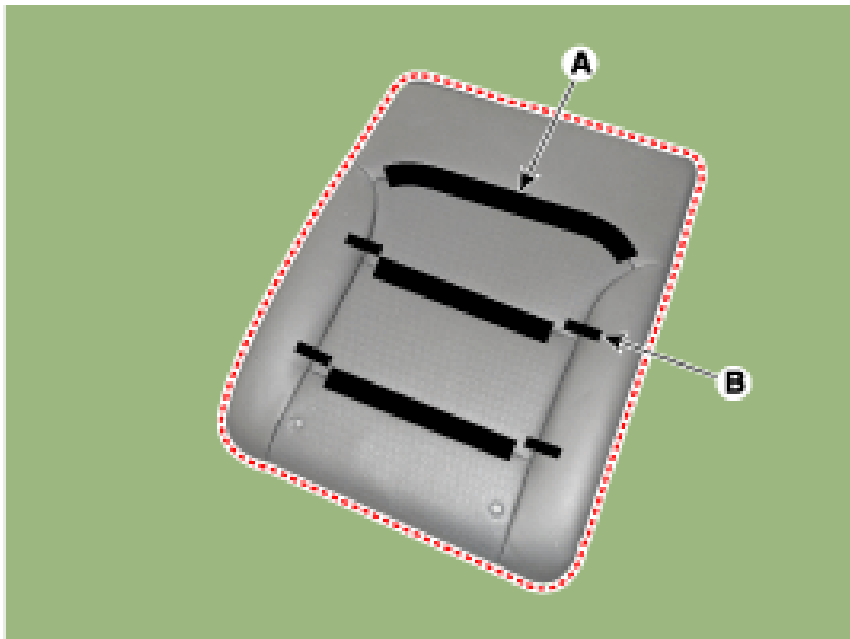




- To install, reverse the removal procedure. Make sure that the connectors are connected completely. Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

Make sure that the connectors are connected completely. Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).



- Make sure that the connectors are connected completely
- Replace any damaged clips (or pin-type retainers).
- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

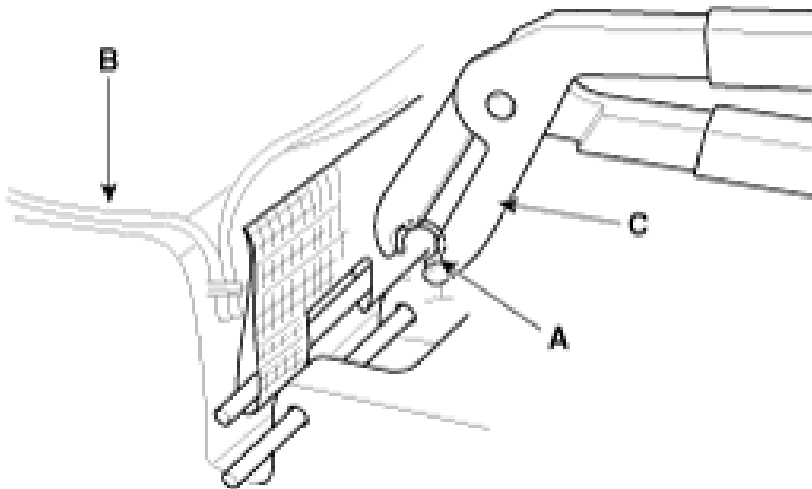


[RH]


NOTICE



- Remove the rear seat assembly [RH]. (Refer to Rear Seat - "Rear Seat Assembly")
- Remove the rear back armrest . (Refer to Rear Seat - "Rear Back Armrest")

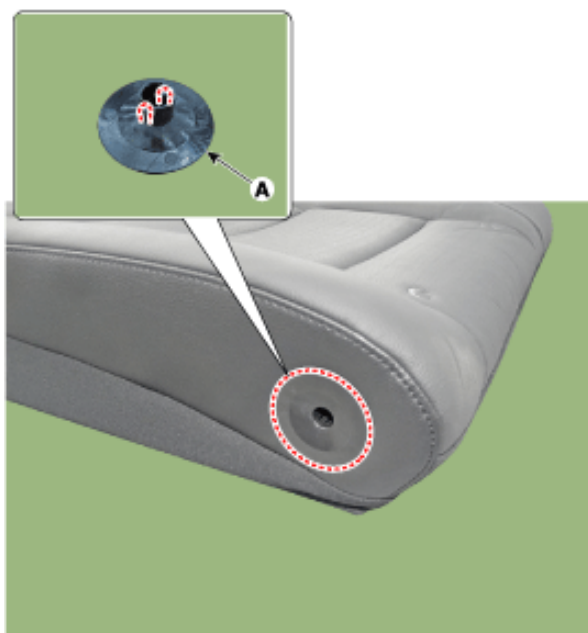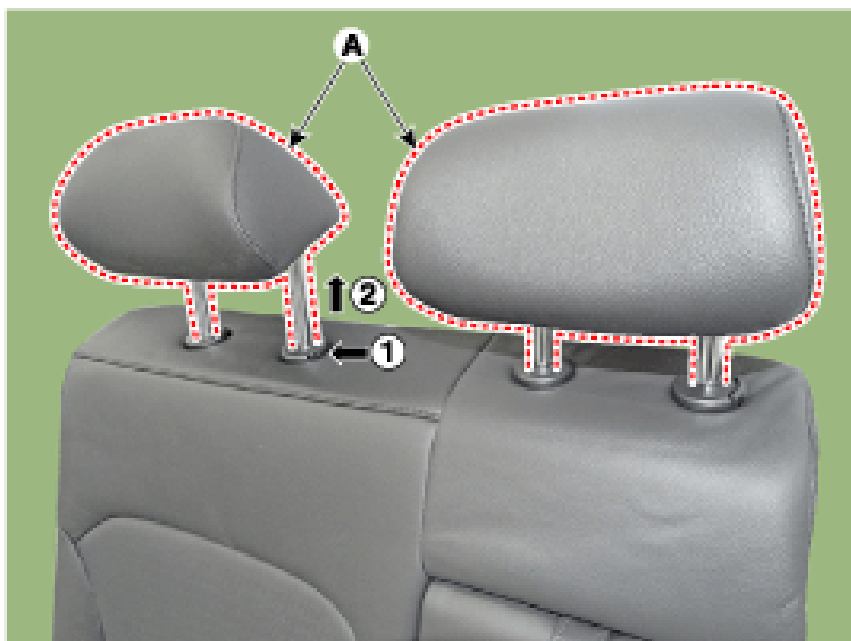

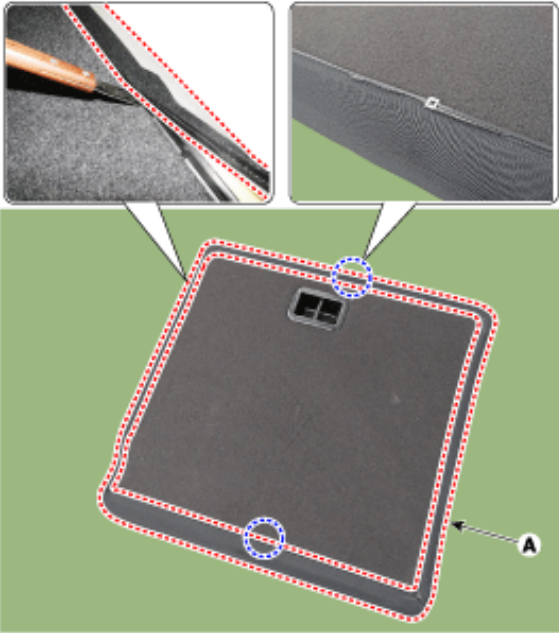


- Remove the rear seat armrest board (A).

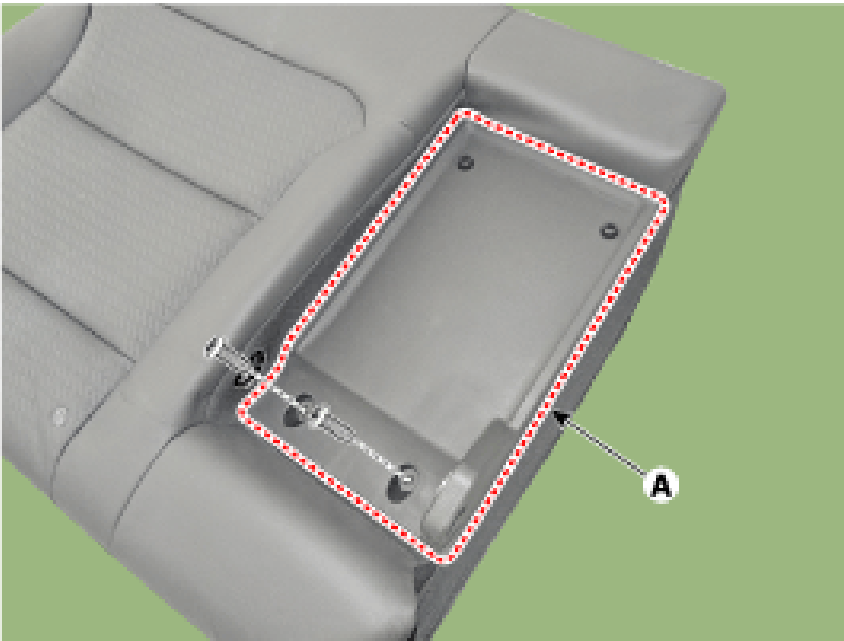

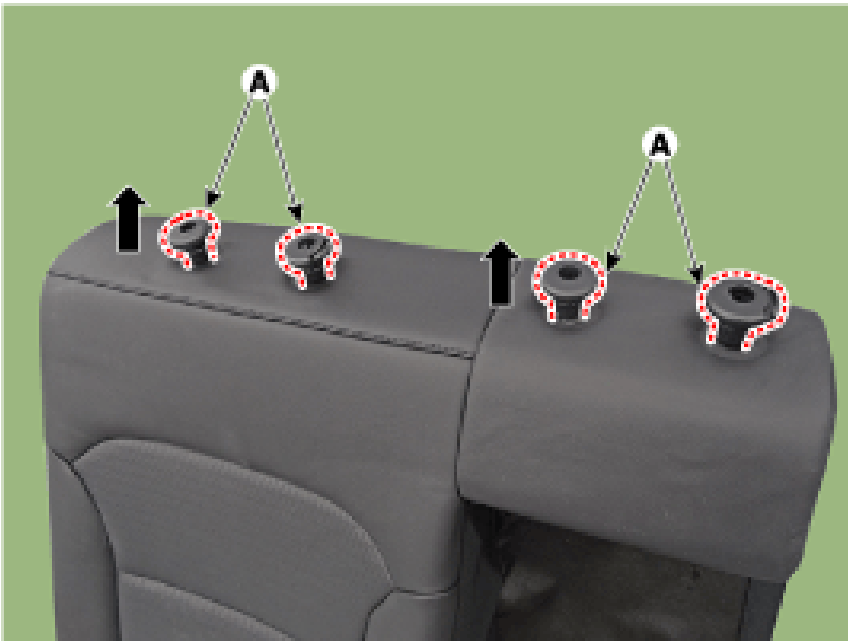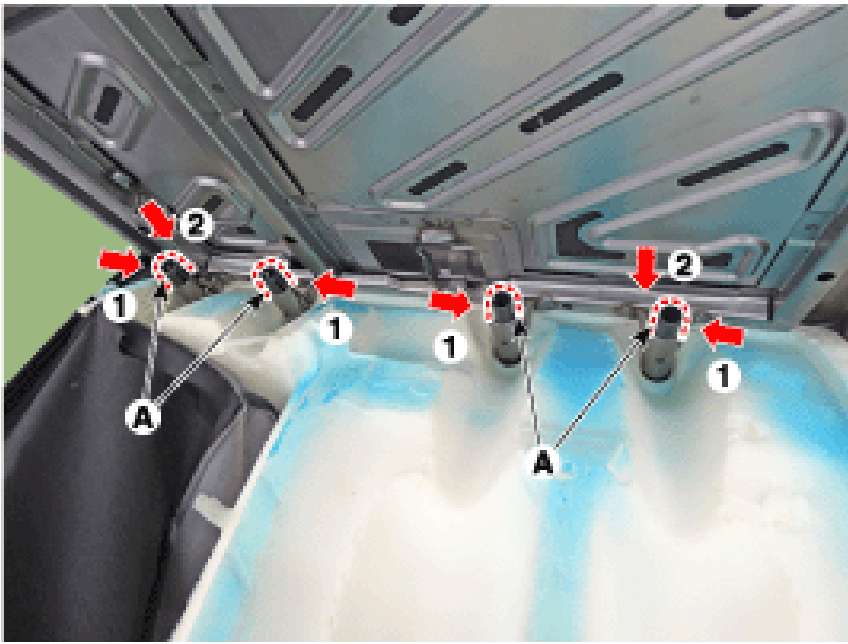



- After removing the Velcro tape (A) and hog-ring clips (B) inside the rear seat cushion cover, remove the seat cushion cover (C).

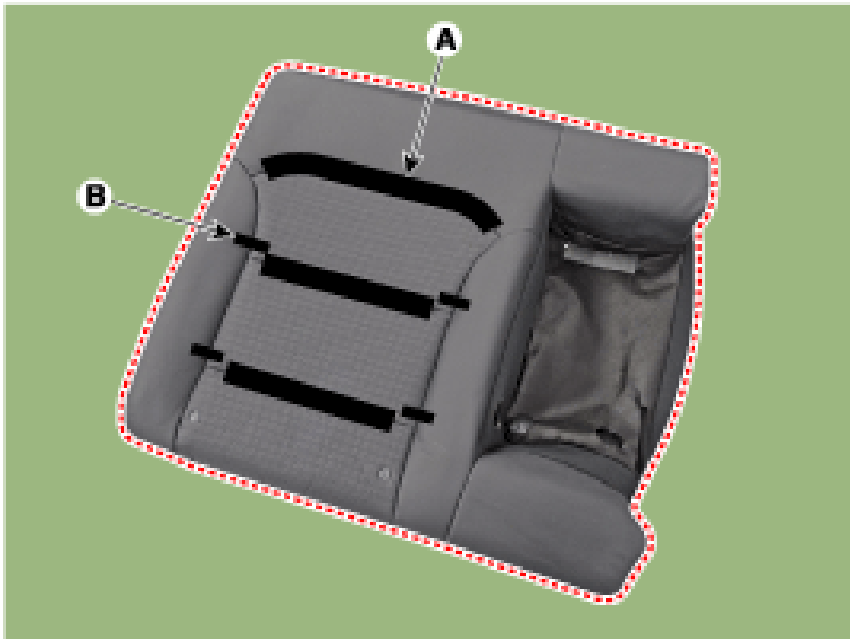



- To install, reverse the removal procedure. Make sure that the connectors are connected completely. Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

Make sure that the connectors are connected completely. Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).

Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

- Make sure that the connectors are connected completely.

Rear Seat Cushion Cover - Repair Procedures (Article 45089)

- Replacement

Put on gloves to prevent hand injuries.





- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
- Take care not to bend or scratch the trim and panels.
- Remove the seat cushion assembly. (Refer to Rear Seat - "Rear Seat Assembly")
- After removing the Velcro tape (A) and hog-ring clips (B) inside the rear seat cushion cover , remove the seat cushion cover (C). [Front side] [Rear side]

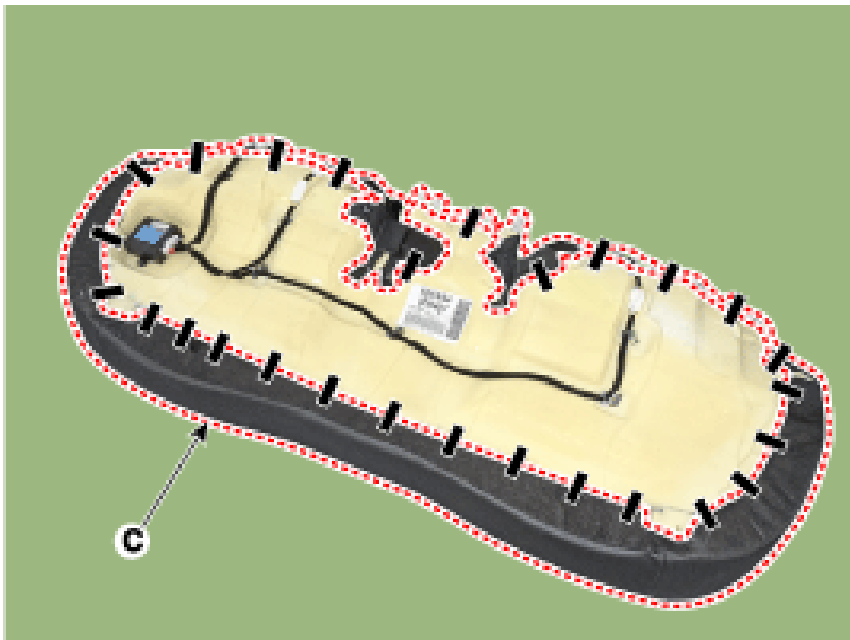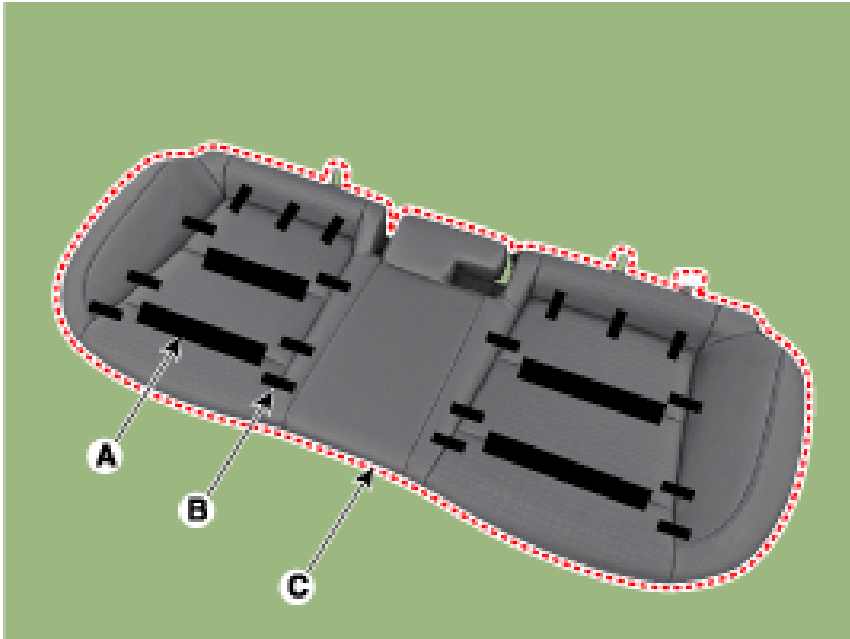


- To install, reverse the removal procedure. Make sure that the connectors are connected completely. Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

Make sure that the connectors are connected completely. Replace any damaged clips (or pin-type retainers). To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A). Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

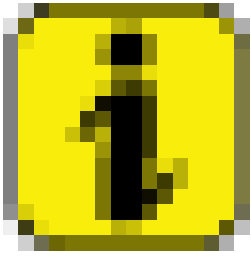

Information

- Make sure that the connectors are connected completely.
- Replace any damaged clips (or pin-type retainers).
- To prevent wrinkles, make sure that the cover (B) is stretched evenly before connecting the hog-ring clips (A).
- Replace the hog-ring clips with new ones using special tool (C) (09880-4F000).

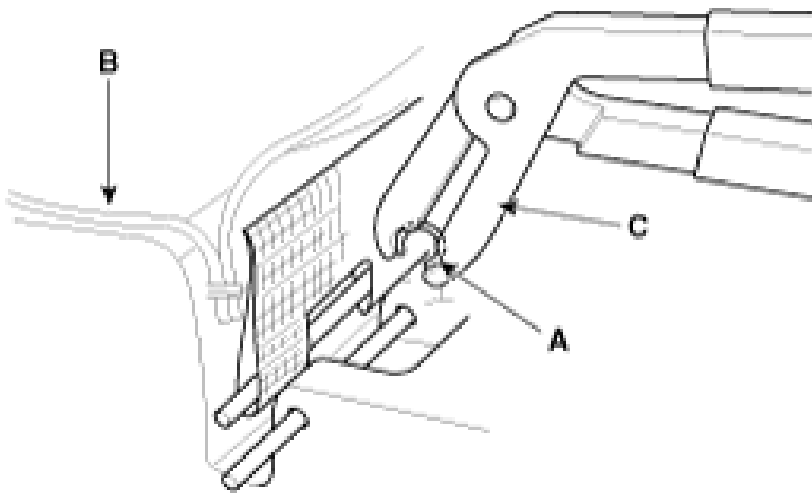

All New Technical Service Bulletins (itype_432)

Tsbs

- SEAT COVER INSPECTION AND SERVICE GUIDE (23-BD-004H, 2025/02/26)

All Technical Service Bulletins (itype_100)

Tsbs

- SEAT COVER INSPECTION AND SERVICE GUIDE (23-BD-004H, 2025/02/26)

OEM Policies and Procedures (itype_120)

Tsbs

- SEAT COVER INSPECTION AND SERVICE GUIDE (23-BD-004H, 2025/02/26)