

Component Procedures: Exterior Moulding / Trim

Table of Contents

1. Body Side Moldings - Repair Procedures (Article 44983)
2. All Technical Service Bulletins (itype_100)

Component Procedures: Exterior Moulding / Trim

Body Side Moldings - Repair Procedures (Article 44983)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.


- Using a screwdriver or remover, remove the roof side molding (A). Always replace the roof side molding to a new one.

Always replace the roof side molding to a new one.



Information

- Always replace the roof side molding to a new one.

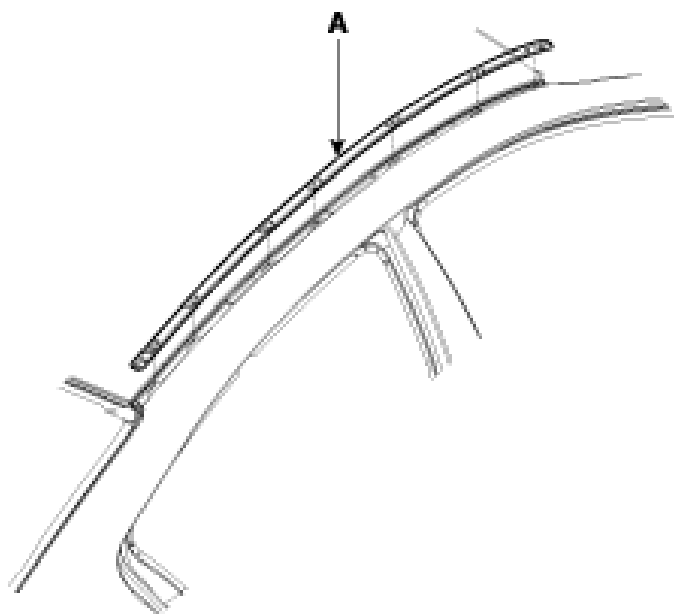

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
- Replace any damaged clips (or pin-type retainers).
- Replace any damaged clips (or pin-type retainers).

All Technical Service Bulletins (itype_100)

Tsbs

- DOOR TRIM PANEL INSPECTION AND SERVICE GUIDE (23-BD-005H, 2023/03/13)
- ROOF CROSSBAR INSTALLATION (23-BD-010H, 2023/06/05)