

Component Procedures: Passenger Assist Handle


Table of Contents

1. Assist Handle - Components and Components Location (Article 45030)
2. Assist Handle - Repair Procedures (Article 45031)

Component Procedures: Passenger Assist Handle

Assist Handle - Components and Components Location (Article 45030)

- Component Location

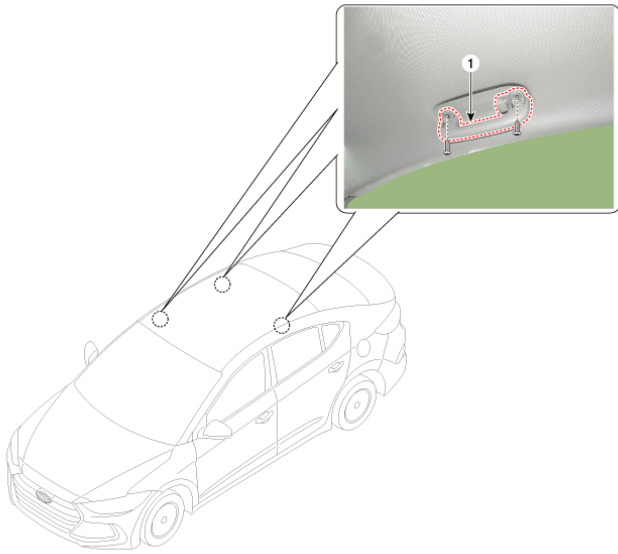

1. Assist handle

Assist Handle - Repair Procedures (Article 45031)

- Replacement

Put on gloves to prevent hand injuries.




- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.



Information

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
- Take care not to bend or scratch the trim and panels.
- After lifting up the assist handle caps and loosening the mounting screws, remove the assist handle (A).

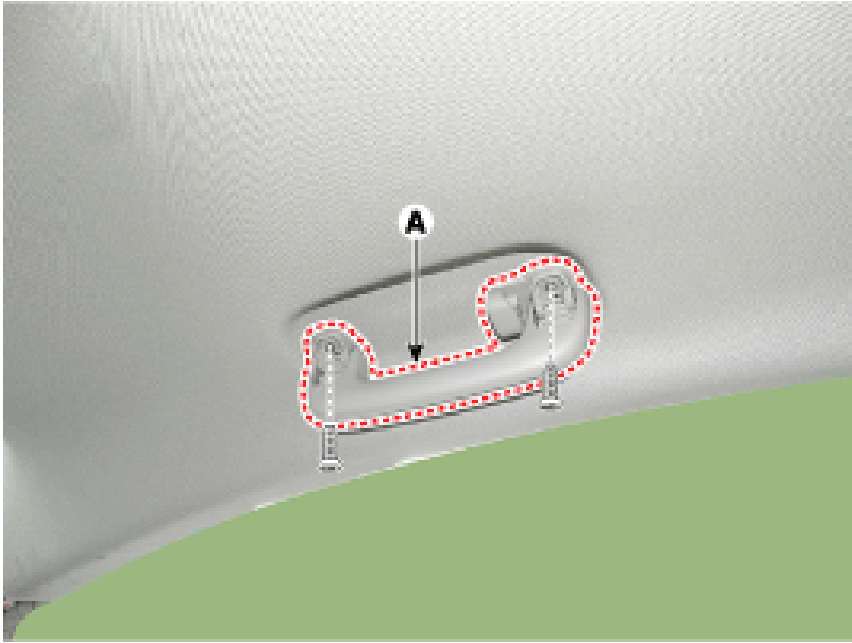

- To intall, reverse the removal procedure.