

Component Procedures: Console Lamp


Table of Contents

1. Overhead Console Lamp - Repair Procedures (Article 44652)

Component Procedures: Console Lamp


Overhead Console Lamp - Repair Procedures (Article 44652)

- Inspection
- Remove the overhead console lamp assembly then check for continuity between terminals. If the continuity is not as specified, replace the map lamp switch.

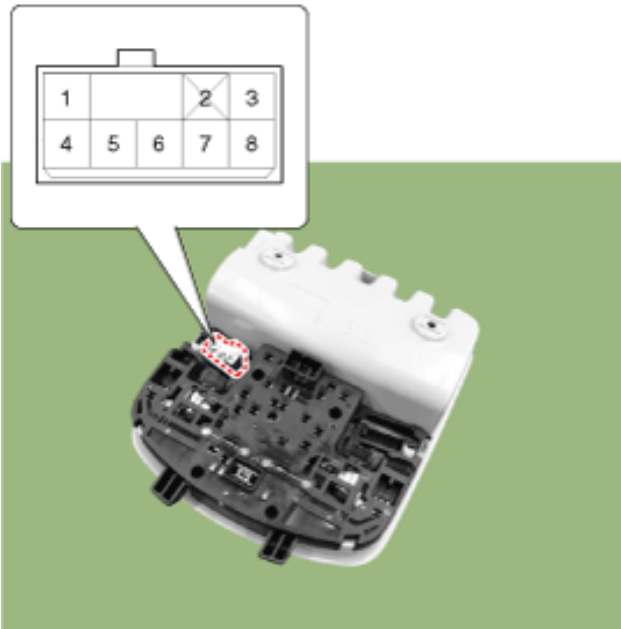

Item Position Terminal	Map lamp switch			
	Left		Right	
	ON	OFF	ON	OFF
1	○ ⊕ ○		○ ⊕ ○	
2	○ ⊕ ○		○ ⊕ ○	


- Removal
- Disconnect the negative (-) battery terminal.
- Remove the mounting screws (2EA). And then remove the overhead console (A).

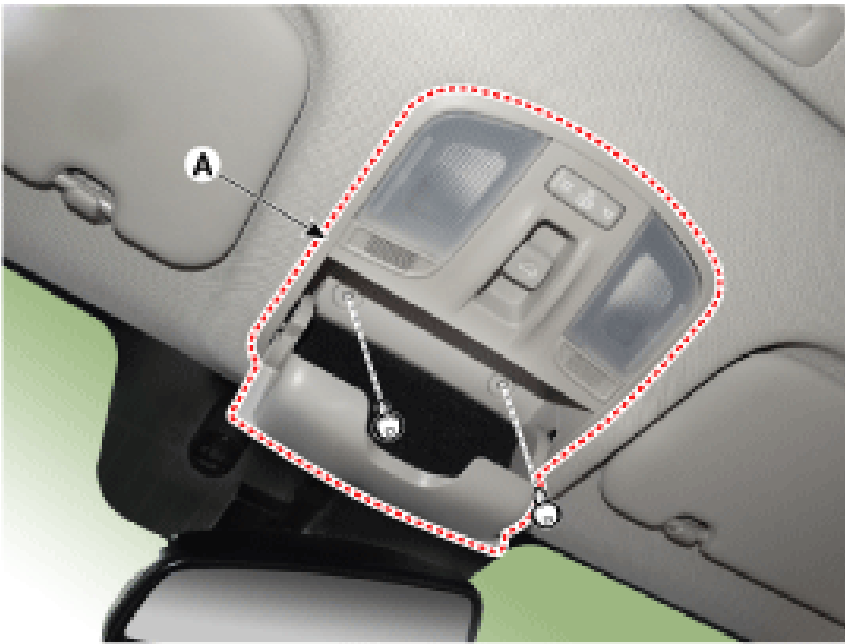

- Remove the overhead console after disconnect the connector (A).



- Remove the overhead console lamp (B) by turning the socket.

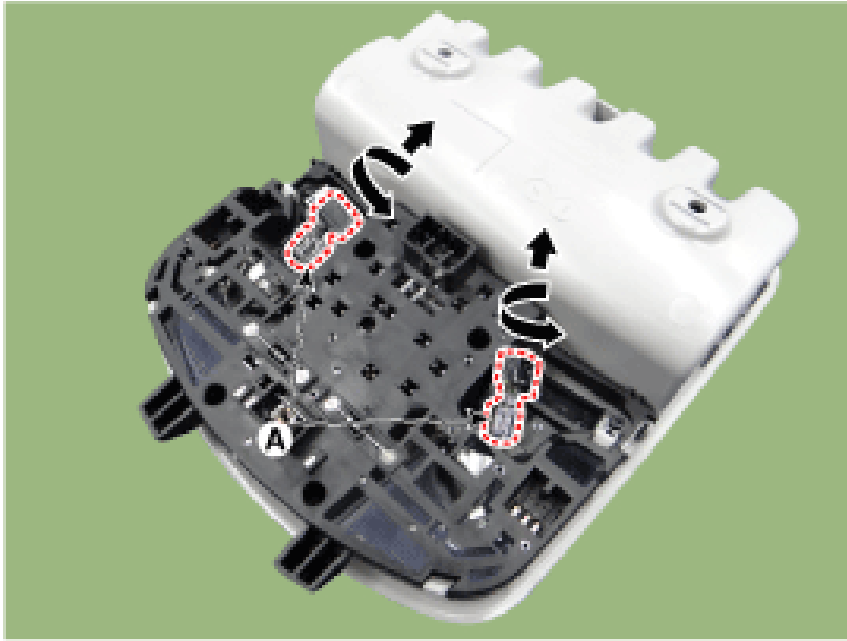

- Installation
- Install the overhead console lamp after connecting the connector.
- Install the lens after tightening 2 screws.