

Component Procedures: Sensors and Switches - HVAC

Table of Contents

1. Parts and Labor (itype_189)

Component Procedures: Sensors and Switches - HVAC

Parts and Labor (itype_189)

Parts

Qualifier	Part #	Name	Price	Note
Automatic Temperature Contro?	969853X000	Ambient Temp Sensor	67.87	
Automatic Temperature Contro?	972533XAH0	With Photo	66.89	
Automatic Temperature Contro?	972533X200	Without Photo	41.29	

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Automatic Temperature Controls > Ambient Temp?	B	1.6	0.0
Remove & Replace	Automatic Temperature Controls > Sunload Sens?	B	0.3	0.0