

Component Procedures: Auxiliary Input / Output Jack



Table of Contents

1. AUX Jack - Description and Operation (AVN System) (Article 44765)
2. Multimedia Jack - Description and Operation (Audio) (Article 44746)
3. AUX Jack - Schematic Diagrams (AVN System) (Article 44763)
4. Multimedia Jack - Schematic Diagrams (Audio) (Article 44744)
5. AUX (Auxiliary) Jack - Repair Procedures (AVN System) (Article 44766)
6. Multimedia Jack - Repair Procedures (Audio) (Article 44747)
7. All New Technical Service Bulletins (itype_432)
8. All Technical Service Bulletins (itype_100)
9. OEM Policies and Procedures (itype_120)

Component Procedures: Auxiliary Input / Output Jack



AUX Jack - Description and Operation (AVN System) (Article 44765)

  - Description

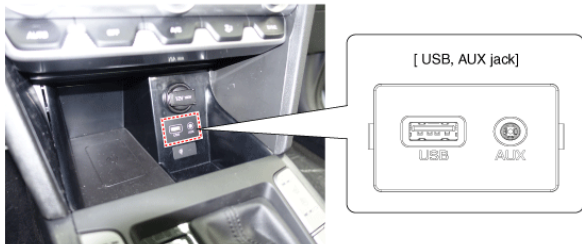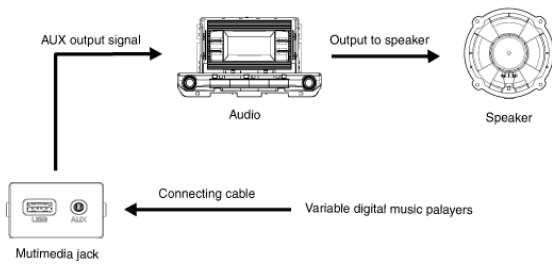


Multimedia Jack - Description and Operation (Audio) (Article 44746)

- Description

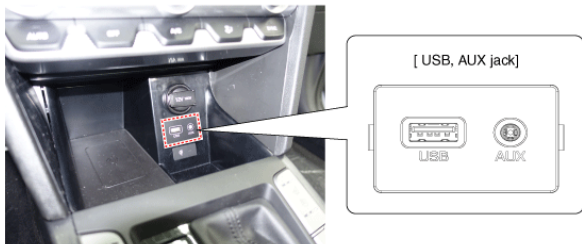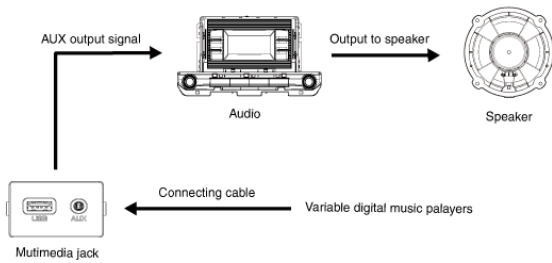

AUX Jack - Schematic Diagrams (AVN System) (Article 44763)

- Circuit Diagram

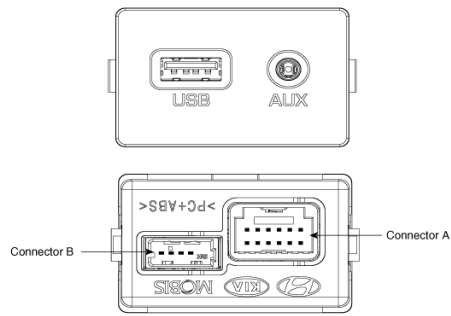


Connector A		No	Description	No	Description
	1	AUX Input (L)	7	AUX AVN GND	
	2	AUX Input (R)	8	-	
	3	AUX Detect	9	-	
	4	Illumination (+)	10	-	
	5	-	11	Ground	
	6	Illumination (-)	12	-	

Connector B		No	Description
	1	Power	
	2	USB D (LOW)	
	3	USB D (HI)	
	4	Ground	

Multimedia Jack - Schematic Diagrams (Audio) (Article 44744)

- Circuit Diagram

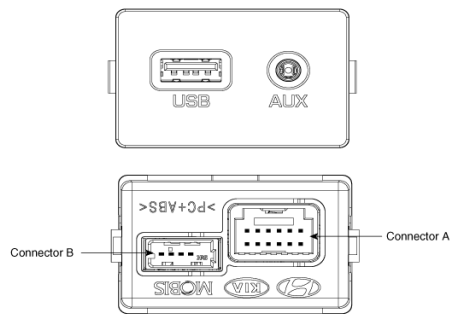


Connector A		No	Description	No	Description
	1	AUX Input (L)	7	AUX AVN GND	
	2	AUX Input (R)	8	-	
	3	AUX Detect	9	-	
	4	Illumination (+)	10	-	
	5	-	11	Ground	
	6	Illumination (-)	12	-	

Connector B		No	Description
	1	Power	
	2	USB D (LOW)	
	3	USB D (HI)	
	4	Ground	

AUX (Auxiliary) Jack - Repair Procedures (AVN System) (Article 44766)


- Removal
- Disconnect the battery (-) terminals.
- Remove the floor console assembly. (Refer to Body - "Floor Console Assembly")
- Remove the multimedia jack (A) from the console under cover after releasing the fixed hooks (B).

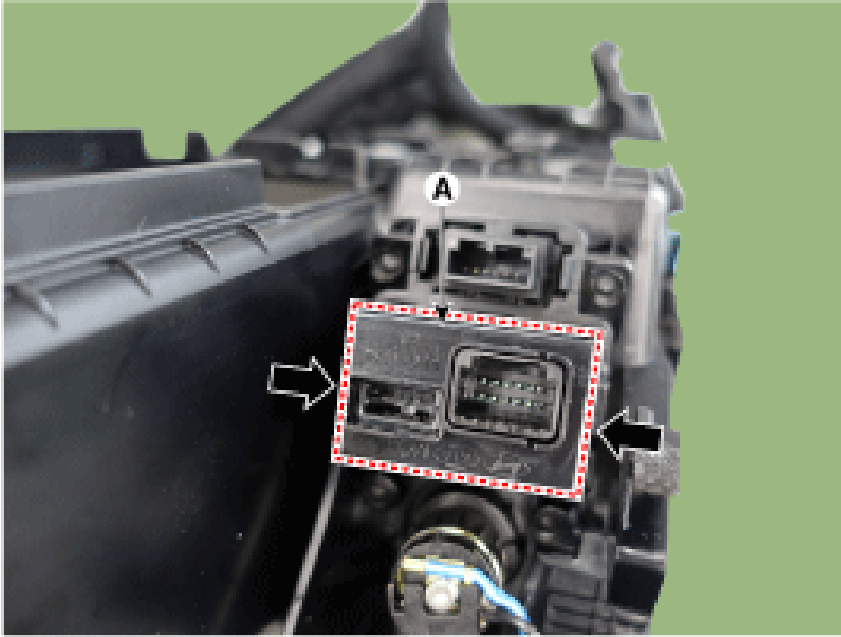

- Installation
- Connect the multimedia jack connector.
- Install the multimedia jack.
- Install the floor console assembly.

Multimedia Jack - Repair Procedures (Audio) (Article 44747)

- Removal
- Disconnect the battery (-) terminals.
- Remove the floor console assembly. (Refer to Body - "Floor Console Assembly")
- Remove the multimedia jack (A) from the console under cover after releasing the fixed hooks (B).

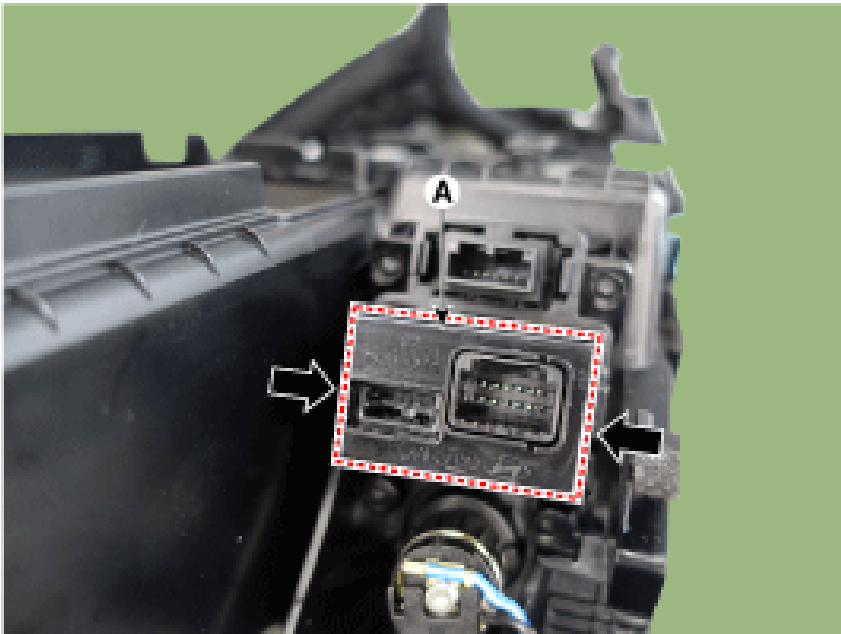

- Installation
- Connect the multimedia jack connector.
- Install the multimedia jack.
- Install the floor console assembly.

All New Technical Service Bulletins (itype_432)

Tsbs

- SERVICE GUIDE FOR USB MULTI-TERMINAL DIAGNOSIS (24-BE-006H, 2024/06/13)

All Technical Service Bulletins (itype_100)

Tsbs

- SERVICE GUIDE FOR USB MULTI-TERMINAL DIAGNOSIS (24-BE-006H, 2024/06/13)
- USB MULTI-BOX DIAGNOSTIC GUIDELINES (20-BE-001H, 2020/01/15)

OEM Policies and Procedures (itype_120)

Tsbs

- USB MULTI-BOX DIAGNOSTIC GUIDELINES (20-BE-001H, 2020/01/15)