

Component Procedures: Accelerator Pedal

Table of Contents

1. Accelerator Pedal - Repair Procedures (Article 44227)


Component Procedures: Accelerator Pedal

Accelerator Pedal - Repair Procedures (Article 44227)

- Removal
- Turn the ignition switch OFF and disconnect the negative (-) battery cable.
- Disconnect the accelerator position sensor connector (A).



- Remove the installation nuts (A) and then remove the accelerator pedal module .

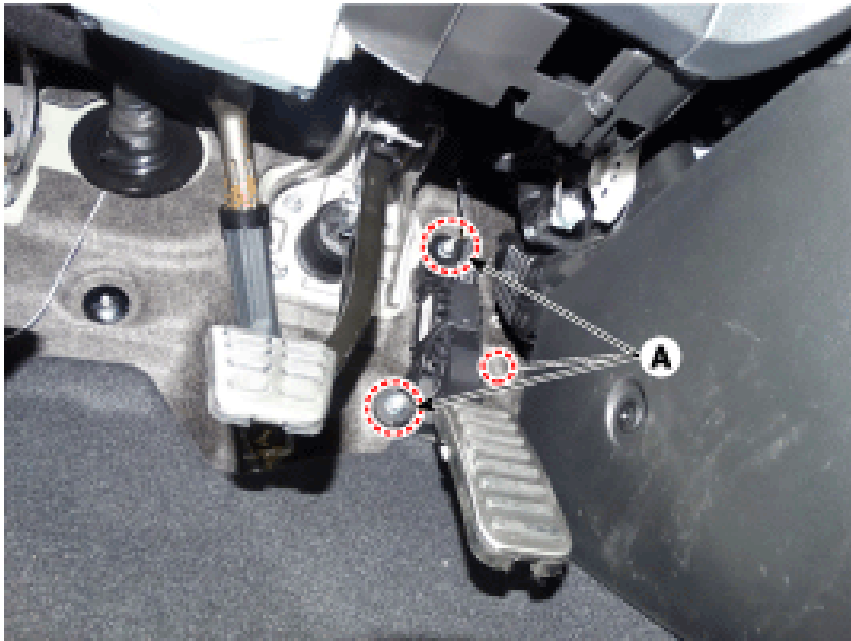

- Installation
- Installation is reverse of removal. Accelerator pedal module installation nut : 12.8 - 15.7 N.m (1.3 - 1.6 kgf.m, 9.4 - 11.6 lb-ft)