

Component Procedures: Power Seat Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Power Seat Control Switch - Schematic Diagrams (Article 44555)
3. Power Seat Control Switch - Repair Procedures (Article 44556)

Component Procedures: Power Seat Switch

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Power Seats > Switch	88540F21004X	Left	224.31	Order By Color.
Power Seats > Switch	NOT LISTED	Right	0.00	Order By Color.
Power Seats > Switch > Left	88540F21104X	With Memory	231.13	Order By Color.
Power Seats > Switch > Left	88540F21004X	Without Memory	224.31	Order By Color.

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Power Seats > Adjuster Switch, R&R > One Side	B	0.3	0.0
Remove & Replace	Power Seats > Adjuster Switch, R&R > Both Sid?	B	0.4	0.0

Power Seat Control Switch - Schematic Diagrams (Article 44555)

- Circuit Diagram

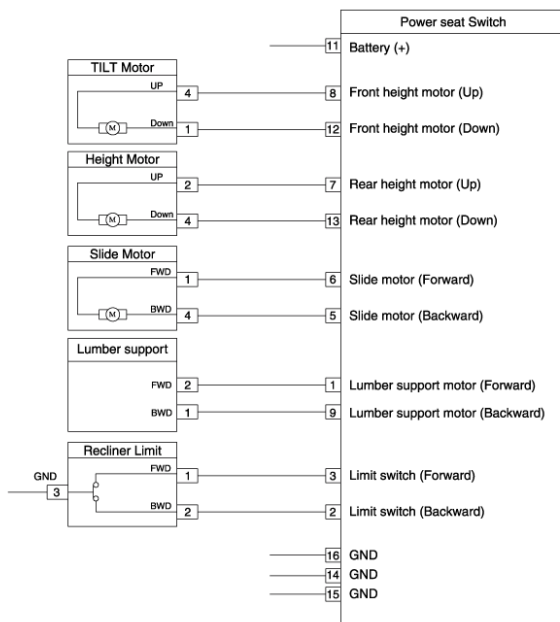


Power Seat Control Switch - Repair Procedures (Article 44556)

- Inspection

Seat Control Switch

- With the power seat switch in each position, make sure that continuity exists between the terminals below. If continuity is not as specified, replace the power seat switch . [Power Seat Control Switch]

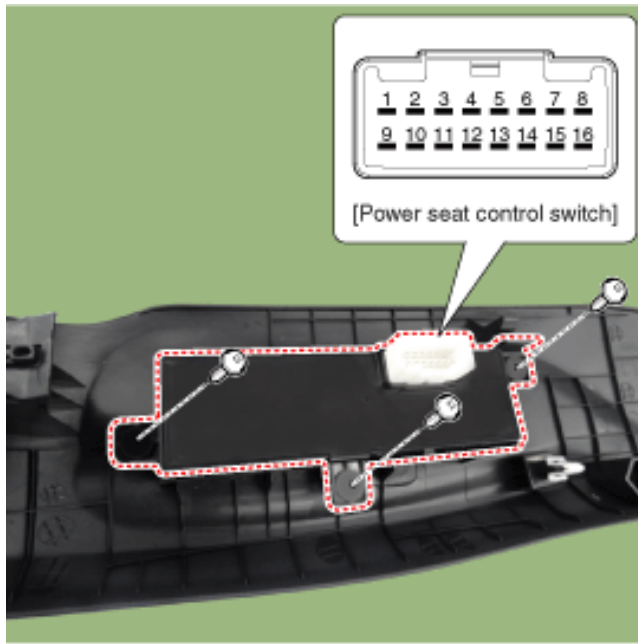


[Power seat control switch]

[Power Seat Control Switch]

	Front Height Switch		Slide Switch				Rear Height Switch		Reclining Switch				Pin Name
	Up	Down	N		Front		Up	Down	N		Front		
			Tilt	Slide	FWD	BWD			Height	Recline	FWD	BWD	
11	○	○			○	○	○	○			○	○	B +
16			○	○					○	○	○	○	GND
8	○	○	○	○					○	○	○	○	Front height motor (Up)
12		○							○	○	○	○	Front height motor (Down)
6				○	○								Slide motor (FWD)
5				○	○								Slide motor (BWD)
14				○									Slide motor forward relay (-)
15				○									Slide motor backward relay (-)
7							○	○					Rear height motor (Up)
13									○	○			Rear height motor (Down)
4										○	○		Reclining motor (FWD)
10											○	○	Reclining motor (BWD)

	Lumbar Support Control Switch			Pin Name
	Forward	Backward	N	
11	○	○		Bt+
16			○	GND
1	○		○	Lumbar support motor (Forward)
9		○	○	Lumbar support motor (Backward)

- Removal
- Disconnect the negative (-) battery terminal.
- Remove the front seat outer shield cover. (Refer to Body - "Front Seat Outer Shield Cover")
- Remove the power seat control switch (A) after loosening the screws.

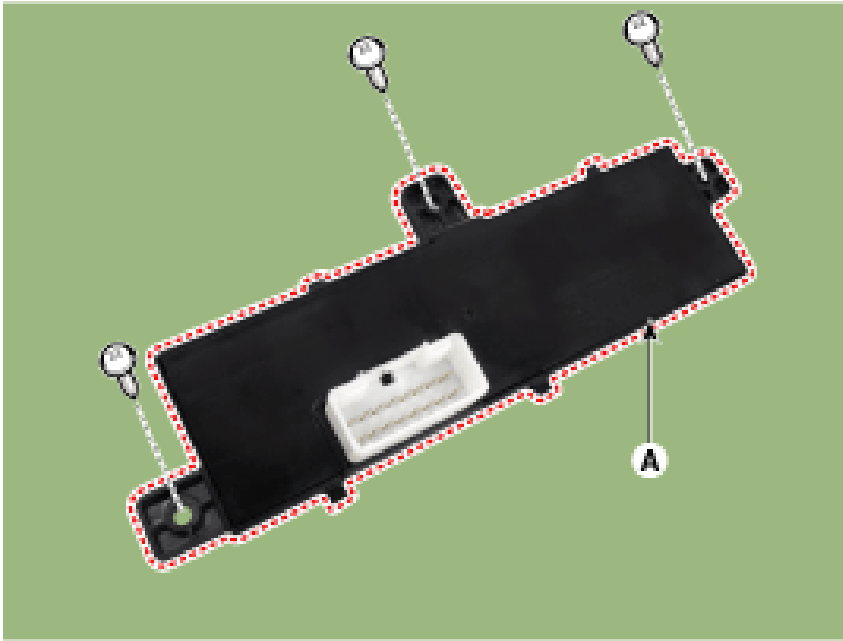

- Installation
- Install the power seat control switch after connecting the connector.
- Install the front seat outer shield cover.
- Connect the negative (-) battery terminal.