

Component Procedures: Seat Belt

Table of Contents

1. Parts and Labor (itype_189)
2. Front Seat Belt - Components and Components Location (Article 45093)
3. Rear Seat Belt - Components and Components Location (Article 45100)

Component Procedures: Seat Belt


Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Seat Belt > Lap & Shoulder Belt, R&R > Front ?	B	1.3	0.0
Remove & Replace	Seat Belt > Lap & Shoulder Belt, R&R > Front ?	B	1.3	0.0
Remove & Replace	Seat Belt > Lap & Shoulder Belt, R&R > Second?	B	1.7	0.0
Remove & Replace	Seat Belt > Lap & Shoulder Belt, R&R > Second?	B	1.7	0.0
Remove & Replace	Seat Belt > Lap & Shoulder Belt, R&R > Second?	B	1.7	0.0

Front Seat Belt - Components and Components Location (Article 45093)


- Components

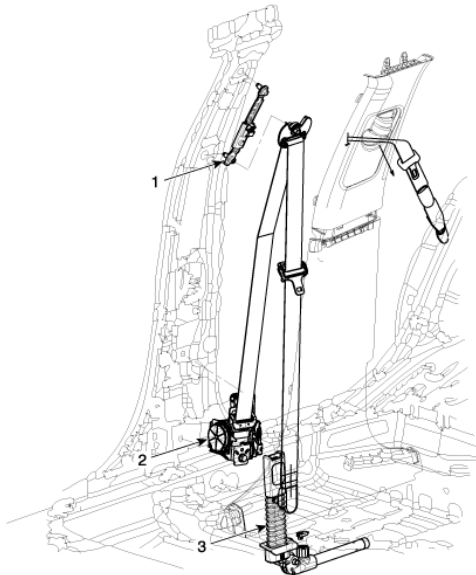

1. Height adjust 2. Front seat belt pretensioner / EFD system 3. Anchor pretensioner

Rear Seat Belt - Components and Components Location (Article 45100)

- Components

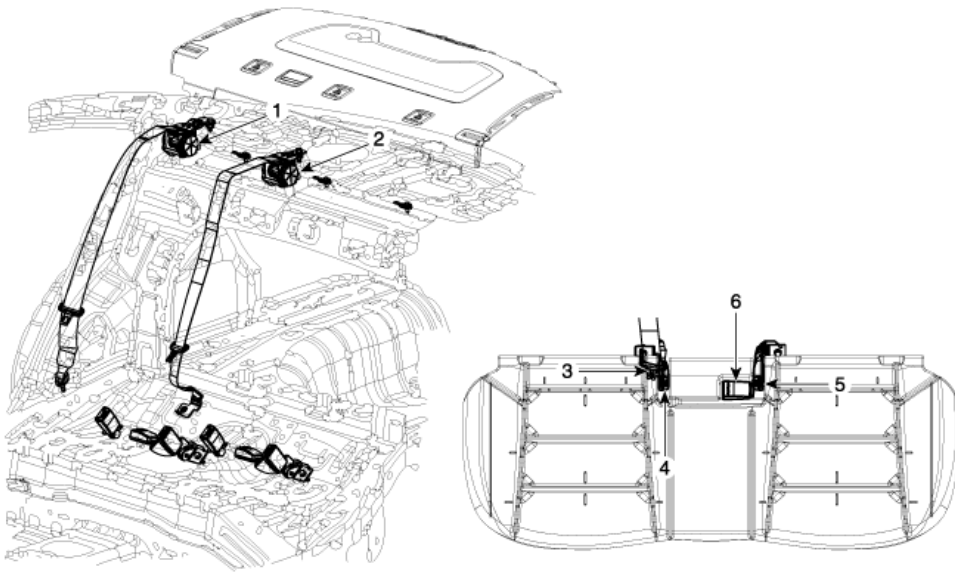

1. Rear seat belt retractor [RH] 2. Rear center seat belt retractor 3. Center seat belt 4. Rear seat belt buckle [RH] 5. Rear seat belt buckle [LH] 6. Rear center seat belt buckle