

Component Procedures: Evaporative Canister Filter

Table of Contents

1. Parts and Labor (itype_189)
2. Fuel Tank Air Filter - Repair Procedures (Article 44106)

Component Procedures: Evaporative Canister Filter

Parts and Labor (itype_189)

Parts


Qualifier	Part #	Name	Price	Note
Vapor Canister > Air Filter	31453F2500	Korea Built	104.69	
Vapor Canister > Air Filter	31453F3500	Us Built	107.63	

Labor



Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Vapor Canister > Filter, R&R	B	0.8	0.0

Fuel Tank Air Filter - Repair Procedures (Article 44106)

- Removal
- Turn ignition switch OFF and disconnect the battery negative (-) terminal.
- Remove the canister assembly. (Refer to Evaporative Emission Control System - "Canister")
- Remove the installation bolt (A), and then remove the air filter (B).

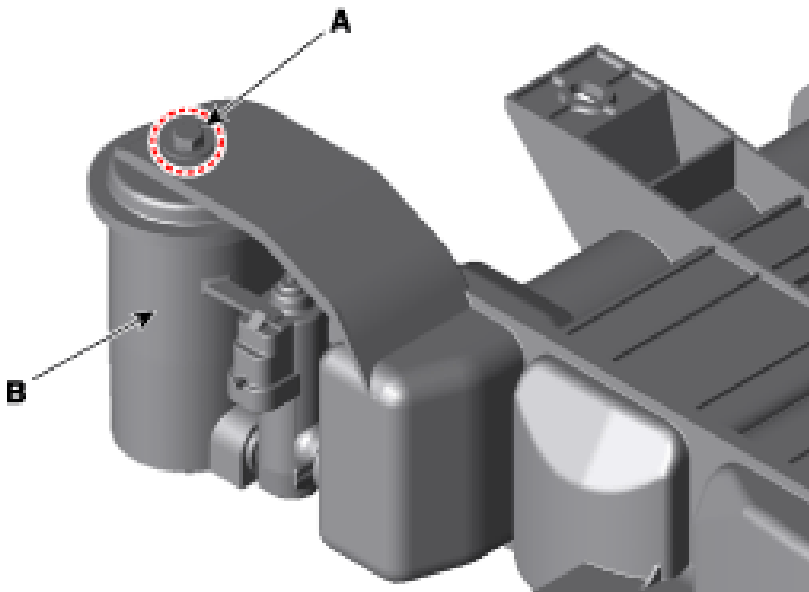

- Release the lever (A), and then separate the canister close valve (B) from the fuel tank air filter after rotating it in the direction of the arrow in the figure.

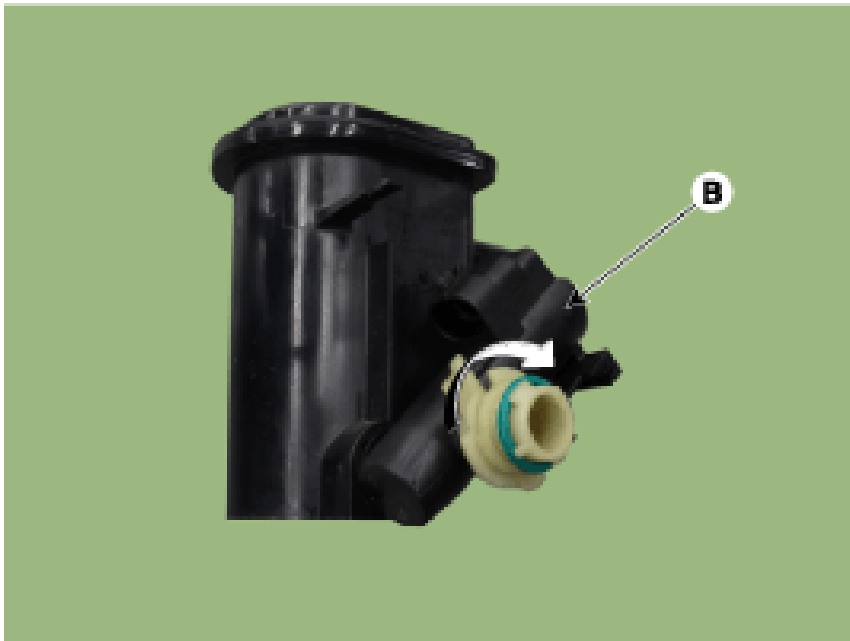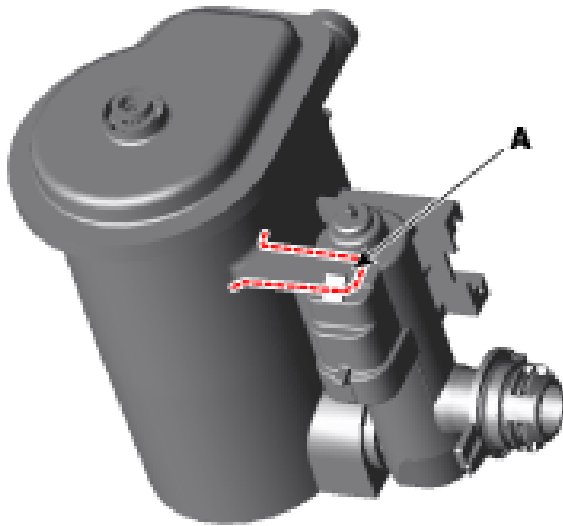

- Install a new fuel tank air filter in accordance with the reverse order.
- Installation
- Installation is the reverse of removal.