

Component Procedures: Engine Oil Dip Stick - Dip Stick Tube

Table of Contents

1. Oil Level Gauge and Pipe - Repair Procedures (Article 45389)

Component Procedures: Engine Oil Dip Stick - Dip Stick Tube

Oil Level Gauge and Pipe - Repair Procedures (Article 45389)

- Removal and Installation
- Remove the oil level gauge (A).



- Install in the reverse order of removal.