

# **Component Procedures: Parking Brake Warning Switch**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Parking Brake Switch - Repair Procedures (Article 45187)

# Component Procedures: Parking Brake Warning Switch

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Switches	93830B1001	Park Brake Warning Swi?	11.76	

### Labor


Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Switches > Park Brake Warning Switch, R&R	B	0.5	0.0

## Parking Brake Switch - Repair Procedures (Article 45187)

- Removal
- Disconnect the negative (-) battery cable.
- Release the parking brake .
- Remove the floor console assembly. (Refer to Body - "Floor Console")
- Disconnect the connector (A) of parking brake switch .



- Loosen the screw and then remove the parking brake sw itch.

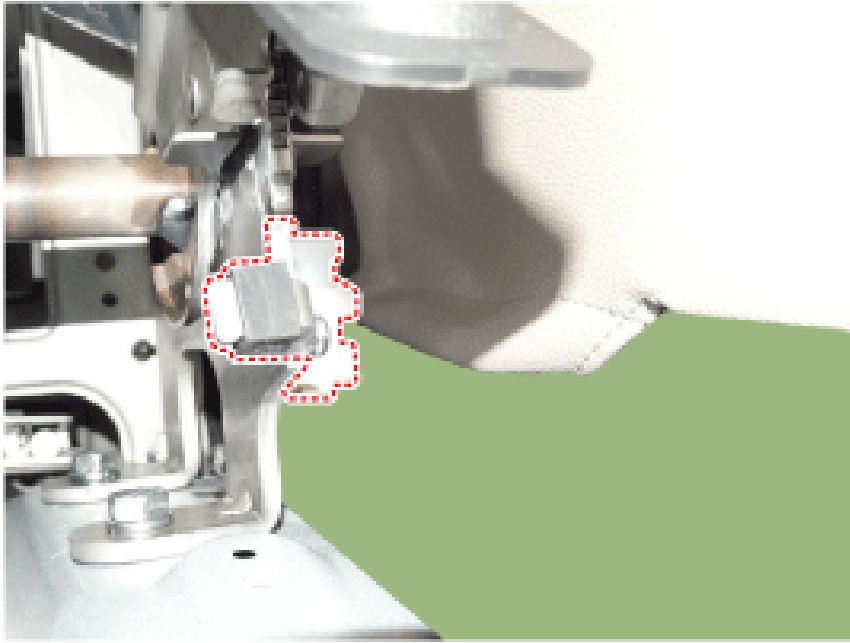

- To install, reverse the removal procedure.