

# **Component Procedures: Trunk / Liftgate Latch**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Trunk Lid Latch - Repair Procedures (Article 45132)

# Component Procedures: Trunk / Liftgate Latch

## Parts and Labor (itype\_189)

### Parts

Qualifier	Part #	Name	Price	Note
Trunk	81230F2010	Lock	134.79	

### Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Trunk > Lock, R&R	B	0.4	0.0

## Trunk Lid Latch - Repair Procedures (Article 45132)

- Replacement

[Trunk lid latch]

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Take care not to scratch the body surface.




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.


- Take care not to scratch the body surface.

- Remove the tail trunk lid trim.

- Disconnect the connector (A) and cable (B) and then loosen the bolt and remove the trunk lid latch (C).

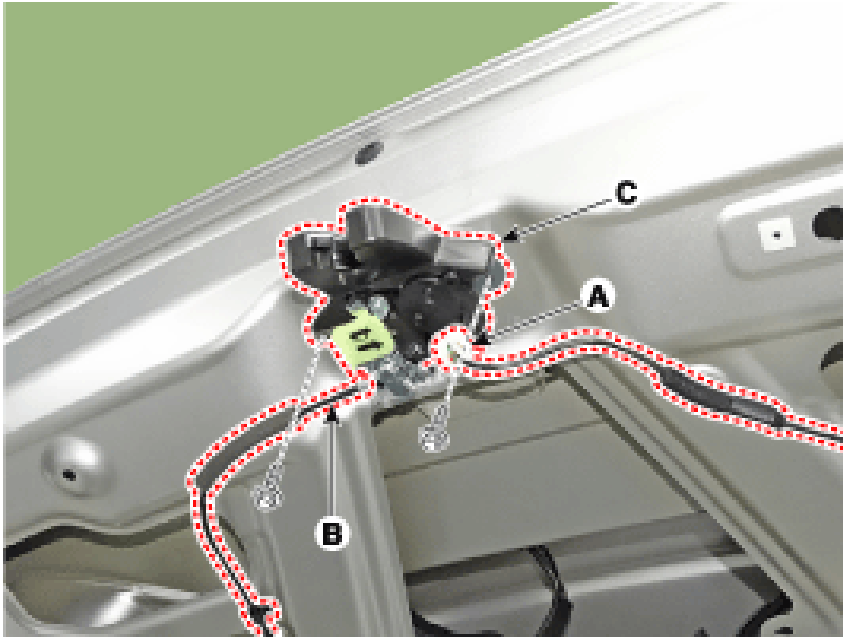


- To install, reverse the removal procedure. Make sure the tail gate locks/unlocks and opens/closes properly. Adjust the tail gate alignment. Make sure the connectors are connected in properly. Make sure the tail gate locks/unlocks and opens/closes properly. Adjust the tail gate alignment. Make sure the connectors are connected in properly.

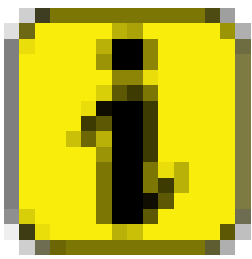

# Information


- Make sure the tail gate locks/unlocks and opens/closes properly.
  - Adjust the tail gate alignment.
  - Make sure the connectors are connected in properly.
- [Trunk lid cable]
- Remove the front seat assembly. (Refer to Front Seat - "Front Seat Assembly")
  - Remove the rear seat assembly. (Refer to rear Seat - "Rear Seat Assembly")
  - Remove the floor console assembly. (Refer to Floor Console - "Floor Console Assembly")
  - Remove the center pillar lower trim. (Refer to Interior Trim - "Center Pillar Trim")
  - Remove the cowl side trim. (Refer to Interior Trim - "Cowl Side Trim")
  - Remove the luggage side trim. (Refer to Interior Trim - "Cowl Side Trim")
  - Remove the floor carpet . (Refer to "Floor carpet")
  - Loosen the trunk lid catch mounting bolt (A). Tightening torque : 7.8 - 11.8 N.m (0.8 - 1.2 kgf.m, 5.8 - 8.7 lb-ft)

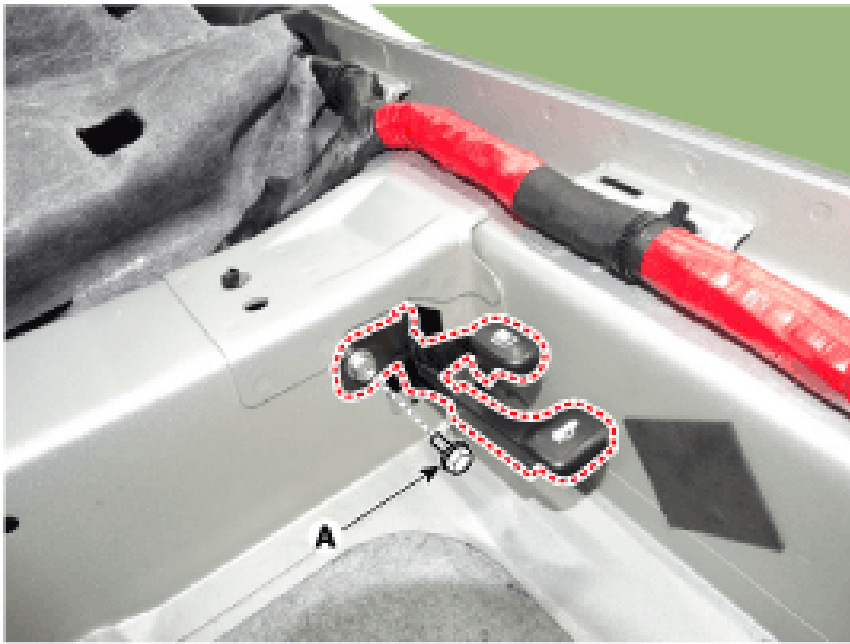


- Detach the cable (A) and remove the trunk lid catch (B).




- Remove the cable (B) from the trunk lid catch (A).

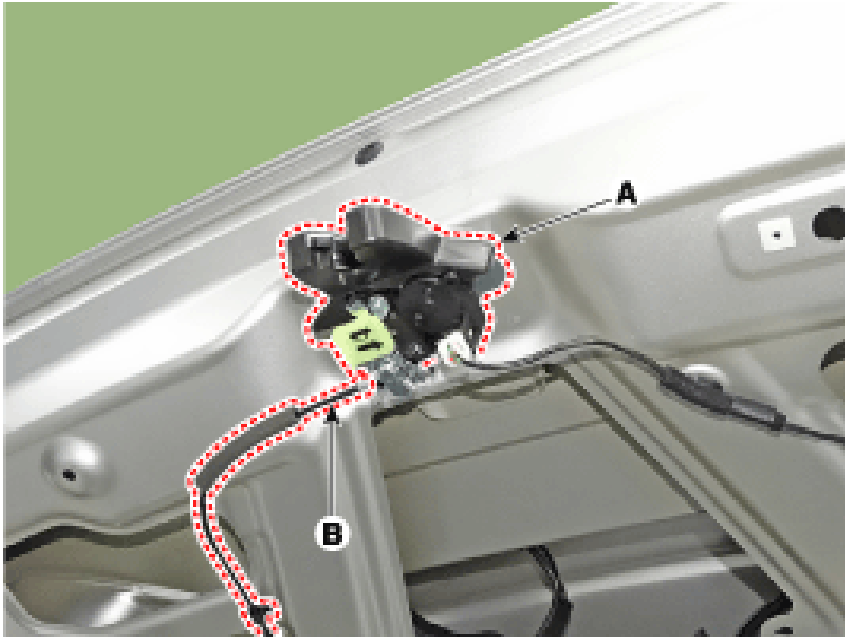

- Remove the trunk lid cable (A).

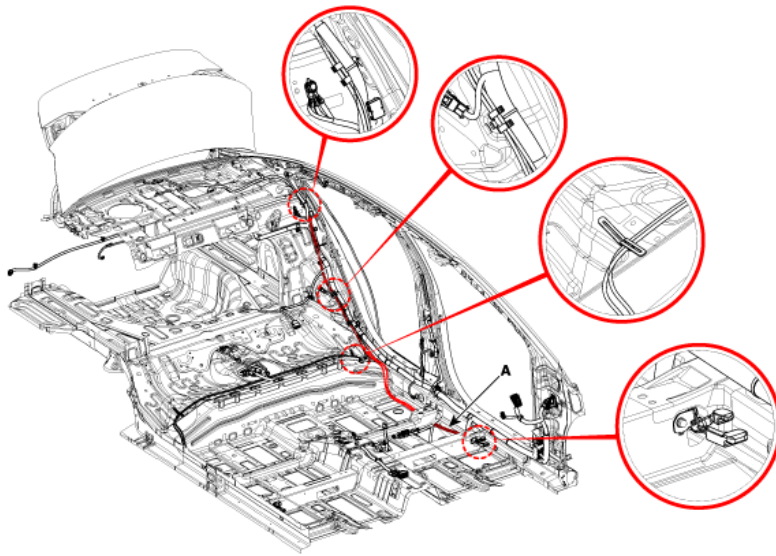

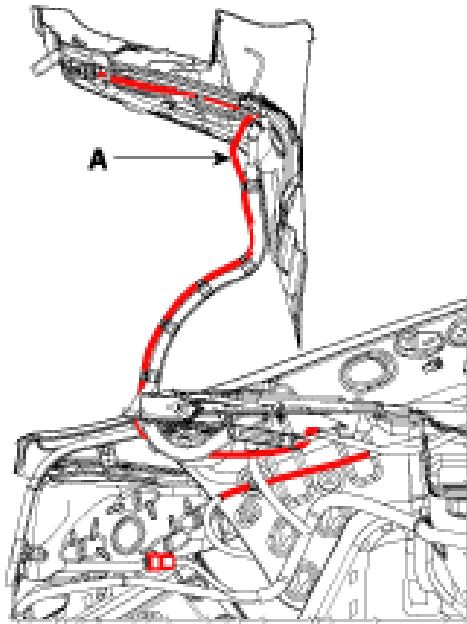

- To install, reverse the removal procedure. Make sure the trunk lid lock s/unlocks and opens / closes properly.

Make sure the trunk lid lock s/unlocks and opens / closes properly.

- Make sure the trunk lid lock s/unlocks and opens / closes properly.

[Trunk lid catch]

- Remove the front seat assembly [LH]. (Refer to Front Seat - "Front Seat Assembly")

- Remove the front door scuff trim [LH]. (Refer to Interior Trim - "Front Door Scuff Trim")

- Remove the cowl side trim [LH]. (Refer to Interior Trim - "Cowl Side Trim")

- Separate the floor carpet to obtain space for removing the rear heating duct.

- To install, reverse the removal procedure. Make sure the tail gate locks / unlocks and opens / closes properly.

Make sure the tail gate locks / unlocks and opens / closes properly.

- Make sure the tail gate locks / unlocks and opens / closes properly.