

Component Procedures: Power Door Lock Switch

Table of Contents

1. Parts and Labor (itype_189)
2. Power Door Lock Switch - Repair Procedures (Article 44596)

Component Procedures: Power Door Lock Switch

Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Front Door > Lock Switch, R&R > One Side	B	0.5	0.0

Power Door Lock Switch - Repair Procedures (Article 44596)

- Inspection
- Power Door Lock Switch Inspection
- Check for continuity between the terminals. If there is an abnormality, replace the switch.



Terminal / Position	5	6	16
Door Lock		○ ————— ○	
Door Unlock	○ ————— ○		


- Removal
- Be careful not to scratch the door trim and other parts. Use caution in keeping and handling during disassembling/assembling because it is easily contaminated with lubricant and oil.

⚠ CAUTION

- Be careful not to scratch the door trim and other parts.
- Use caution in keeping and handling during disassembling/assembling because it is easily contaminated with lubricant and oil.

Driver Power Window Switch

- Disconnect the negative (-) battery terminal.
- Remove the front door trim .
- Remove the power window switch assembly after disengaging the mounting clips.

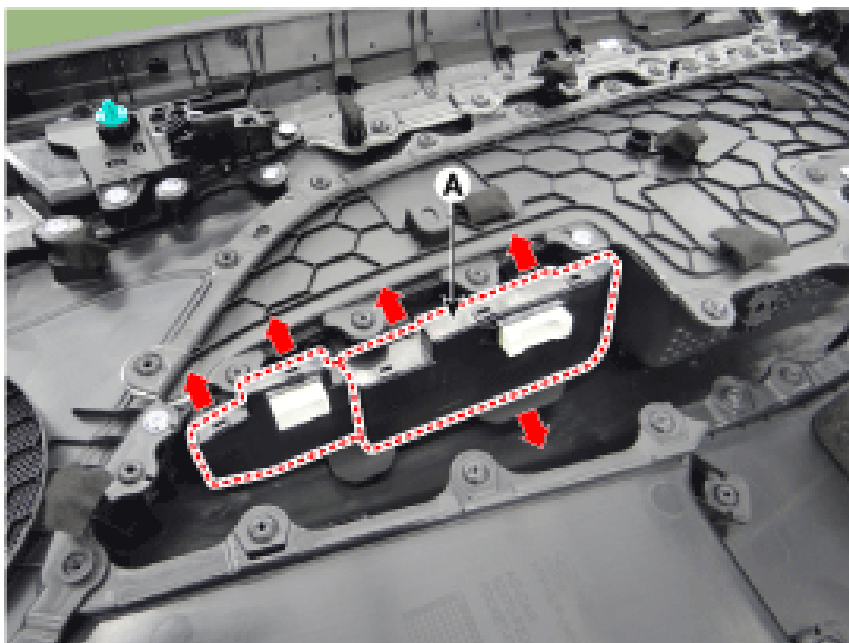

- Installation
- Install the power window switch assembly.
- Install the front door trim after connect the connector.
- Connect the negative (-) battery terminal.