

Component Procedures: Power Trunk / Liftgate Lock Actuator

Table of Contents

1. Power Door Lock Module - Repair Procedures (Article 44594)

Component Procedures: Power Trunk / Liftgate Lock Actuator

Power Door Lock Module - Repair Procedures (Article 44594)

- Inspection

Wrap the protective tape on the tool to disassemble with the screwdriver or remover. Use caution in keeping and handling during disassembling/assembling because it is easily contaminated with lubricant and oil.



- Wrap the protective tape on the tool to disassemble with the screwdriver or remover.

- Use caution in keeping and handling during disassembling/assembling because it is easily contaminated with lubricant and oil.

Front Door Lock Module Inspection


- Remove the front door trim .

- Remove the front door module . (Refer to Body - "Front Door Module")

- Disconnect the connector from the actuator. No Pin Information LH RH 1 - - 2 Lock / Unlock switch Motor 2 3

COM Motor 3 4 Key Lock switch Key Unlock switch 5 Key Unlock switch Key Lock switch 6 Motor 3 COM 7 Motor 2

Lock / Unlock switch 8 - -

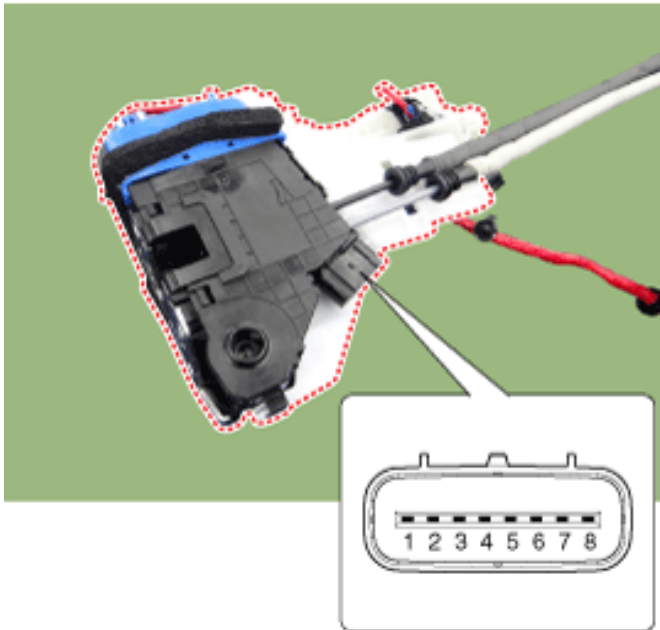

No Pin Information

LH RH

1 - -

2 Lock / Unlock switch Motor 2

3 COM Motor 3

4 Key Lock switch Key Unlock switch


5 Key Unlock switch Key Lock switch

6 Motor 3 COM

7 Motor 2 Lock / Unlock switch

8 - -

- Check actuator operation by connecting power and ground according to the table. To prevent damage to the actuator, apply battery voltage only momentarily.

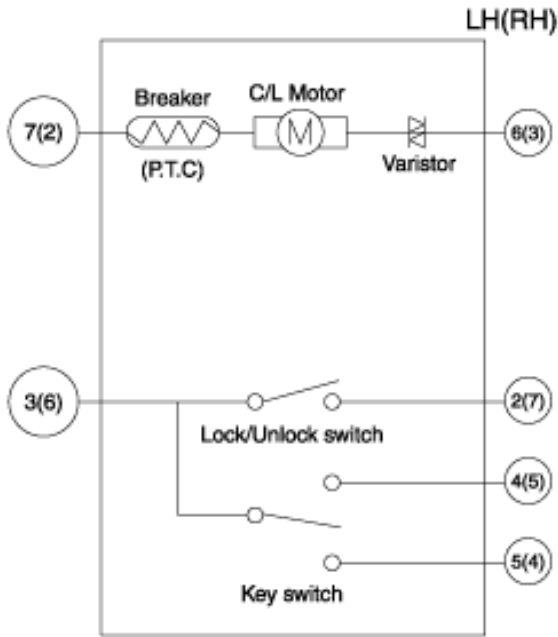


LH(RH)

Operation Terminal	Central Lock	Central Unlock
7(2)	-	+
6(3)	+	-
3(6) & 2(7)	ON → OFF	OFF → ON

Rear Door Lock Module Inspection


- Remove the rear door trim.
- Remove the rear door module. (Refer to Body - "Rear Door Module")
- Disconnect the connectors from the actuator. No Pin information LH RH 1 - - 2 Lock / Unlock switch Motor 2 3 COM Motor 3 4 - - 5 - - 6 Motor 3 COM 7 Motor 2 Lock / Unlock switch 8 - -

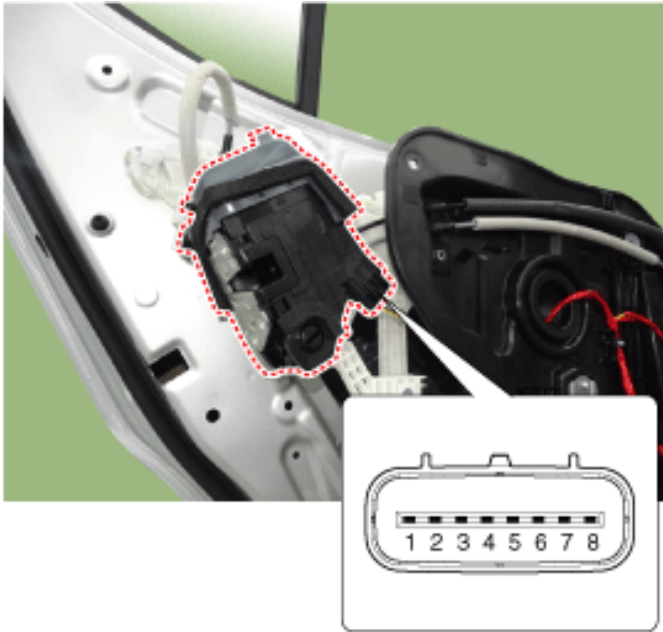

No Pin information



4 - -

5 - -

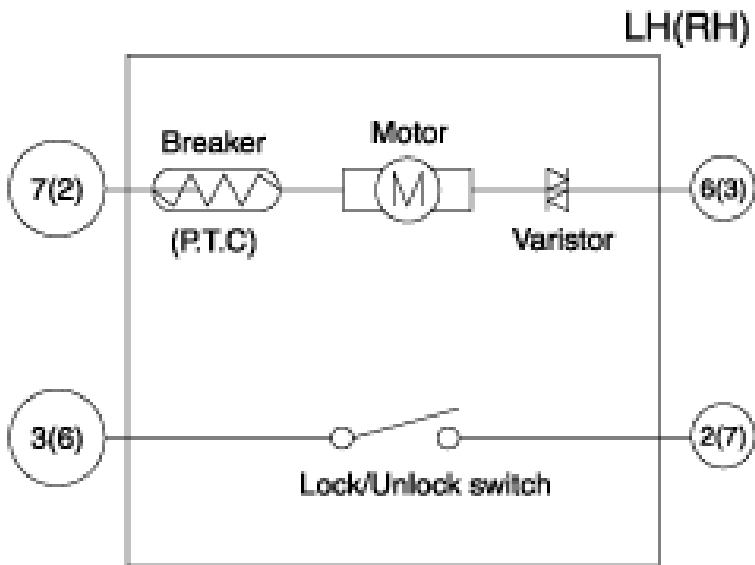

Trunk Lock Module Inspection

- Remove the trunk lid trim.
- Disconnect the connector from the actuator

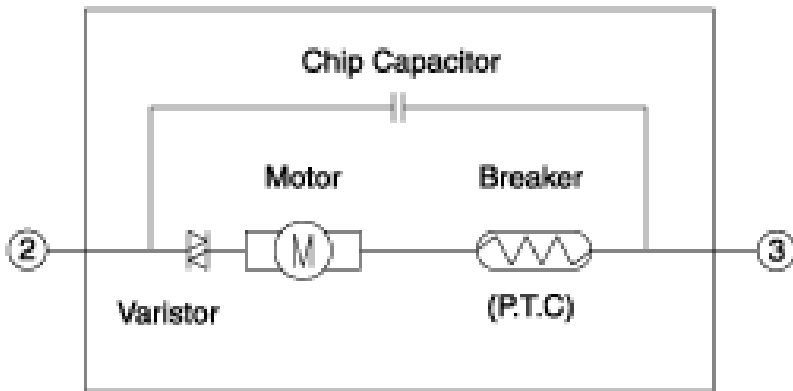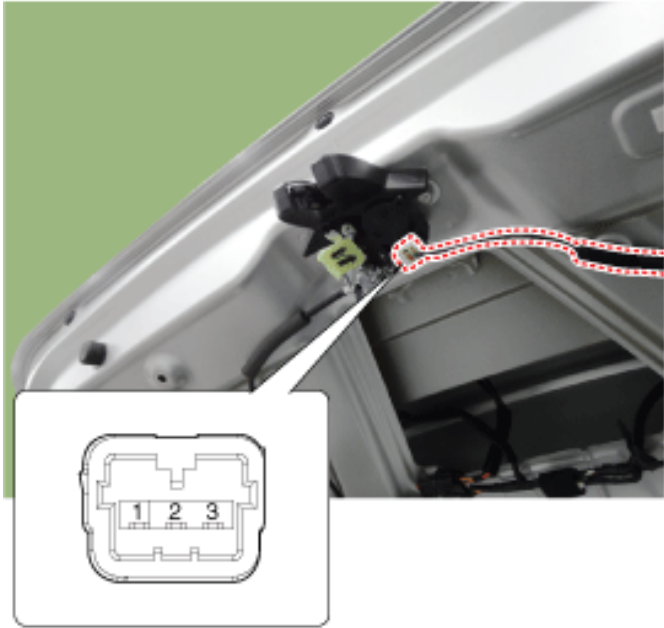

Terminal	2	3
Position		
Unlock	⊕	⊖

- Checking the trunk of the vehicle power option power refers to the trunk module.