


Component Procedures: Fogging Sensor

Table of Contents

1. Auto Defogging Sensor - Description and Operation (Article 44833)
2. Auto Defogging Sensor - Repair Procedures (Article 44835)

- Disconnect the connector (A) and then remove the auto defogging sensor (B).

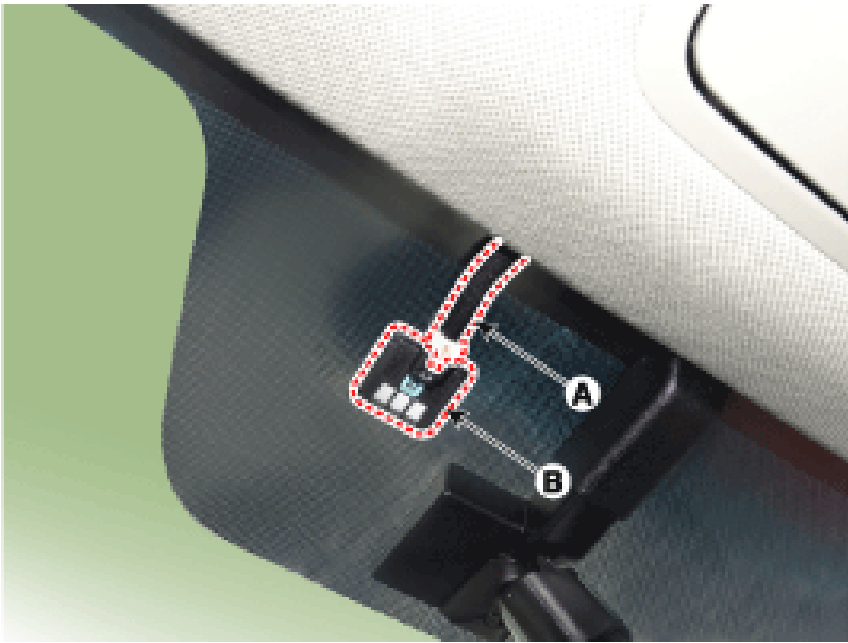

- To install, reverse the removal procedure.