

# **Component Procedures: Battery Current Sensor**


## **Table of Contents**

1. Battery Sensor - Description and Operation (Article 44042)
2. Battery Sensor - Repair Procedures (Article 44043)

## Component Procedures: Battery Current Sensor


### Battery Sensor - Description and Operation (Article 44042)

- Description

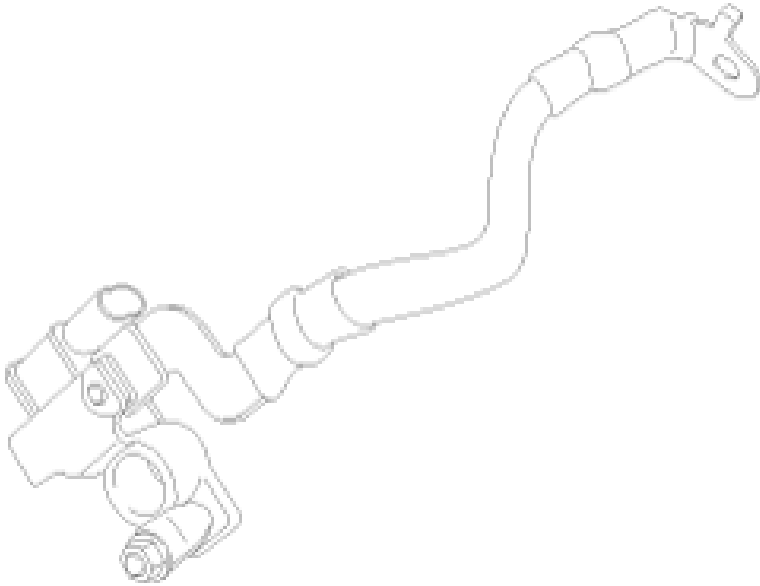

### Battery Sensor - Repair Procedures (Article 44043)

- Removal
- Disconnect the battery negative (-) cable.
- Disconnect the battery sensor connector (A).
- Remove the battery negative (-) cable after removing the bolts (B).

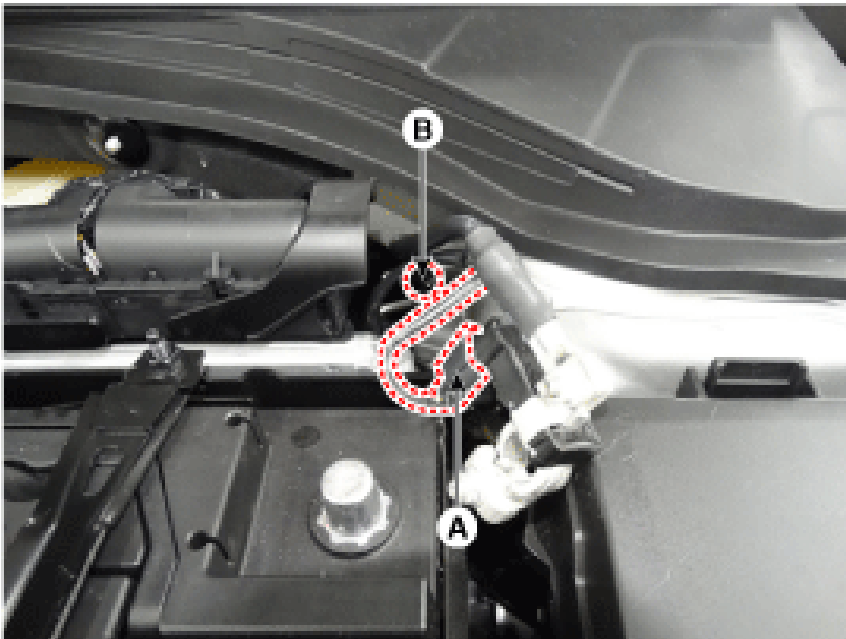

- Installation
- Install in the reverse order of removal. Battery sensor installation bolt : 10.8 - 13.7 N.m (1.1 - 1.4 kgf.m, 8.0 -10.1 lb-ft) Battery (-) terminal tightening nut : 3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)