

Component Procedures: Hood Latch Release


Table of Contents

1. Hood Latch Release Handle - Components and Components Location (Article 45123)
2. Hood Latch Release Handle - Repair Procedures (Article 45124)

Component Procedures: Hood Latch Release

Hood Latch Release Handle - Components and Components Location (Article 45123)

- Component Location

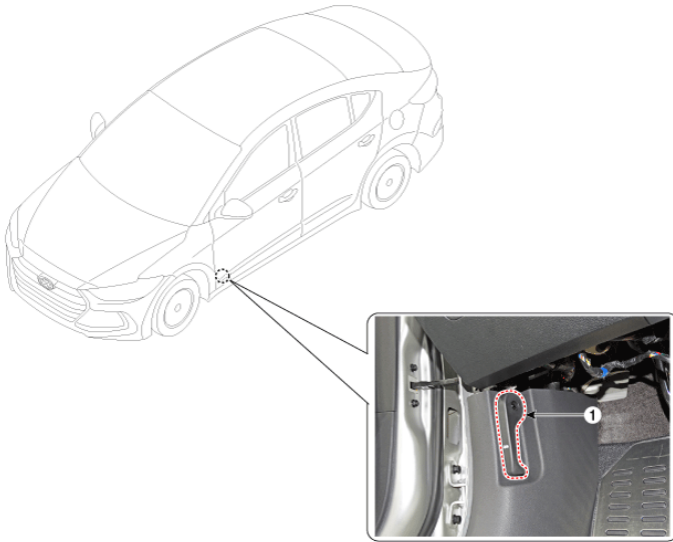


1. Hood latch release handle

Hood Latch Release Handle - Repair Procedures (Article 45124)

- Replacement

- Using a socket (B), remove the hood release handle (A).

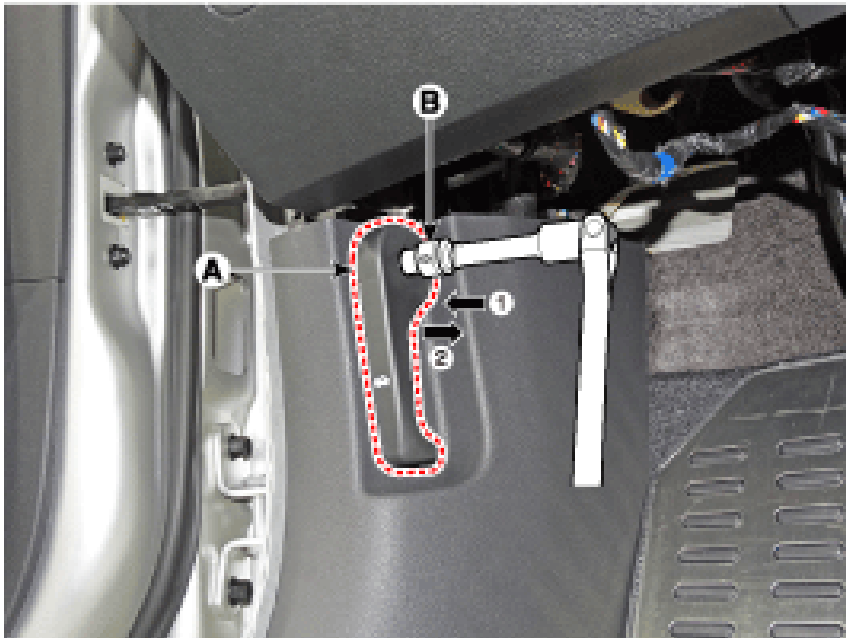

- To install, reverse the removal procedure. Make sure the hood latch cable is connected properly. Make sure the hood lock s / unlocks and opens / closes properly.
Make sure the hood latch cable is connected properly. Make sure the hood lock s / unlocks and opens / closes properly.

NOTICE

- Make sure the hood latch cable is connected properly.
- Make sure the hood lock s / unlocks and opens / closes properly.