

# **Component Procedures: Antitheft Antenna**


## **Table of Contents**

1. Antenna Coil - Repair Procedures (Article 44709)

## Component Procedures: Antitheft Antenna

### Antenna Coil - Repair Procedures (Article 44709)

- Removal
- Disconnect the negative (-) battery terminal.
- Remove the steering column shroud panel. (Refer to Body - "Steering Column Shroud Panel")
- Disconnect the 6P connector (B) of the coil antenna and then remove the coil antenna (A) after loosening the screw.

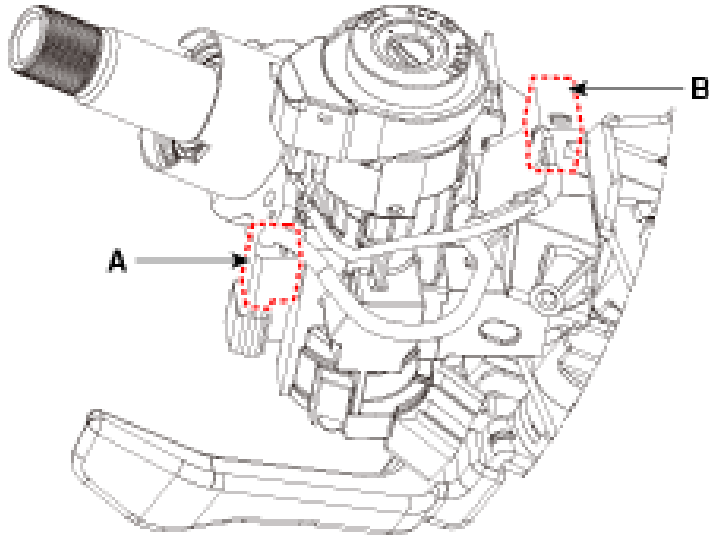

- Installation
- Install the coil antenna and connect the 6P connector.
- Install the steering column shroud panel.
- Connect the negative (-) battery terminal.