

# **Component Procedures: Front Door Window Glass**


## **Table of Contents**

1. Front Door Window Glass - Components and Components Location (Article 45144)
2. Front Door Window Glass - Repair Procedures (Article 45145)

## Component Procedures: Front Door Window Glass

### Front Door Window Glass - Components and Components Location (Article 45144)


- Component Location

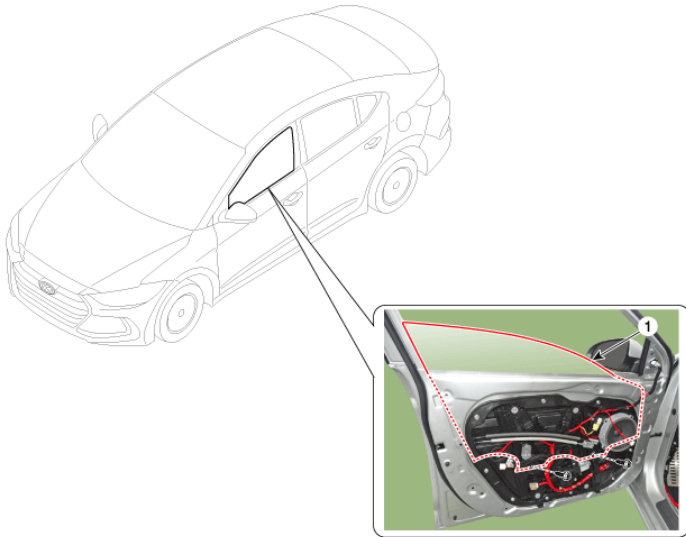


1. Front door window glass

### Front Door Window Glass - Repair Procedures (Article 45145)

- Replacement
- Remove the front door trim . (Refer to Front Door - "Front Door Trim")
- Remove the front door belt inside weatherstrip (A).

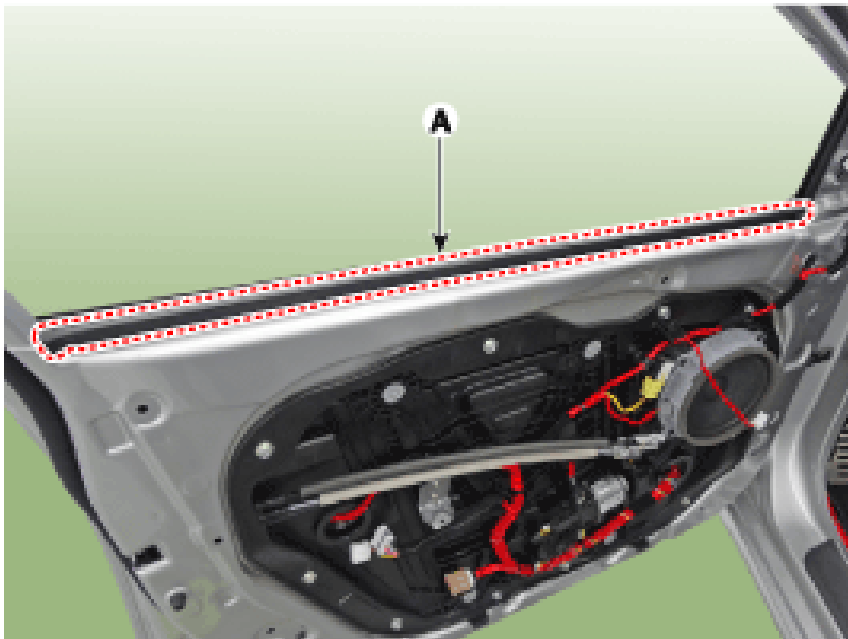

- Separate the mounting plug hole (A) from the front door module .

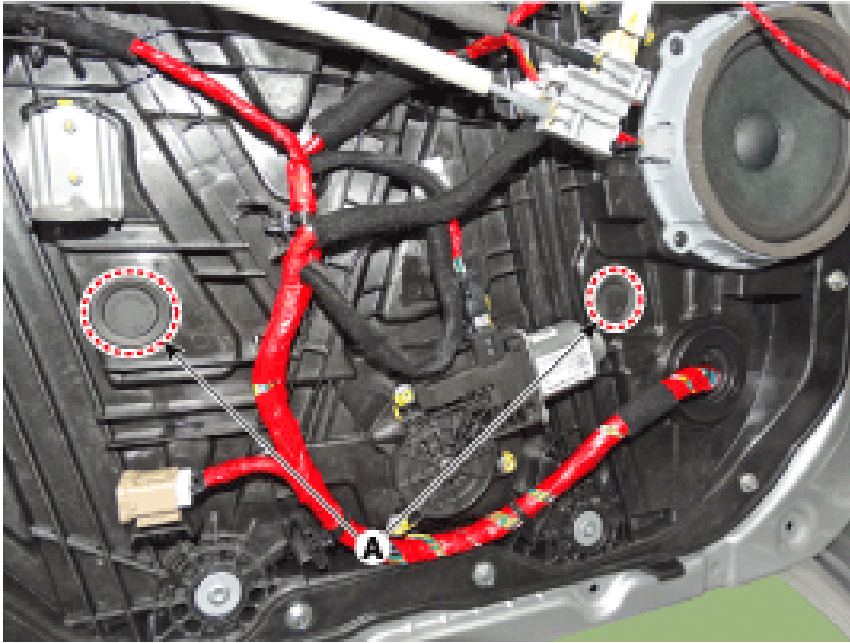

- Lower the glass by operating the power window switch until the glass mounting bolt is exposed in the plug hole. Be careful not to drop the glass and/or scratch the glass surface. Use the door switch to align the mounting hole/bolt with the hole in the door. If unable to operate the window motor , remove the motor and align the hole by hand.

Be careful not to drop the glass and/or scratch the glass surface.




- Be careful not to drop the glass and/or scratch the glass surface.

Use the door switch to align the mounting hole/bolt with the hole in the door. If unable to operate the window motor , remove the motor and align the hole by hand.



## Information

- Use the door switch to align the mounting hole/bolt with the hole in the door.
- If unable to operate the window motor , remove the motor and align the hole by hand.
- After loosening the glass mounting bolts, adjust the spacing of the glass (A) by moving the glass from side to side and then tighten the bolts. Tightening torque : 8.8 - 11.8 N.m (0.9 - 1.2 kgf.m, 6.5 - 8.7 lb-ft)

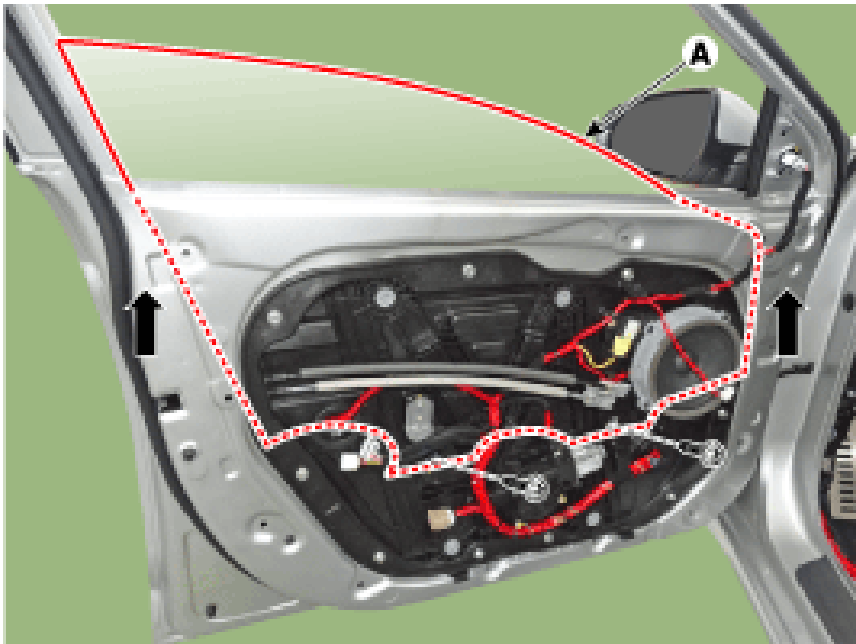

- To install, reverse the removal procedure. Roll the glass up and down to see if it moves freely. Adjust glass position as needed. Make sure the door lock and opens properly. Check the glass run channel for damage and replace the damaged channel.

Roll the glass up and down to see if it moves freely. Adjust glass position as needed. Make sure the door lock and opens properly. Check the glass run channel for damage and replace the damaged channel.

- Roll the glass up and down to see if it moves freely.
- Adjust glass position as needed.
- Make sure the door lock and opens properly.
- Check the glass run channel for damage and replace the damaged channel.