

Component Procedures: Trunk / Liftgate


Table of Contents

1. Trunk Lid Assembly - Components and Components Location (Article 45128)
2. Trunk Lid - Repair Procedures (Article 45127)
3. Trunk Lid Assembly - Repair Procedures (Article 45129)

Component Procedures: Trunk / Liftgate

Trunk Lid Assembly - Components and Components Location (Article 45128)

- Component Location

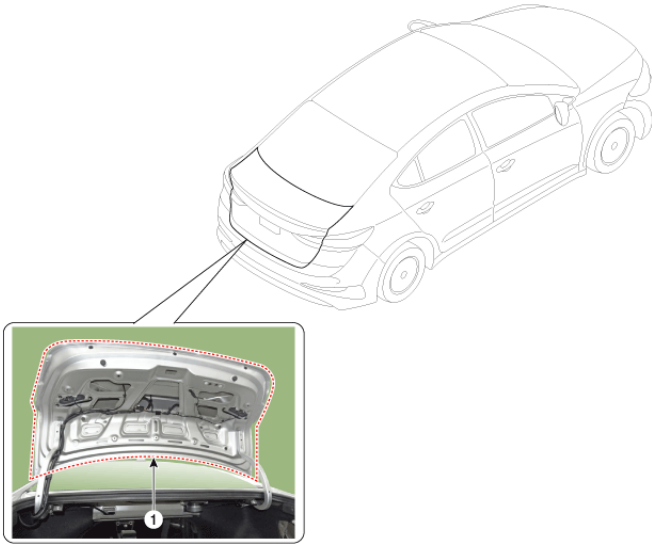

1. Trunk lid assembly

Trunk Lid - Repair Procedures (Article 45127)

- Adjustment
- Place the car on a flat surface and check whether the body and trunk lid are well-aligned.
- After loosening the trunk lid hinge (A) mounting bolt, adjust the trunk lid by moving it up and down or from side to side.
- Adjust the gap between the trunk lid and body by turning the trunk lid overslam bumpers (B).
- After loosening the trunk lid striker (C) mounting bolts, adjust the striker by moving it back and forth or from side to side and then tighten the mounting bolts.
- Make sure the trunk lid opens or closes properly.



Trunk Lid Assembly - Repair Procedures (Article 45129)


- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing and installing the trunk lid , an assistant is necessary . Be careful not to damage the trunk lid and body surface.

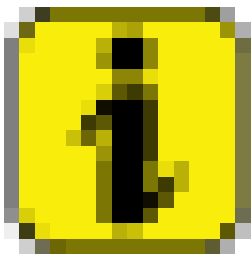

Information


- When removing and installing the trunk lid , an assistant is necessary .

- Be careful not to damage the trunk lid and body surface.

- Remove the trunk lid trim.

- Disconnect the connectors and trunk lid wiring harness (A).

- After loosening the mounting bolts, remove the trunk lid assembly (B). Tightening torque : 21.6 - 26.5 N.m (2.2 - 2.7 kgf.m, 15.9 - 19.5 lb-ft)

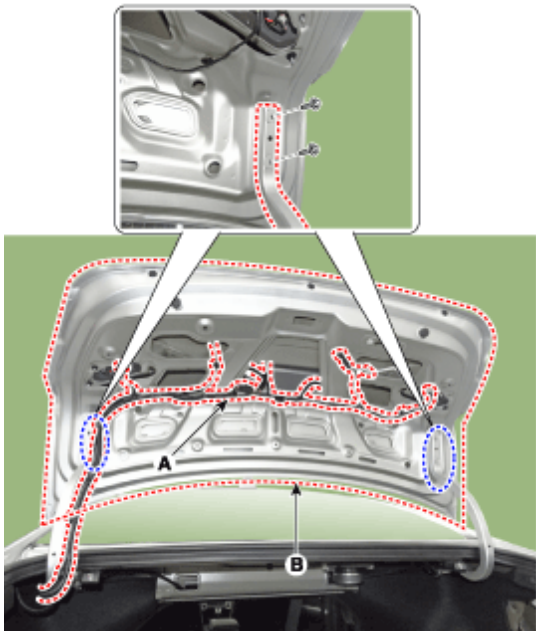

- To install, reverse the removal procedure. Make sure the trunk lid lock s / unlocks and opens / closes properly. Adjust the trunk lid as necessary. Make sure the connectors are connected in properly. Replace any damaged clips.

Make sure the trunk lid lock s / unlocks and opens / closes properly. Adjust the trunk lid as necessary. Make sure the connectors are connected in properly. Replace any damaged clips.

- Make sure the trunk lid lock s / unlocks and opens / closes properly.

- Adjust the trunk lid as necessary.
- Make sure the connectors are connected in properly.
- Replace any damaged clips.