

Component Procedures: Front Fender Liner

Table of Contents

1. Front Mud Guard - Repair Procedures (Article 44981)
2. Front Wheel Guard - Repair Procedures (Article 44979)

Component Procedures: Front Fender Liner

Front Mud Guard - Repair Procedures (Article 44981)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Take care not to scratch the body surface.



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Take care not to scratch the body surface.

- After loosening the mounting screws and remove the front mud guard (A).

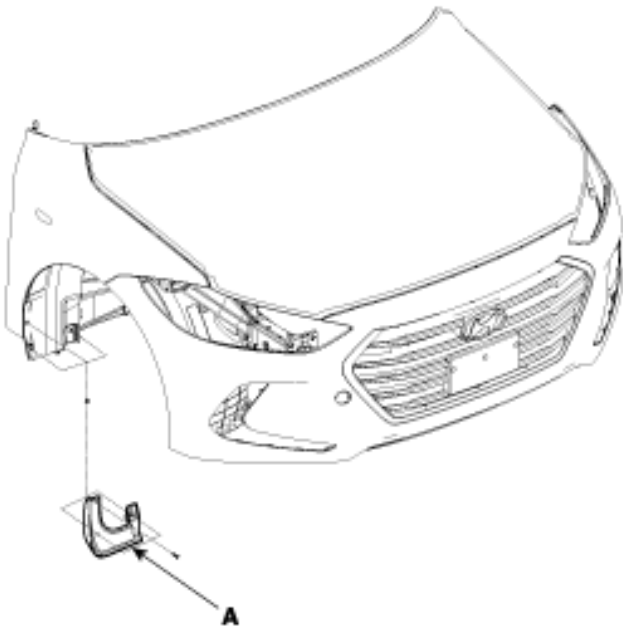

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).



Information

- Replace any damaged clips (or pin-type retainers).

Front Wheel Guard - Repair Procedures (Article 44979)

- Replacement

Put on gloves to prevent hand injuries.




- Put on gloves to prevent hand injuries.


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Take care not to scratch the body surface.



- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- Take care not to scratch the body surface.
- Remove the engine room cover. (Refer to Engine Mechanical System - " Engine Room Cover")
- Remove the front tire.
- After loosening the mounting clips and remove the front wheel guard (A).

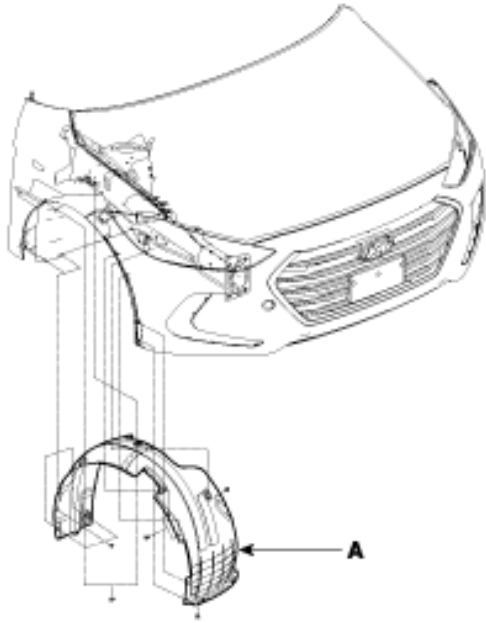

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).

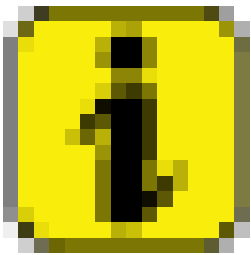

Information

- Replace any damaged clips (or pin-type retainers).