

# **Component Procedures: Front Fender**


## **Table of Contents**

1. Fender - Components and Components Location (Article 45116)
2. Fender - Repair Procedures (Article 45117)

## Component Procedures: Front Fender

### Fender - Components and Components Location (Article 45116)

- Component Location

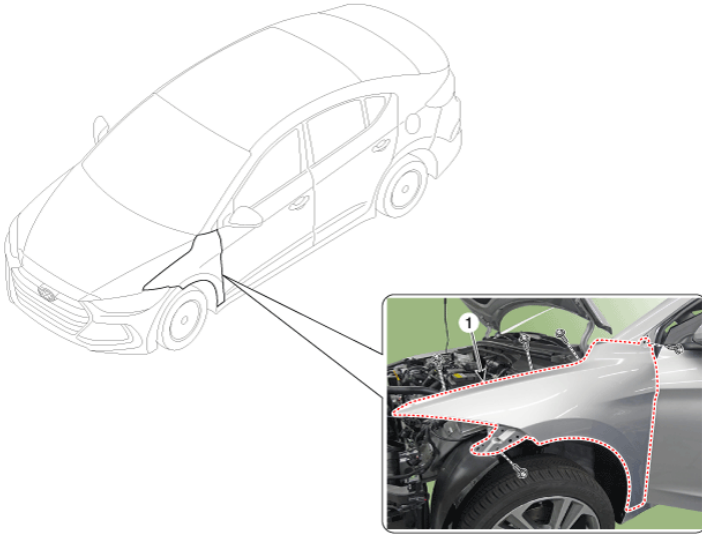

1. Fender assembly

### Fender - Repair Procedures (Article 45117)

- Replacement

When removing the fender , wrap protective tape around a screwdriver or remover not to damage components Put on gloves to prevent hand injuries

# NOTICE

- When removing the fender , wrap protective tape around a screwdriver or remover not to damage components

- Put on gloves to prevent hand injuries

When removing the clips, use a clip remover.



# Information


- When removing the clips, use a clip remover.

- Remove the front bumper . (Refer to Front Bumper - "Front Bumper Cover")


- Remove the head lamps. (Refer to Body Electrical System - "Head Lamps")

- Loosen the front wheel guard mounting screws and pin-type retainers.

- Using a screwdriver or remover, remove the delta garnish (A).

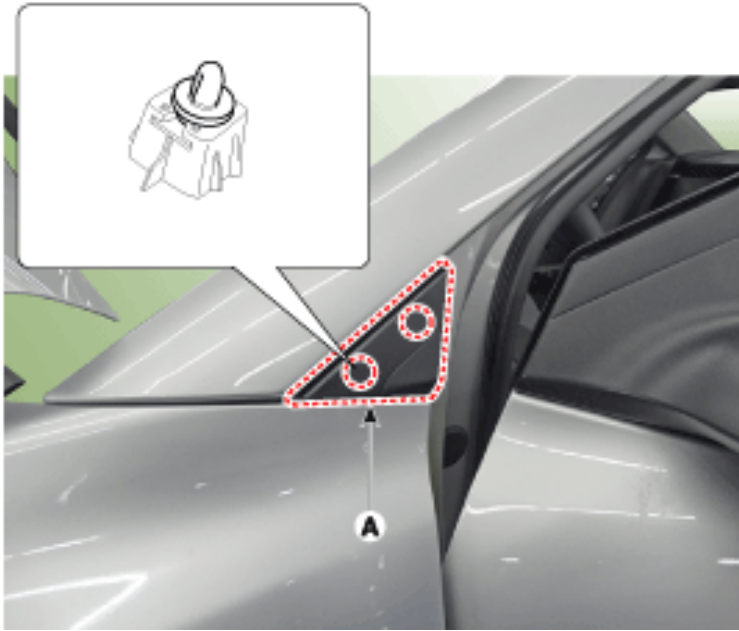


- Remove the front bumper side mounthing bracket (A) after loosening the bolts.

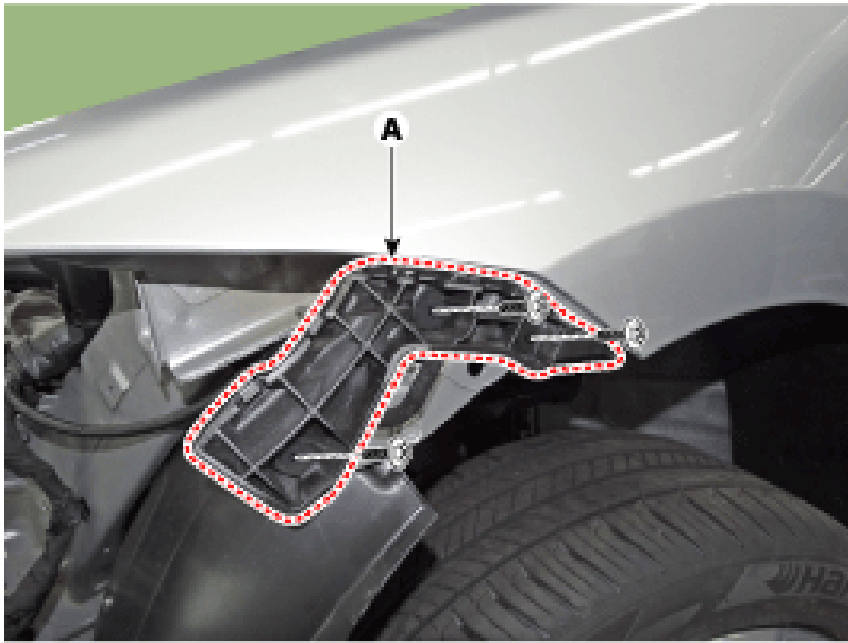

- Loosen the mounting clips and remove the insulator cover (A).



- After loosening the mounting bolts, remove the fender assembly (A).

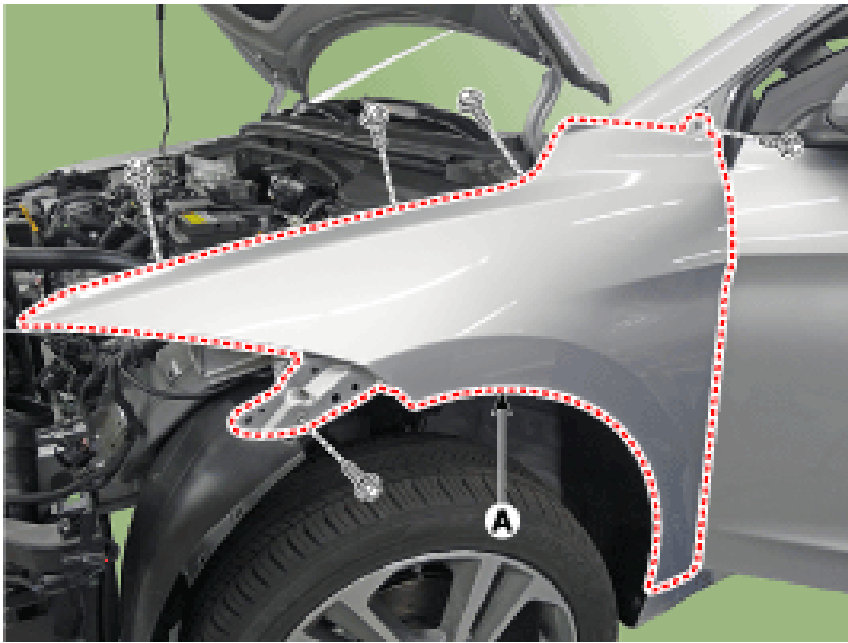

- To install, reverse the removal procedure. Make sure the connector is plugged in properly. Replace any damaged clips (or pin-type retainers).

Make sure the connector is plugged in properly. Replace any damaged clips (or pin-type retainers).

- Make sure the connector is plugged in properly.

- Replace any damaged clips (or pin-type retainers).