

# **Component Procedures: Cowl Moulding / Trim**



## **Table of Contents**

1. Cowl Top Cover - Components and Components Location (Article 44997)
2. Cowl Top Cover - Repair Procedures (Article 44998)

## Component Procedures: Cowl Moulding / Trim

### Cowl Top Cover - Components and Components Location (Article 44997)

- Component Location

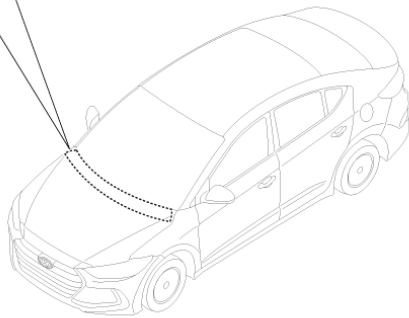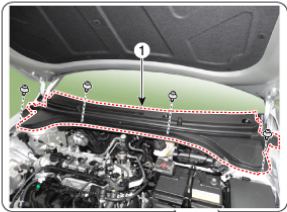


1. Cowl top cover

### Cowl Top Cover - Repair Procedures (Article 44998)


- Replacement  
- Remove the plug hole.




- Loosen the mounting nuts and remove the wiper arm (A). Tightening torque : 22.6 - 26.5 N.m (2.3 - 2.7 kgf.m, 16.6 - 19.5 lb-ft)

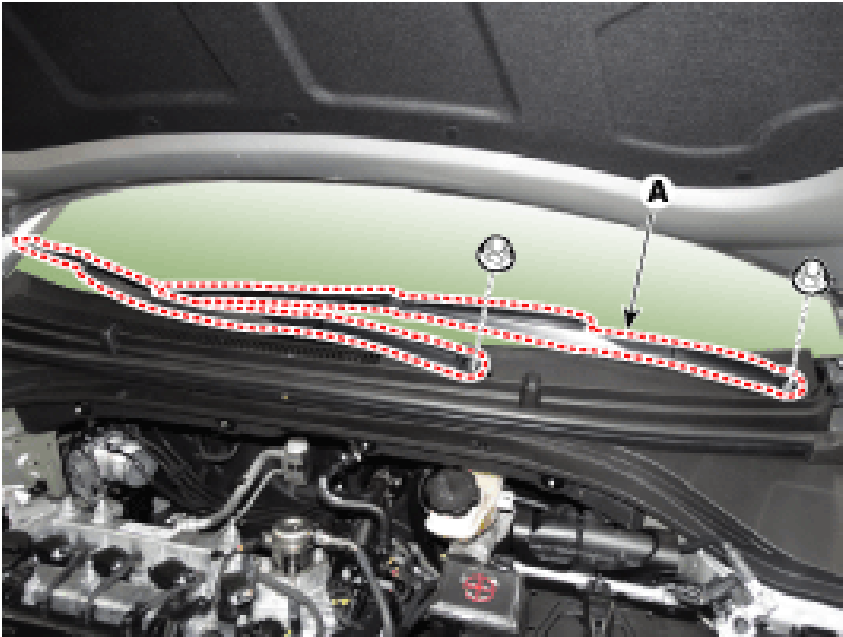

- Using a screwdriver or remover, remove the cowl side cover (A).

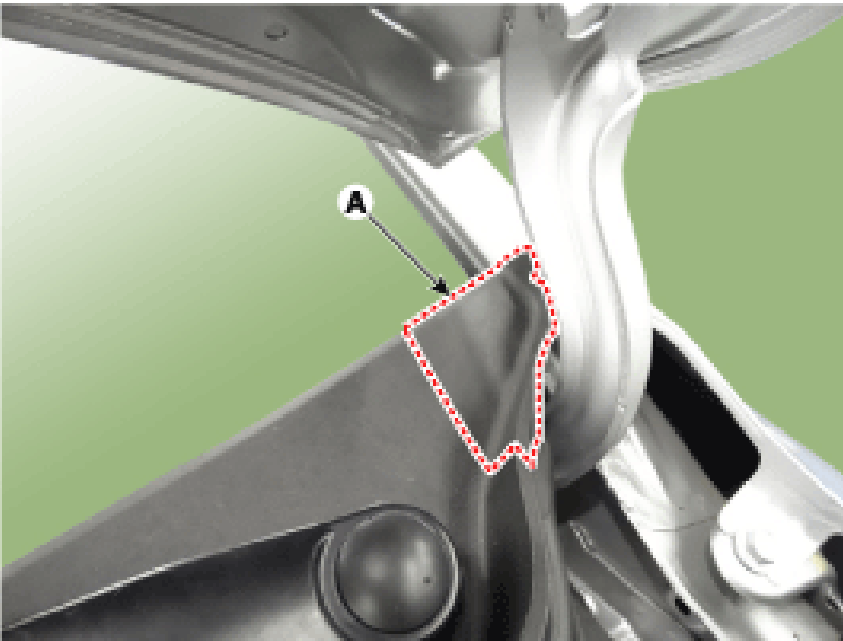

- Disconnect the washer nozzle (A).  
- Detach the clips, then remove the cowl top cover (B).

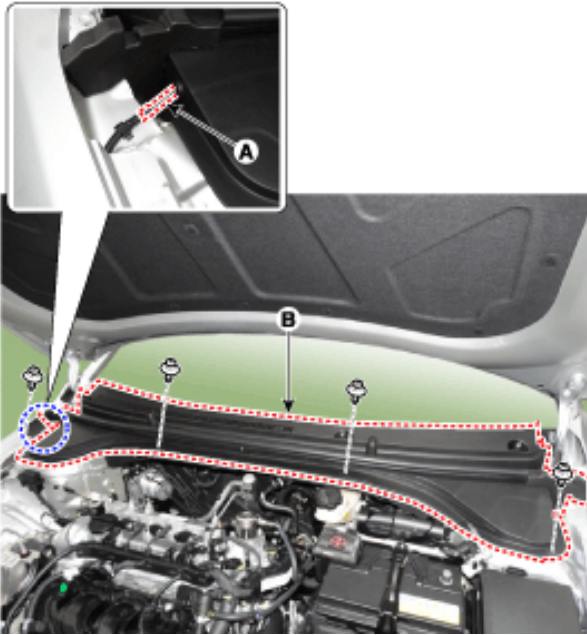

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).  
Replace any damaged clips (or pin-type retainers).



# Information

- Replace any damaged clips (or pin-type retainers).