

Component Procedures: Rear Door Panel


Table of Contents

1. Rear Door Trim - Components and Components Location (Article 44954)
2. Rear Door Trim - Repair Procedures (Article 44956)

Component Procedures: Rear Door Panel

Rear Door Trim - Components and Components Location (Article 44954)

- Component Location

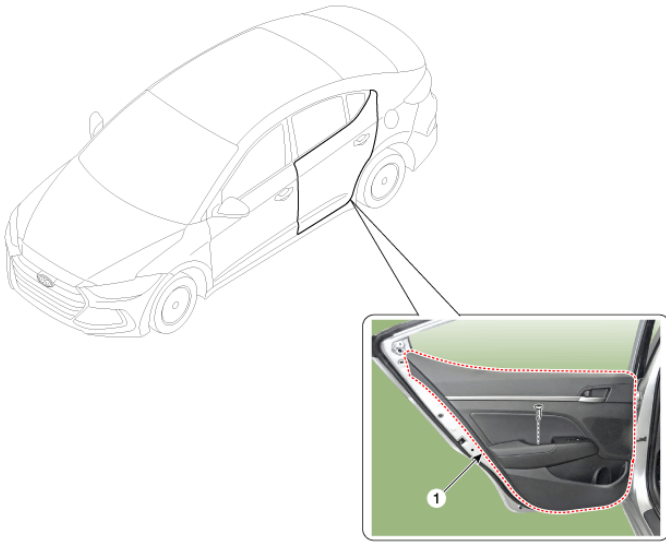

1. Rear door trim

Rear Door Trim - Repair Procedures (Article 44956)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Be careful not to scratch the door trim and other parts.




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Be careful not to scratch the door trim and other parts.


- Using a screwdriver or remover, remove the rear door delta inner cover (A).

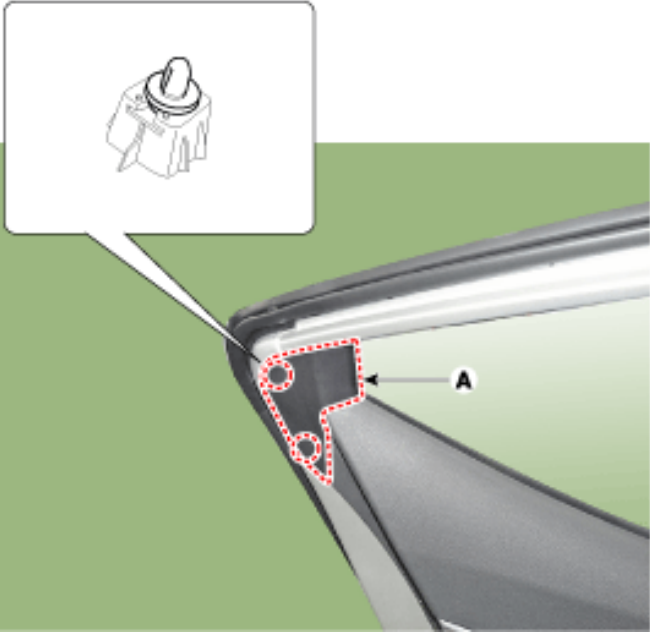


- After loosening the mounting screws, remove the rear door trim (A).

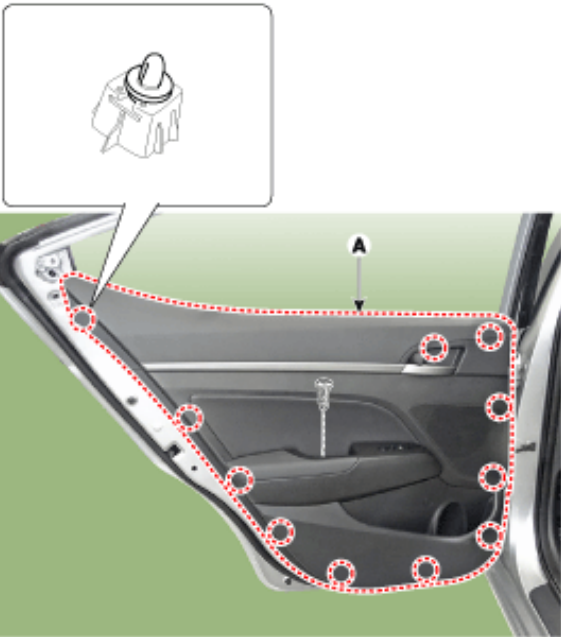

- Remove the rear door inside handle cage (A).

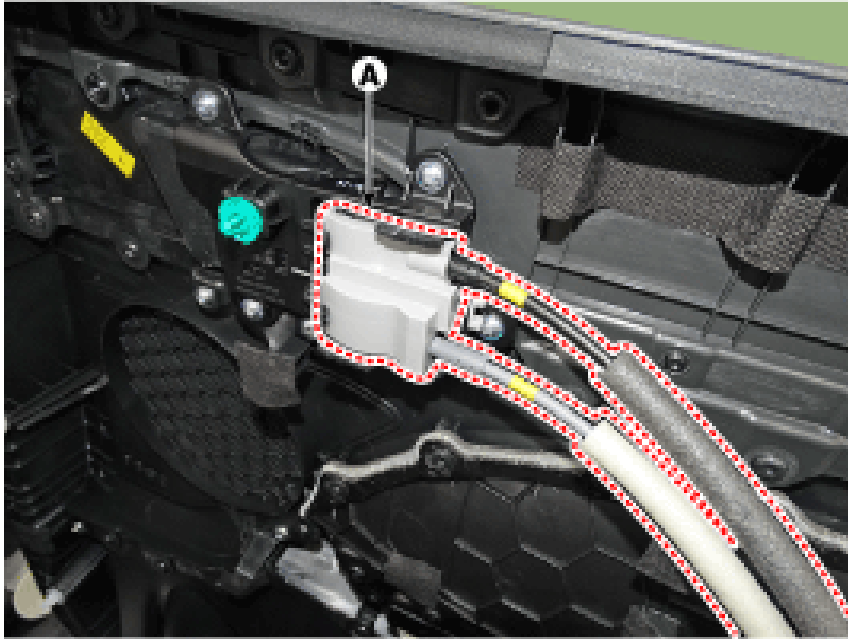

- Disconnect the power window switch connector (A).

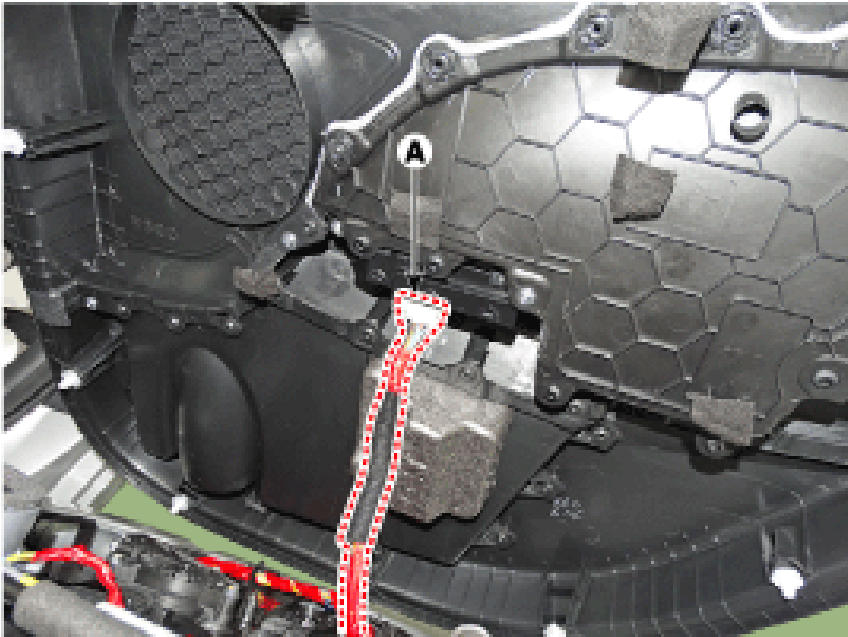

- To install, reverse the removal procedure. Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers). Make sure the glass moves properly.
Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers). Make sure the glass moves properly.



Information

- Make sure the connector is connected properly.
- Make sure the door locks / unlocks and opens / closes properly.

- Replace any damaged clips (or pin-type retainers).
- Make sure the glass moves properly.