

Component Procedures: Rear Door Latch

Table of Contents

1. Parts and Labor (itype_189)
2. Rear Door Latch - Components and Components Location (Article 44972)
3. Rear Door Latch - Repair Procedures (Article 44974)

Component Procedures: Rear Door Latch


Parts and Labor (itype_189)

Labor

Operation	Qualifier Path	Skill	Std Hrs	Wty Hrs
Remove & Replace	Rear Door > Lock, R&R > One Side	B	0.9	0.0

Rear Door Latch - Components and Components Location (Article 44972)


- Component Location

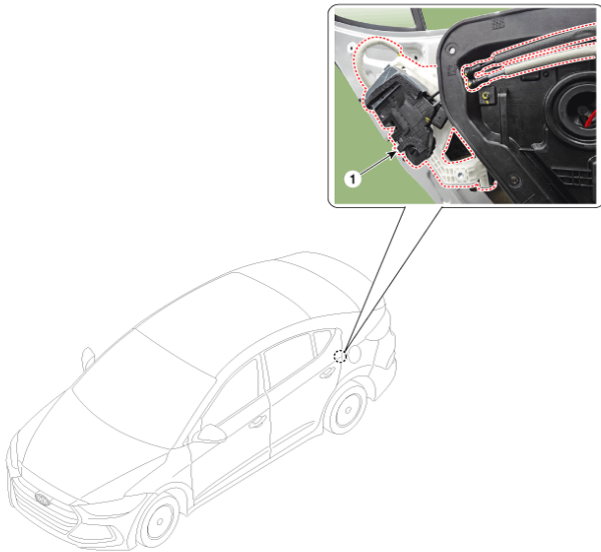


1. Rear door latch

Rear Door Latch - Repair Procedures (Article 44974)


- Replacement
- Remove the rear door module. (Refer to Rear Door - "Rear Door Module")
- Remove the rear door inside handle cage (A).

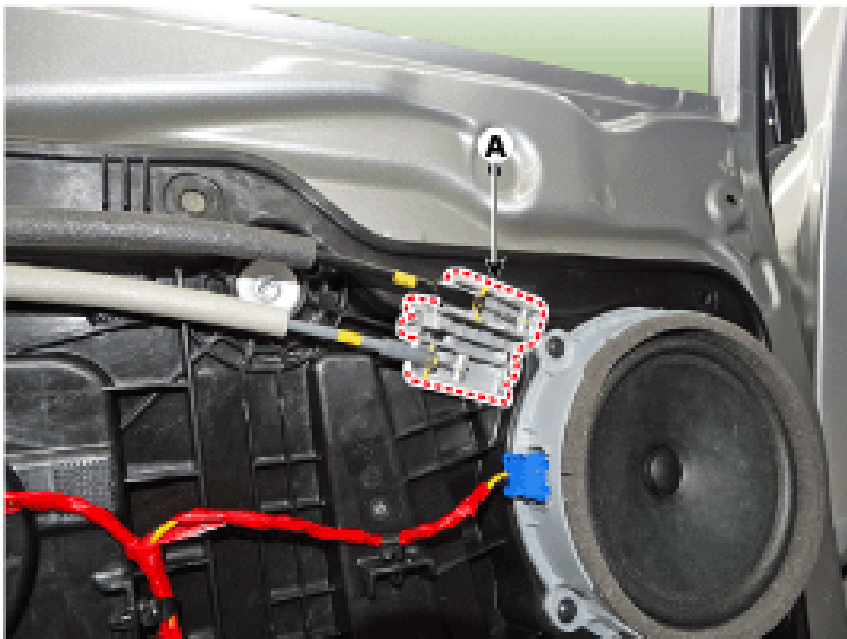


- Disconnect the rear door latch connector (A).

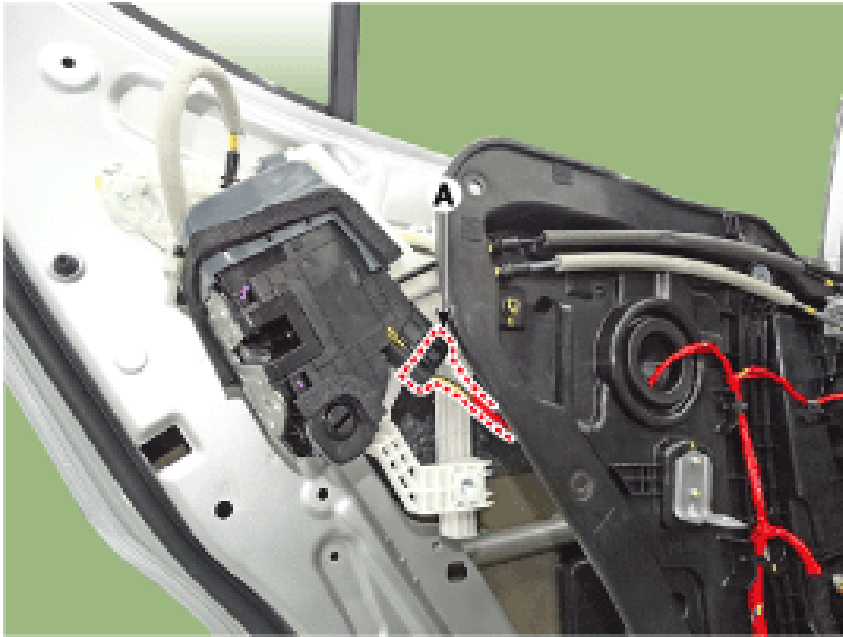


- Loosen the mounting bolt and remove the rear door latch (A).

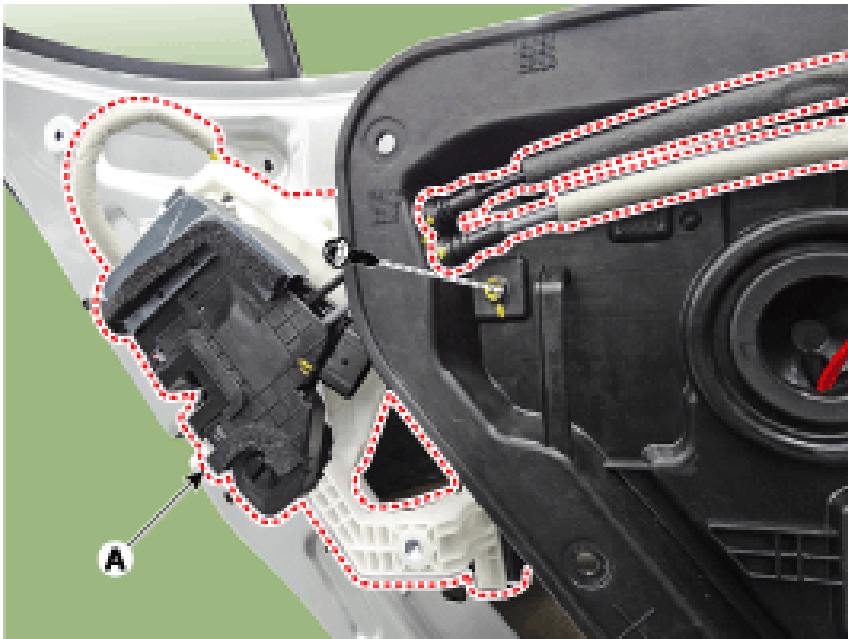

- Remove the rear door outside handle base (A) by pushing in the lock pins located in the back.

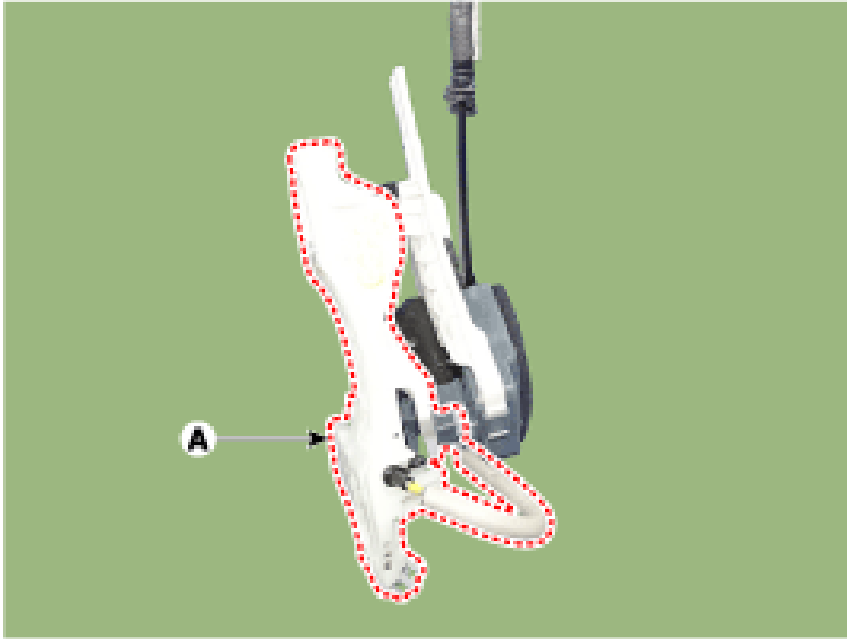

- Remove the rear door outside handle cable (A).

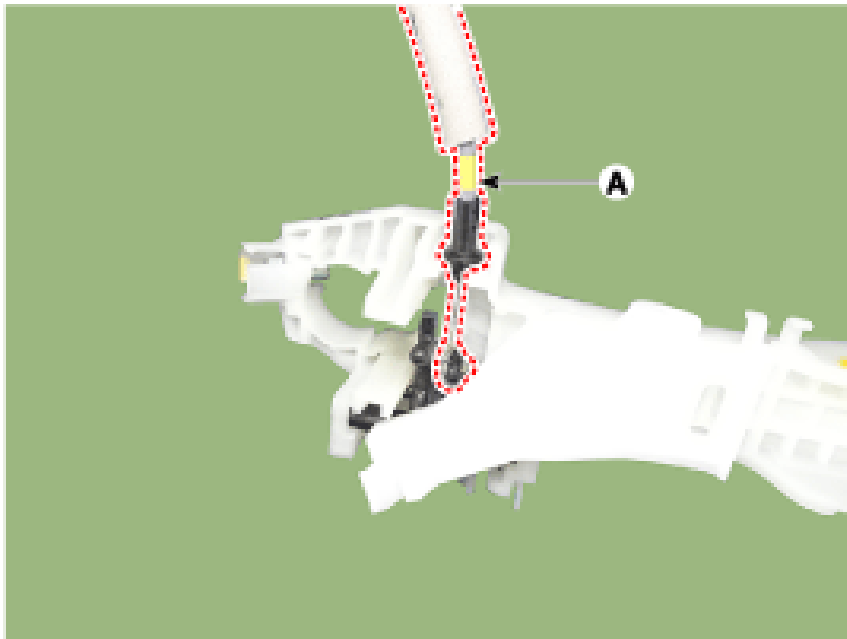

- To install, reverse the removal procedure. Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers).
Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers).



Information

- Make sure the connector is connected properly.
- Make sure the door locks / unlocks and opens / closes properly.
- Replace any damaged clips (or pin-type retainers).