

Component Procedures: Rear Door Interior Handle


Table of Contents

1. Rear Door Inside Handle - Repair Procedures (Article 44958)


Component Procedures: Rear Door Interior Handle

Rear Door Inside Handle - Repair Procedures (Article 44958)

- Replacement
- Remove the rear door trim.
- After loosening the mounting screws, remove the rear door inside handle (A).

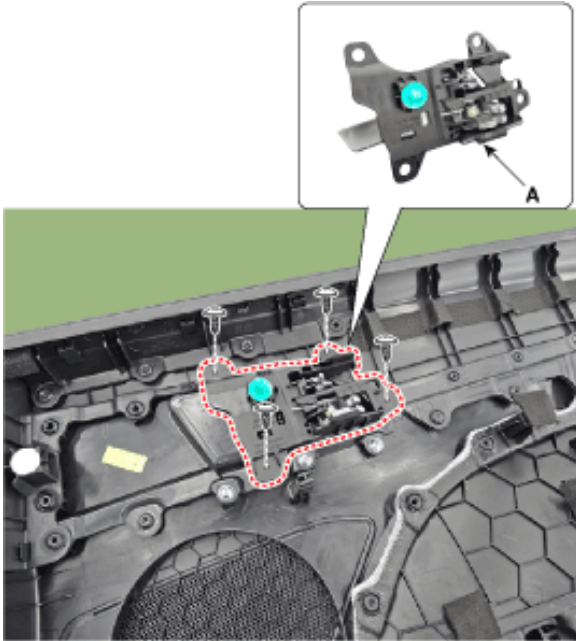

- To install, reverse the removal procedure. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers). Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers).

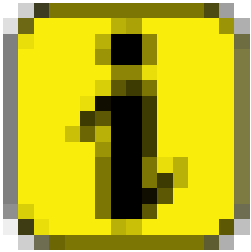

Information

- Make sure the door locks / unlocks and opens / closes properly.
- Replace any damaged clips (or pin-type retainers).