

Component Procedures: Rear Door Exterior Handle


Table of Contents

1. Rear Door Outside Handle - Components and Components Location (Article 44968)
2. Rear Door Outside Handle - Repair Procedures (Article 44970)

Component Procedures: Rear Door Exterior Handle

Rear Door Outside Handle - Components and Components Location (Article 44968)


- Component Location

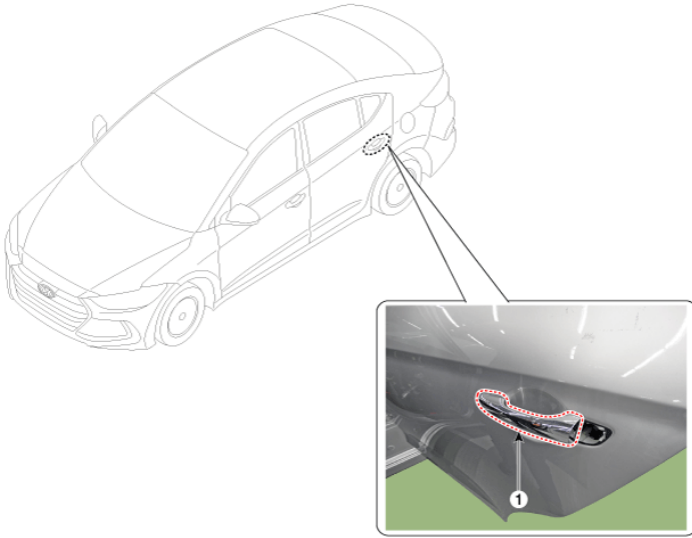


1. Rear door outside handle

Rear Door Outside Handle - Repair Procedures (Article 44970)


- Replacement
- Remove the plug hole (B).
- After loosening the mounting bolt, remove the front door lock (A). Tightening torque : 7.8 - 10.8 N.m (0.8 - 1.1 kgf.m, 5.8 - 8.0 lb-ft)

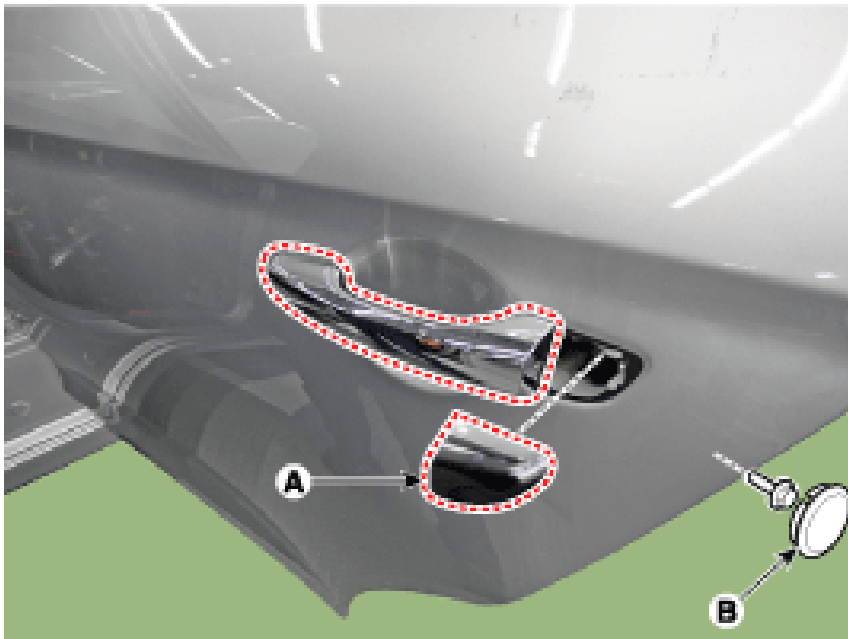

- Remove the rear door outside handle (A) by pushing it in the direction of arrow.

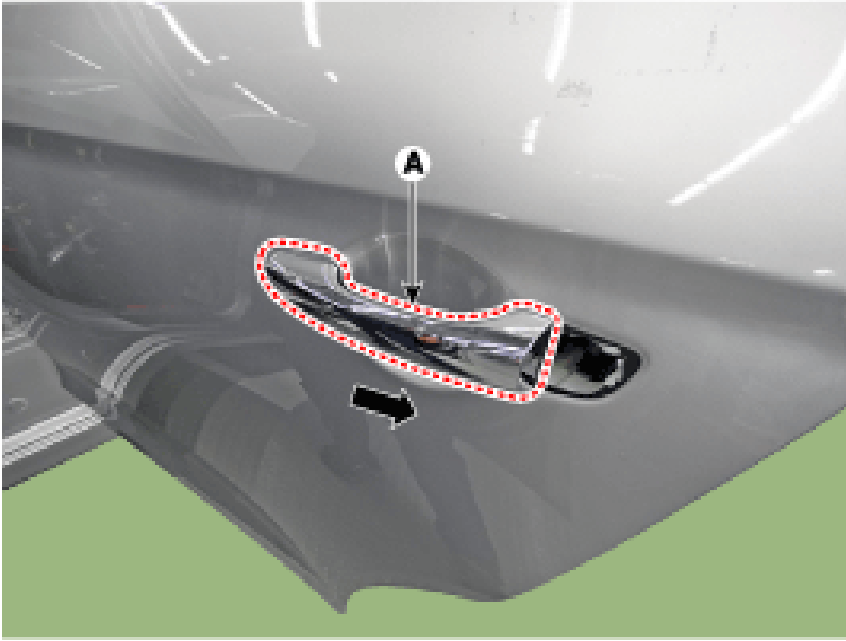

- To install, reverse the removal procedure. Make sure the door locks / unlocks and opens / closes properly. Be sure to install the outside handle pad (A) between the outside handle and the door panel. Make sure the door locks / unlocks and opens / closes properly. Be sure to install the outside handle pad (A) between the outside handle and the door panel.

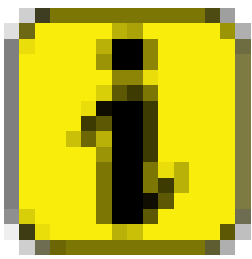

Information

- Make sure the door locks / unlocks and opens / closes properly.
- Be sure to install the outside handle pad (A) between the outside handle and the door panel.

