

Component Procedures: Front Door Latch


Table of Contents

1. Front Door Latch - Components and Components Location (Article 45138)
2. Front Door Latch - Repair Procedures (Article 45139)

Component Procedures: Front Door Latch

Front Door Latch - Components and Components Location (Article 45138)


- Component Location

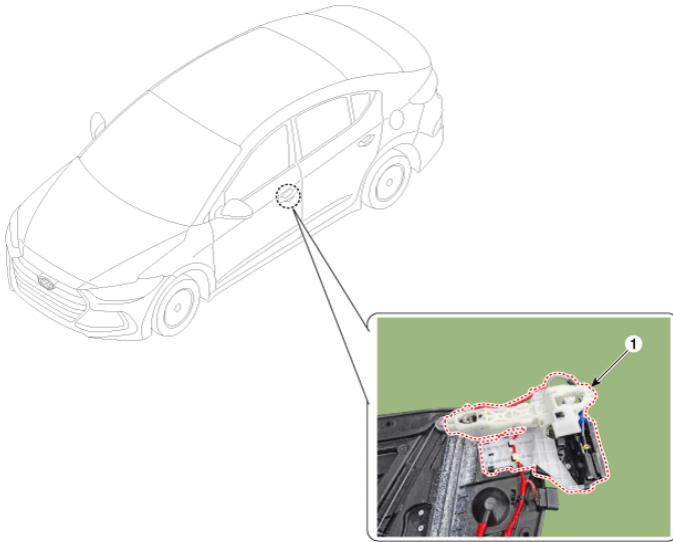


1. Front door latch

Front Door Latch - Repair Procedures (Article 45139)


- Replacement
- Remove the front door module. (Refer to Front Door - "Front Door Module")
- Remove the front door inside handle cage (A).

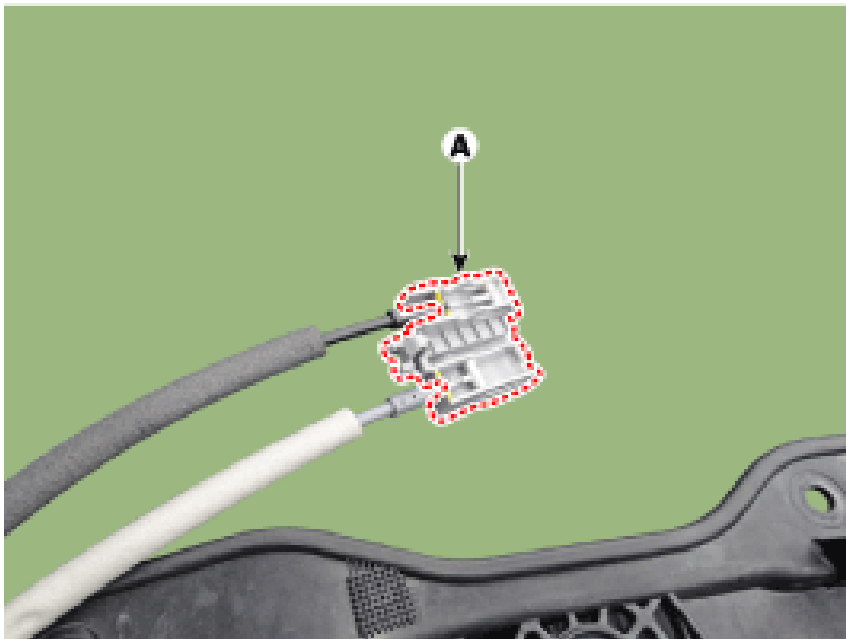


- Disconnect the front door latch connector (A).

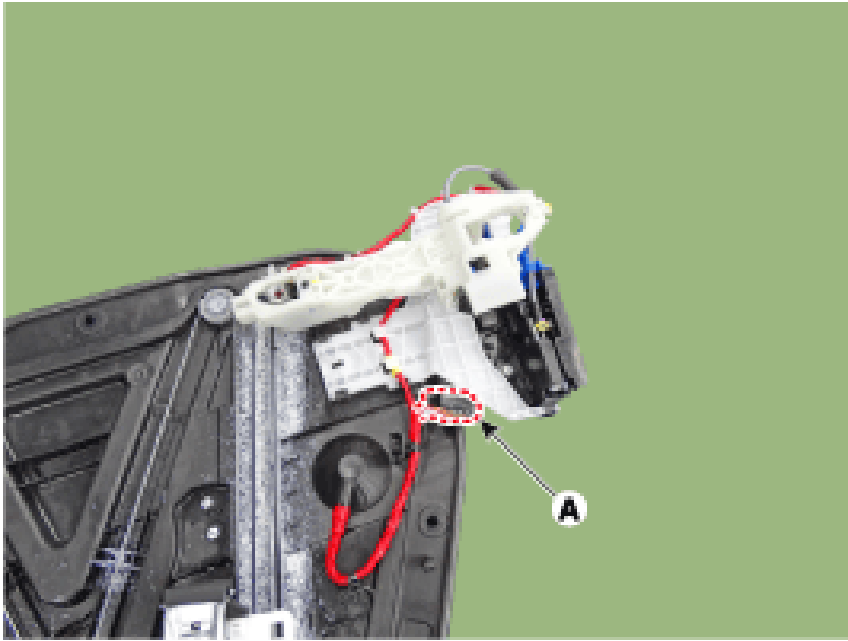


- Remove the front door latch assembly (A) by pulling it in the direction of the arrow.

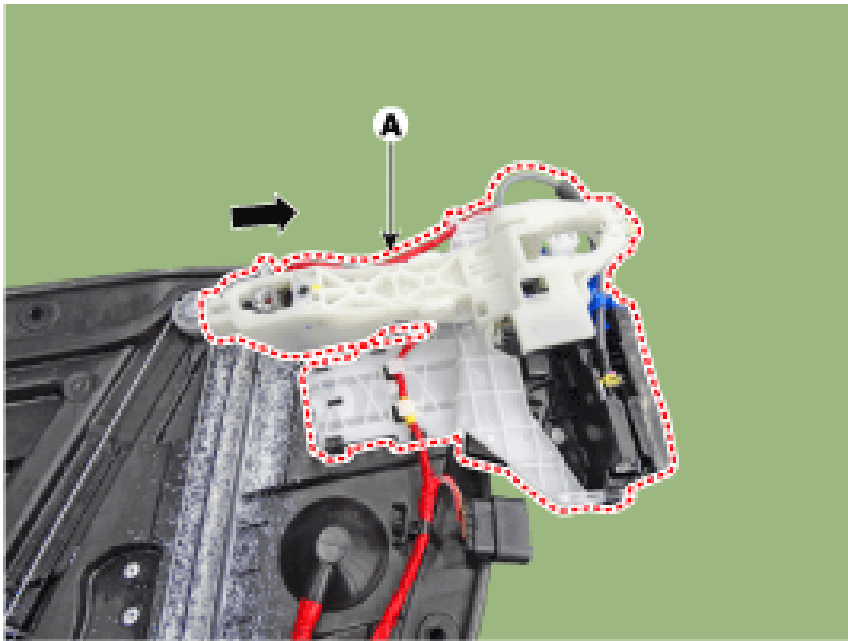


- To remove the front door outside handle base connector (A), widen both sides of the wiring fastener and then push back the front door outside handle base connector.

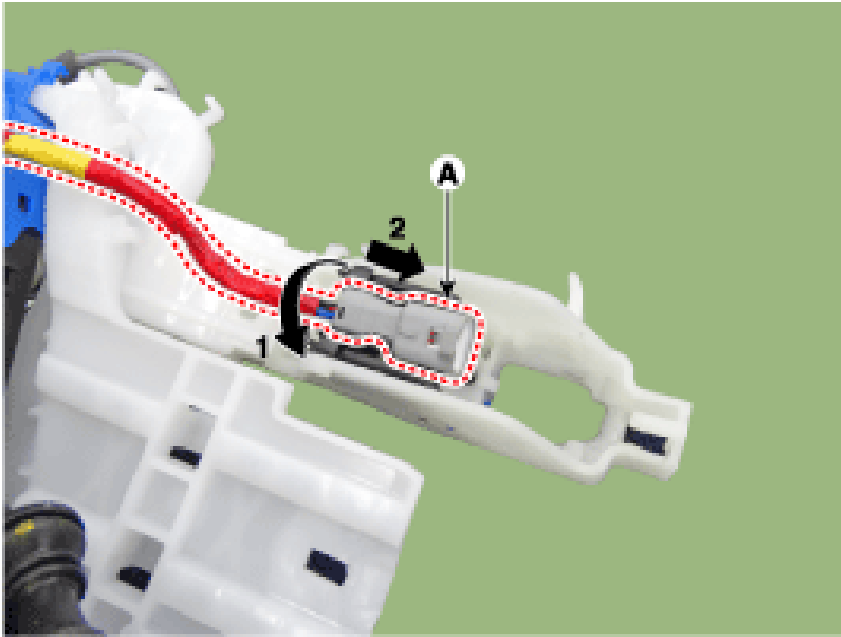


- Remove the front door outside handle connector wiring harness (A).

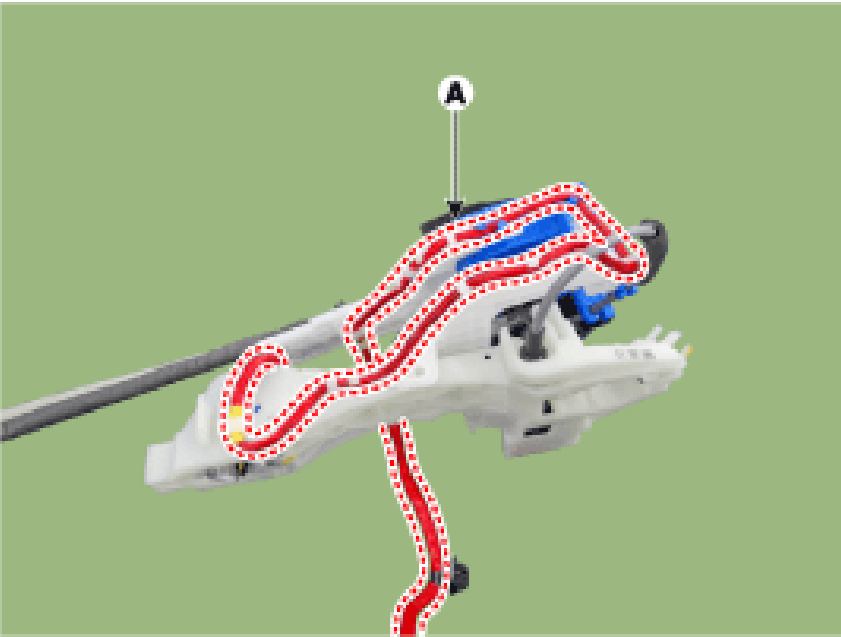

- Remove the front door outside handle base (A) by pushing in the lock pins located in the back.

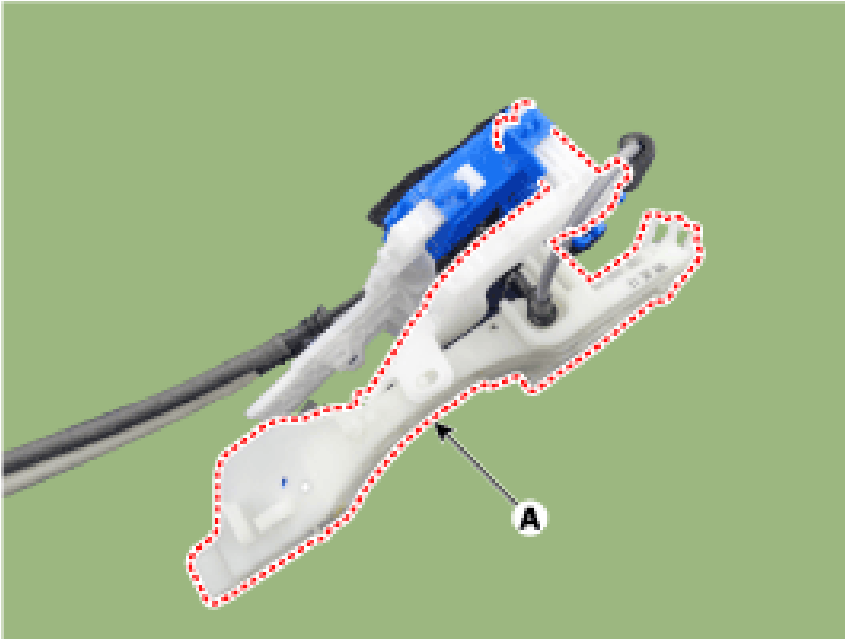

- Remove the front door outside handle cable (A).

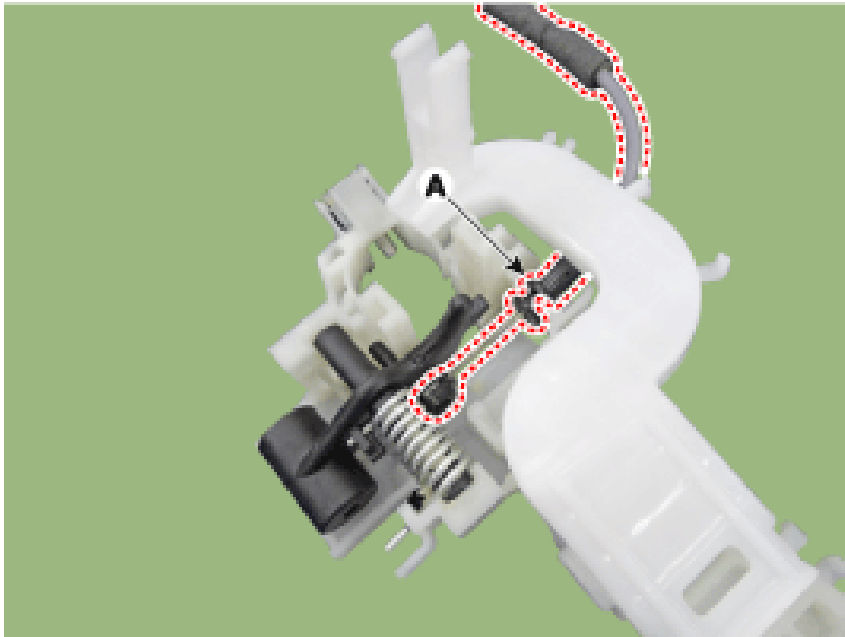

- To install, reverse the removal procedure. Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers).
Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers).



Information

- Make sure the connector is connected properly.
- Make sure the door locks / unlocks and opens / closes properly.
- Replace any damaged clips (or pin-type retainers).