

# **Component Procedures: Front Door Interior Handle**


## **Table of Contents**

1. Front Door Inside Handle - Repair Procedures (Article 45143)

## Component Procedures: Front Door Interior Handle

### Front Door Inside Handle - Repair Procedures (Article 45143)

- Replacement
- Remove the front door trim . (Refer to Front Door - "Front Door Trim")
- After loosening the mounting screws, remove the front door inside handle (A).

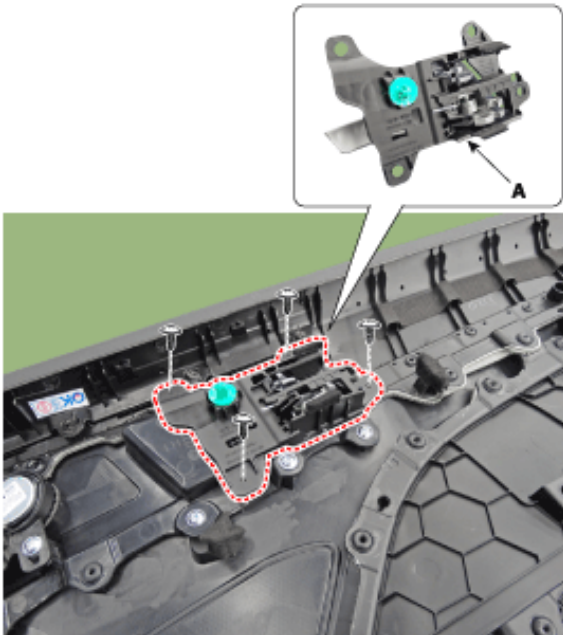

- To install, reverse the removal procedure. Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers). Make sure the door locks / unlocks and opens / closes properly. Replace any damaged clips (or pin-type retainers).

# NOTICE

- Make sure the door locks / unlocks and opens / closes properly.
- Replace any damaged clips (or pin-type retainers).