

Component Procedures: Front Door Exterior Handle


Table of Contents

1. Front Door Outside Handle - Components and Components Location (Article 45148)
2. Front Door Outside Handle - Repair Procedures (Article 45149)

Component Procedures: Front Door Exterior Handle

Front Door Outside Handle - Components and Components Location (Article 45148)


- Component Location

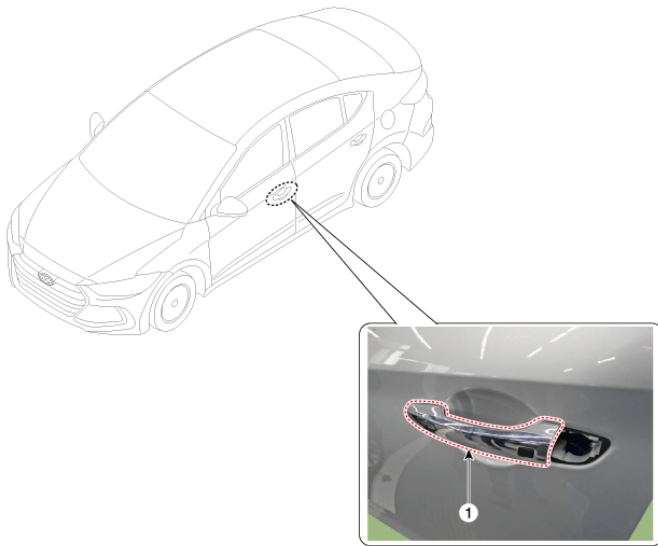


1. Front door outside handle

Front Door Outside Handle - Repair Procedures (Article 45149)

- Replacement
- Remove the plug hole (B).
- After loosening the mounting bolt, remove the front door lock assembly (A). Tightening torque : 7.8 - 10.8 N.m (0.8 - 1.1 kgf.m, 5.8 - 8.0 lb-ft)

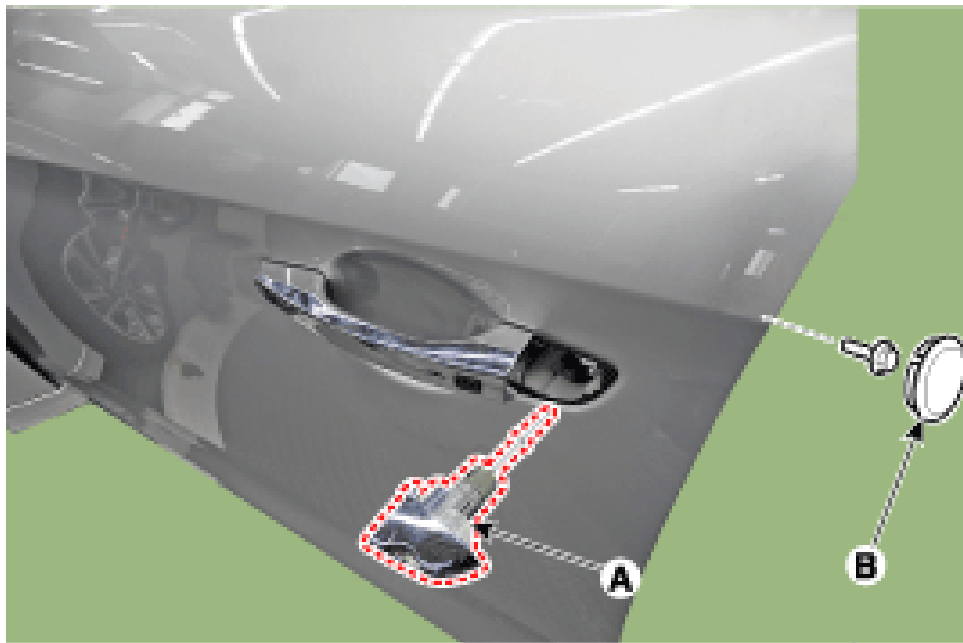

- Remove the front door outside handle (A) by sliding it forward.

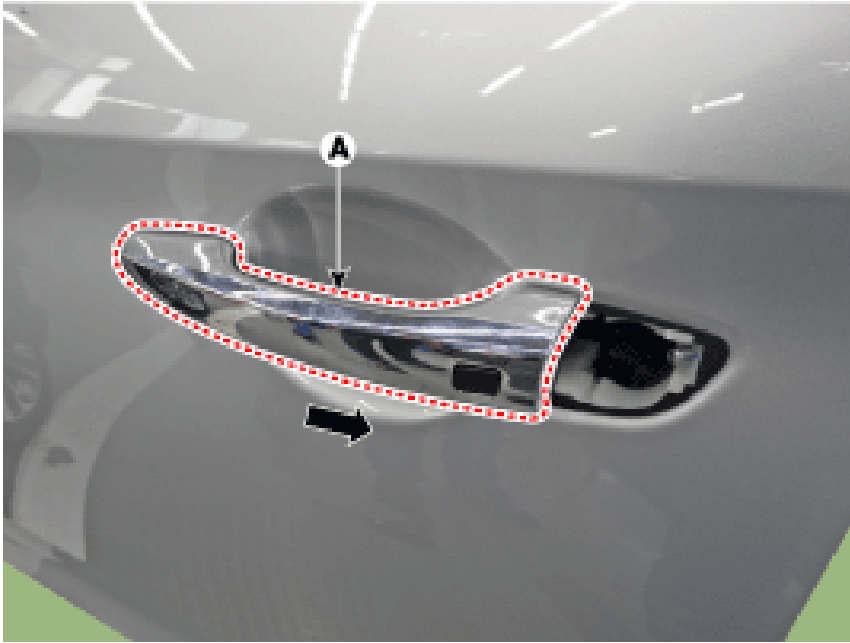


- Disconnect the front door outside handle connector (A) by pushing the locking pin.



- To install, reverse the removal procedure. Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Be sure to install the outside handle pad (A) between the outside handle and the door panel.

Make sure the connector is connected properly. Make sure the door locks / unlocks and opens / closes properly. Be sure to install the outside handle pad (A) between the outside handle and the door panel.

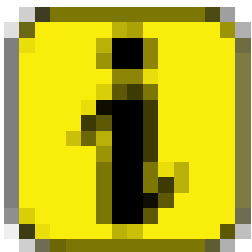

Information

- Make sure the connector is connected properly.
- Make sure the door locks / unlocks and opens / closes properly.

- Be sure to install the outside handle pad (A) between the outside handle and the door panel.

