

Component Procedures: Rear Bumper Reinforcement


Table of Contents

1. Rear Bumper Beam Assembly - Components and Components Location (Article 45068)
2. Rear Bumper Beam Assembly - Repair Procedures (Article 45069)

Component Procedures: Rear Bumper Reinforcement

Rear Bumper Beam Assembly - Components and Components Location (Article 45068)

- Component Location

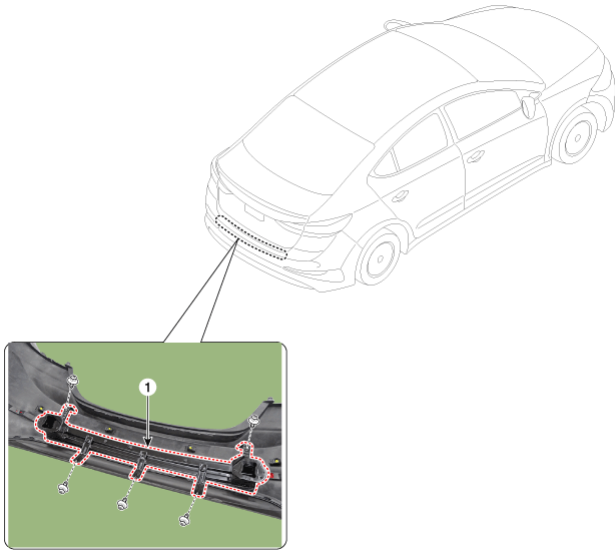

1. Rear bumper beam assembly

Rear Bumper Beam Assembly - Repair Procedures (Article 45069)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.




- When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.


- Take care not to bend or scratch the trim and panels.

- Remove the rear bumper cover. (Refer to Rear Bumper - "Rear Bumper Cover")


- Disconnect the rear bumper beam mounting wiring harness (A).

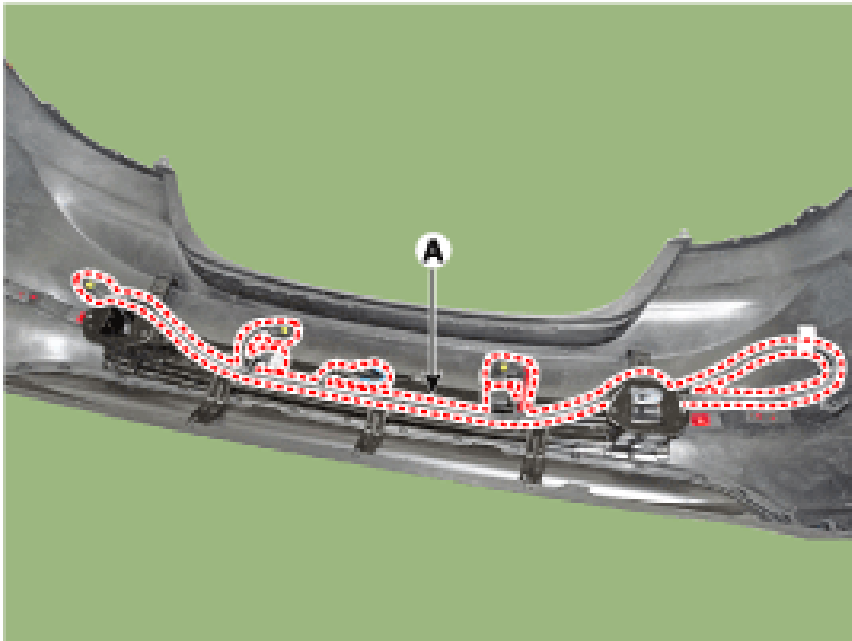

- Loosen the mounting bolts and remove the smart key antenna (A).

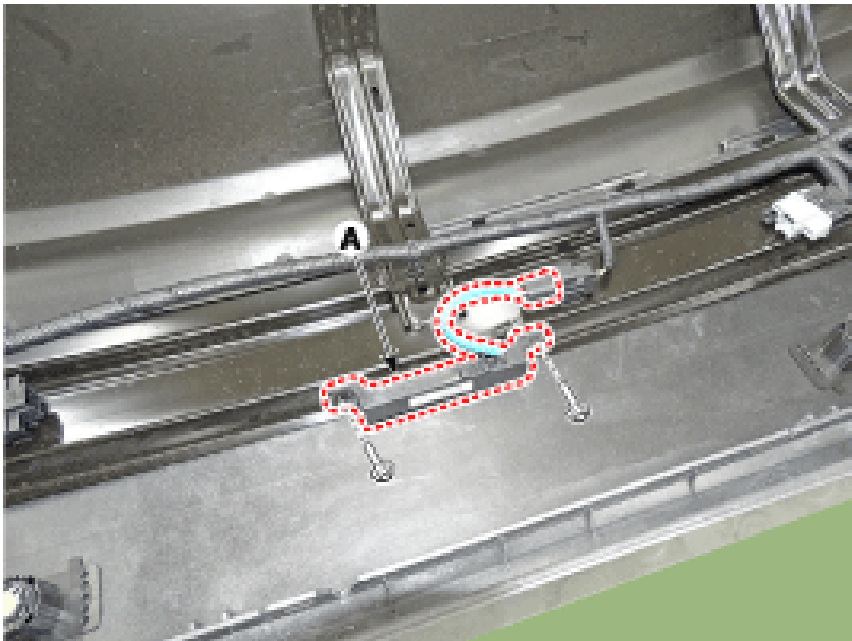


- After loosening the mounting clips, remove the rear bumper beam assembly (A).

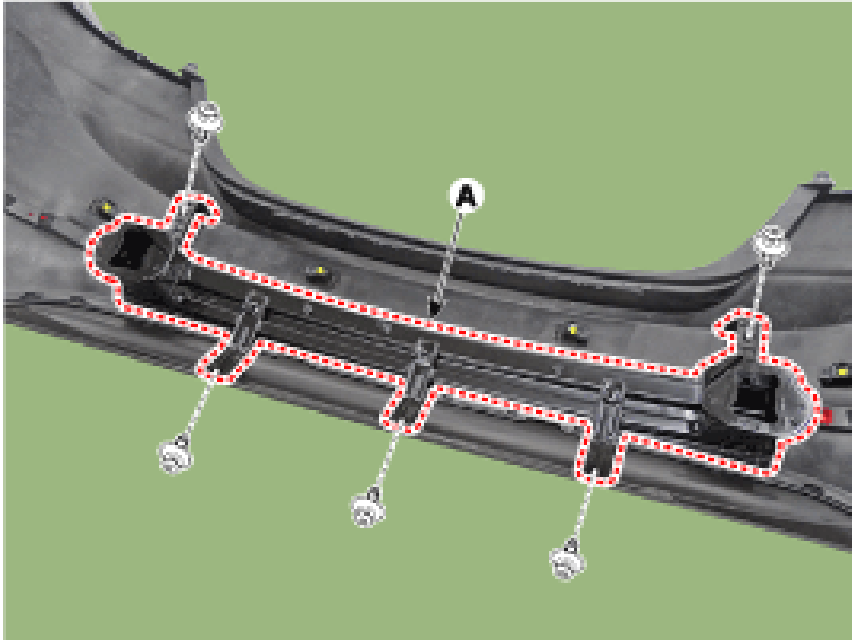

- To install, reverse the removal procedure. Make sure the connector is plugged in properly. Replace any damaged clips (or pin - type retainers).

Make sure the connector is plugged in properly. Replace any damaged clips (or pin - type retainers).

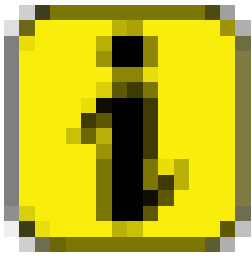

Information

- Make sure the connector is plugged in properly.
- Replace any damaged clips (or pin - type retainers).