

# **Component Procedures: Rear Bumper Cover / Fascia**

## **Table of Contents**

1. Parts and Labor (itype\_189)
2. Rear Bumper Cover - Components and Components Location (Article 45066)
3. Rear Bumper Cover - Repair Procedures (Article 45067)

# Component Procedures: Rear Bumper Cover / Fascia



## Parts and Labor (itype\_189)

### Labor

| Operation        | Qualifier Path             | Skill | Std Hrs | Wty Hrs |
|------------------|----------------------------|-------|---------|---------|
| Remove & Install | Bumper > Cover, R&I > Rear | C     | 2.4     | 0.0     |

## Rear Bumper Cover - Components and Components Location (Article 45066)

- Component Location

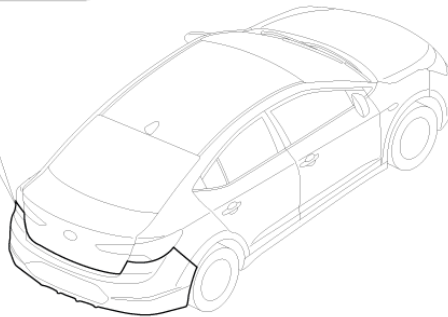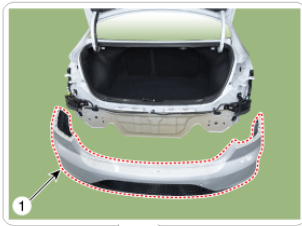

1. Rear bumper cover

## Rear Bumper Cover - Repair Procedures (Article 45067)

- Replacement

[General type]

Put on gloves to prevent hand injuries.




- Put on gloves to prevent hand injuries.

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.


# NOTICE

- When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
- When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
- Take care not to bend or scratch the trim and panels.
- Remove the combination lamp cover (A).

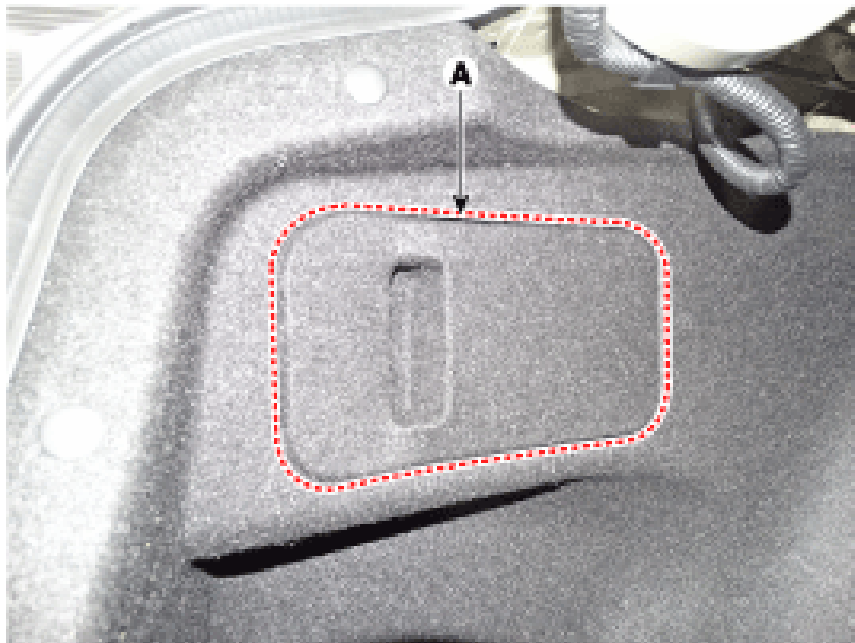

- Disconnect the mounting nuts and rear combination lamp connector (A).




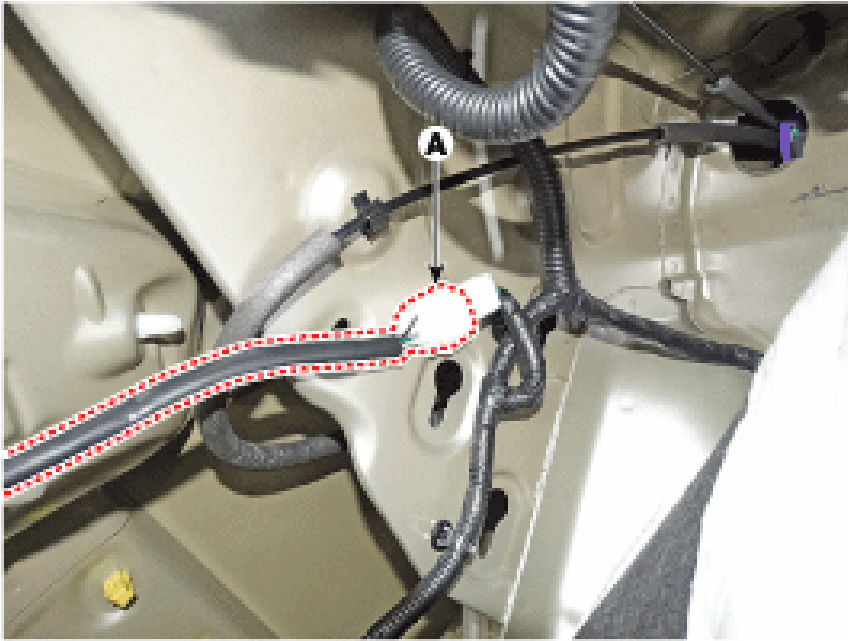


- Remove the rear combination lamp (A).




- After loosening the pin - type retainers and screws on the side of rear bumper (A), detach the side part of rear bumper . Be careful not to damage the tabs on the side part of front bumper .  
Be careful not to damage the tabs on the side part of front bumper .  
- Be careful not to damage the tabs on the side part of front bumper .

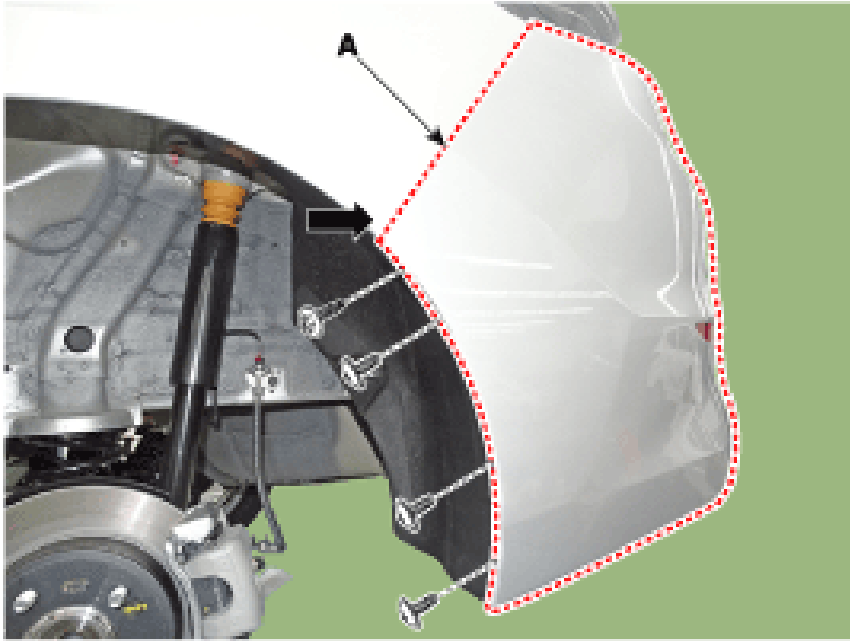


- Loosen the mounting clips and nuts, remove the rear bumper retainer cover (A).

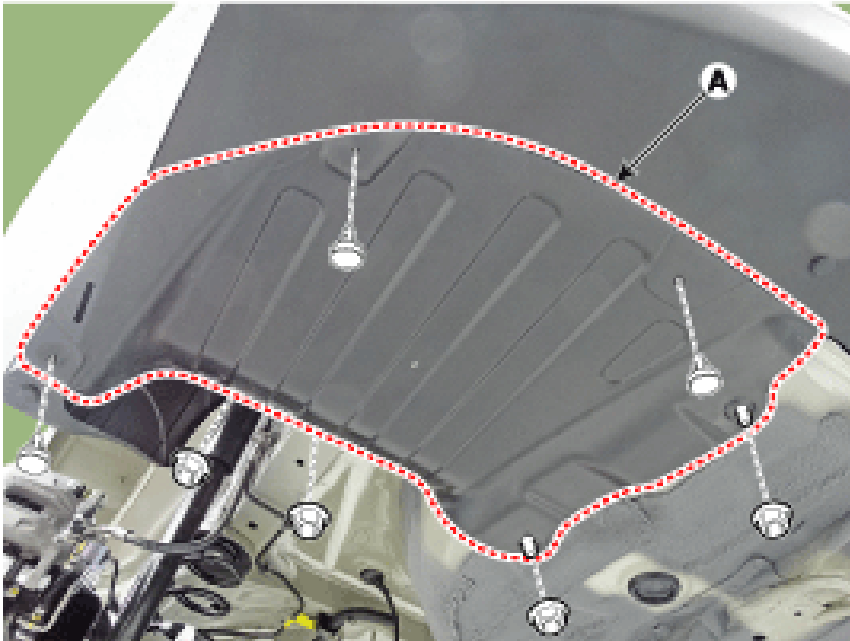


- Loosen the mounting bolts.

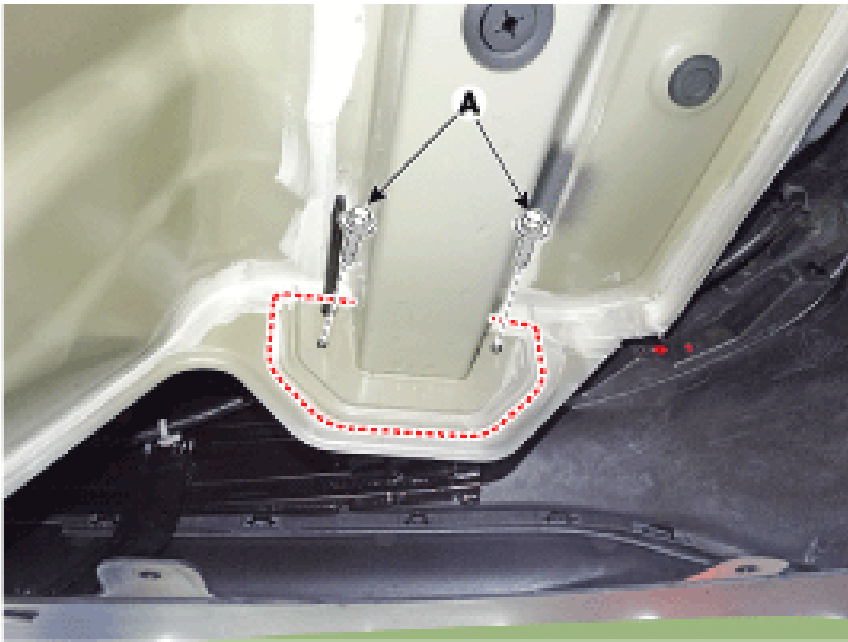

- Remove the rear bumper cover (A).

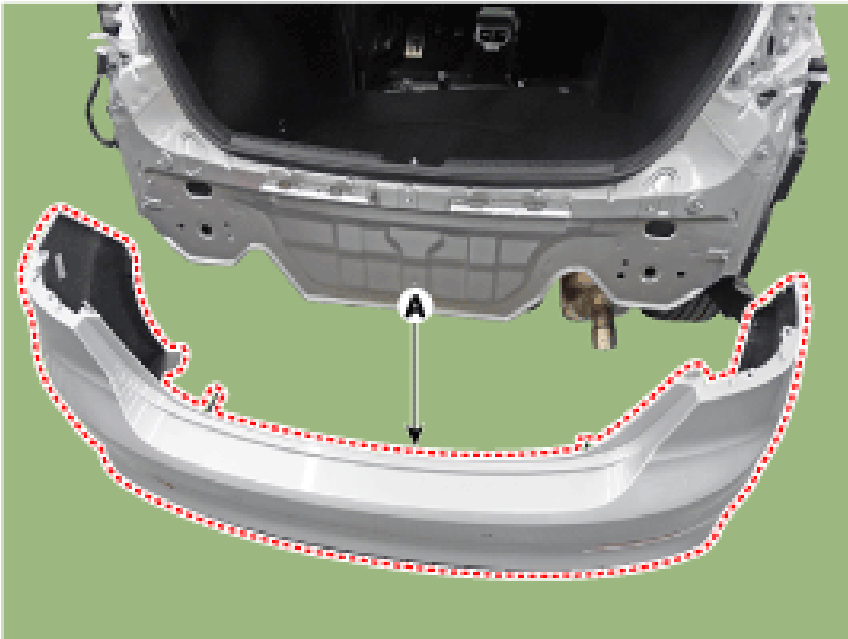


- Disconnect the rear bumper connector (A).

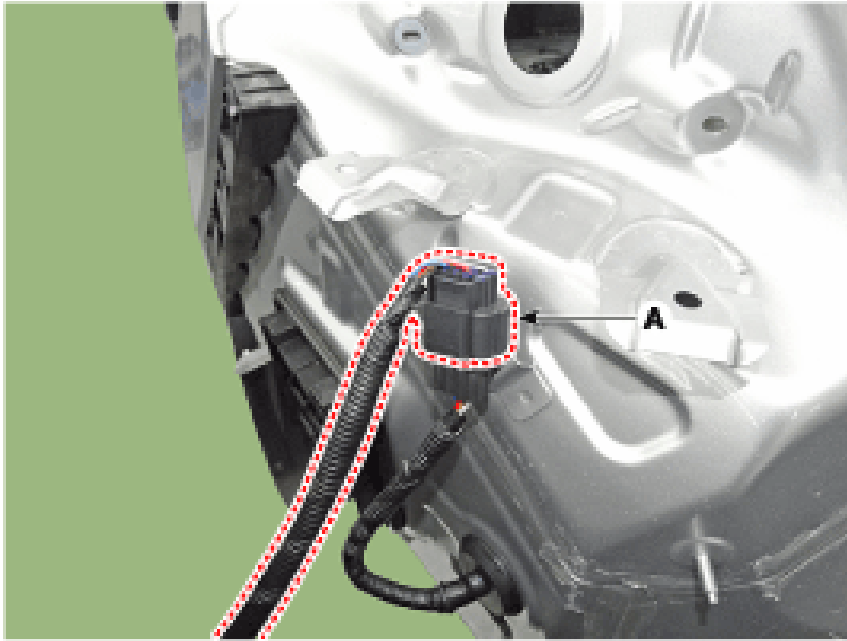

- To install, reverse the removal procedure. Make sure the connector is plugged in properly. Replace any damaged clips (or pin - type retainers).

Make sure the connector is plugged in properly. Replace any damaged clips (or pin - type retainers).

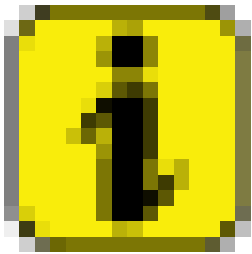

# Information

- Make sure the connector is plugged in properly.
- Replace any damaged clips (or pin - type retainers).