

Component Procedures: Sunroof / Moonroof Switch


Table of Contents

1. Sunroof Switch - Repair Procedures (Article 44639)


Component Procedures: Sunroof / Moonroof Switch

Sunroof Switch - Repair Procedures (Article 44639)

- Inspection
- Disconnect the negative (-) battery terminal.
- Open the sunglass case cover from the overhead console and remove the 2 screws holding the overhead console
- Disconnect the switch connector and Map lamp connector, and then remove the overhead console lamp (A).

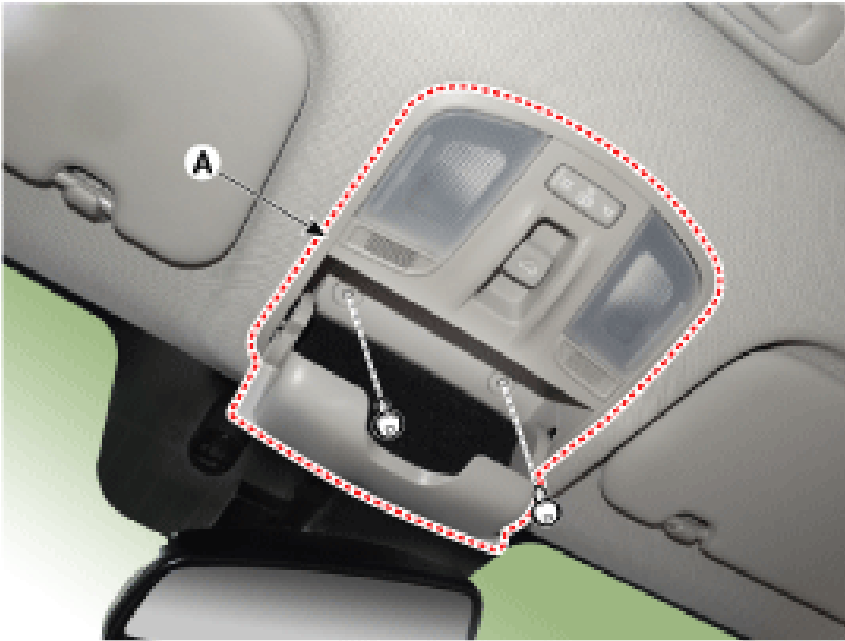

- Check for continuity between the terminals.

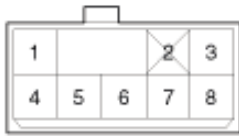

Terminal Position	1	5	6	7
Tilt up	○			○
Manual close / Tilt close	○		○	
Manual open	○	○		
Auto open	○	○	○	
Auto close	○		○	○