

Component Procedures: Underbody Cover


Table of Contents

1. Engine Room Under Cover - Repair Procedures (Article 45317)

Component Procedures: Underbody Cover

Engine Room Under Cover - Repair Procedures (Article 45317)

- Removal and Installation
Engine Room Under Cover
- Remove the engine room under cover (A). Tightening torque : 3.9 - 5.9 N.m (0.4 - 0.6 kgf.m, 2.9 - 4.3 lb-ft)

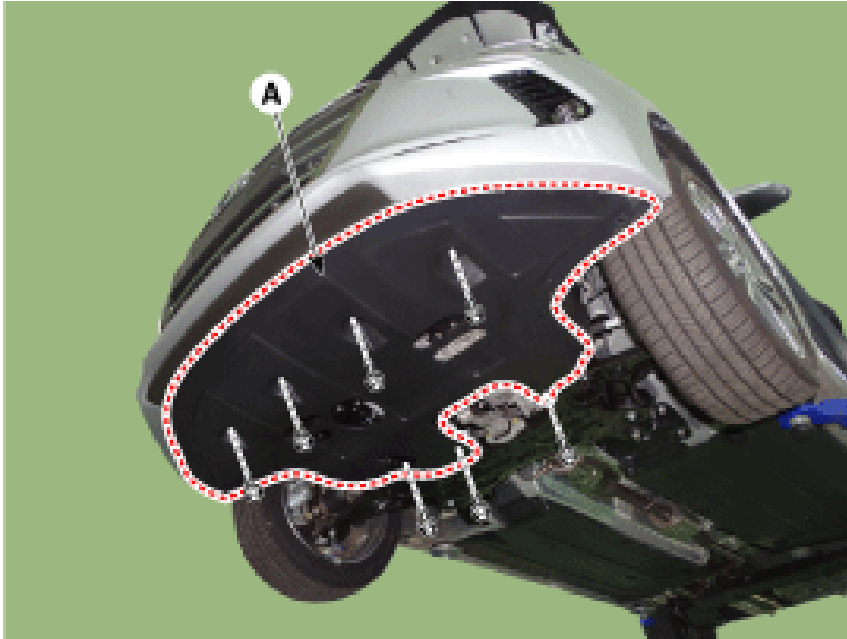

- Install in the reverse order of removal.