

Component Procedures: Hood Insulator / Pad

Table of Contents

1. Hood Insulator Pad - Repair Procedures (Article 45121)


Component Procedures: Hood Insulator / Pad

Hood Insulator Pad - Repair Procedures (Article 45121)

- Replacement
 - Using a clip remover, remove the clips and then the hood insulator pad (A). Be careful not to scratch the hood panel.
- Be careful not to scratch the hood panel.

NOTICE

- Be careful not to scratch the hood panel.

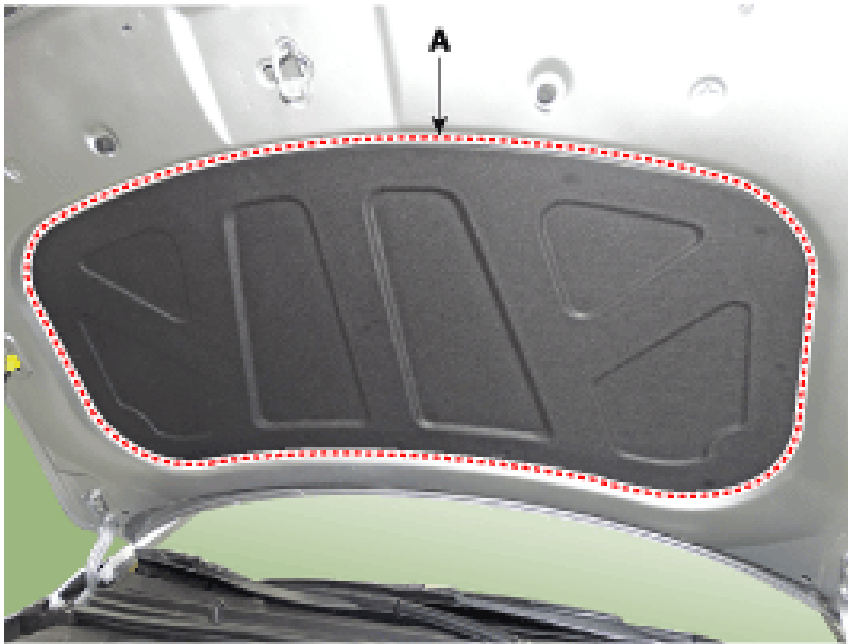

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
- Replace any damaged clips (or pin-type retainers).



Information

- Replace any damaged clips (or pin-type retainers).