

Component Procedures: Front Door Weatherstrip


Table of Contents

1. Front Door Belt Inside Weatherstrip - Repair Procedures (Article 45151)
2. Front Door Belt Outside Weatherstrip - Repair Procedures (Article 45150)
3. Front Door Side Weatherstrip - Repair Procedures (Article 45137)

Component Procedures: Front Door Weatherstrip

Front Door Belt Inside Weatherstrip - Repair Procedures (Article 45151)

- Replacement
- Remove the front door trim . (Refer to Front Door - "Front Door Trim")
- Remove the front door belt inside weatherstrip (A).

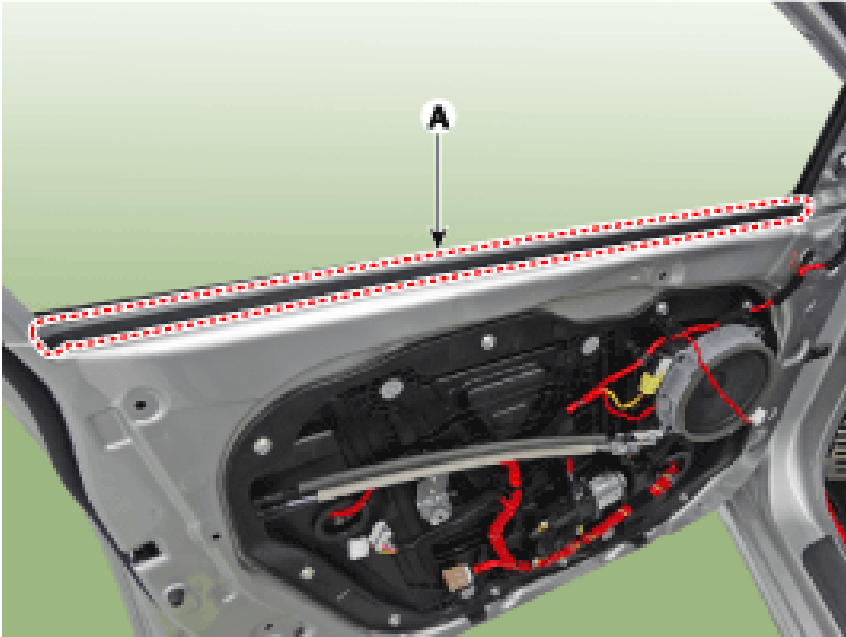

- To install, reverse the removal procedure. When installing, install it by first contacting the inside part (basis point of assembly) of arrow to door frame . Replace any damaged clips (or pin-type retainers).
When installing, install it by first contacting the inside part (basis point of assembly) of arrow to door frame . Replace any damaged clips (or pin-type retainers).




Information


- When installing, install it by first contacting the inside part (basis point of assembly) of arrow to door frame .
- Replace any damaged clips (or pin-type retainers).

Front Door Belt Outside Weatherstrip - Repair Procedures (Article 45150)

- Replacement
- Pull down the front door window glass to the lowest level by pressing the power window glass switch.
- After loosening the mounting screws, remove the front door belt outside weatherstrip (A). Tightening torque : 1.0 - 2.0 N.m (0.1 - 0.2 kgf.m, 0.7 - 1.4 lb-ft)

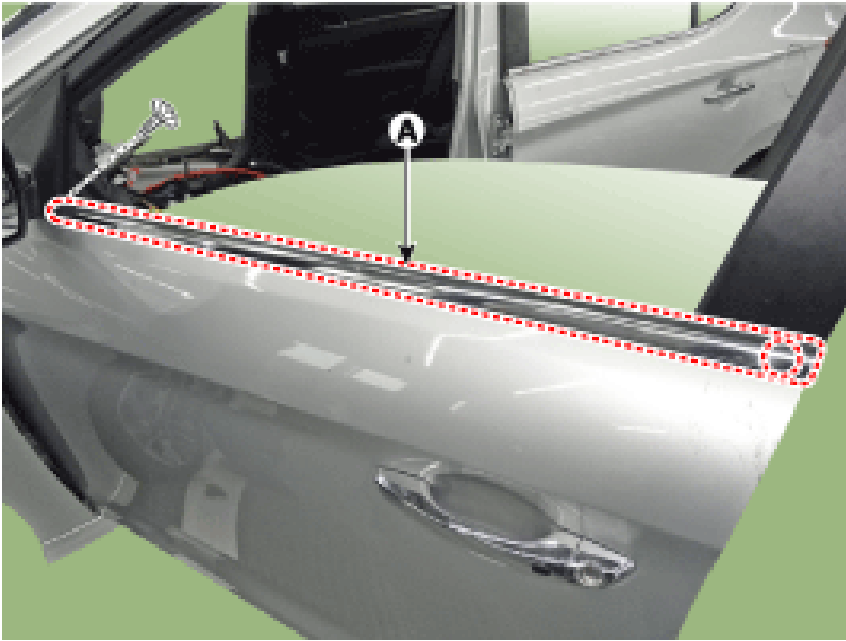

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).

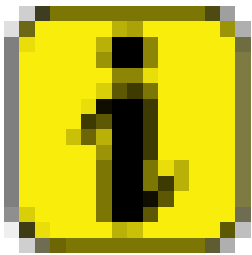


Information


- Replace any damaged clips (or pin-type retainers).

Front Door Side Weatherstrip - Repair Procedures (Article 45137)

- Replacement
[Front door side weatherstrip]
- Loosen the front door checker (B) mounting bolt. Tightening torque : 18.6 - 28.4 N.m (1.7 - 2.2 kgf.m, 13.7 - 21.0 lb-ft)
- Detach the clips, then remove the front door side weatherstrip (A).

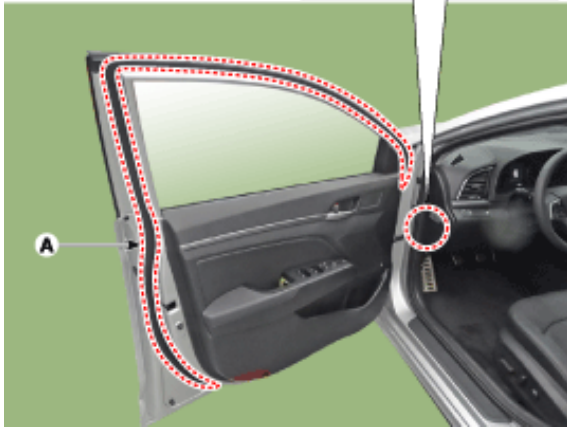

- To install, reverse the removal procedure. Replace any damaged clips (or pin-type retainers).
Replace any damaged clips (or pin-type retainers).

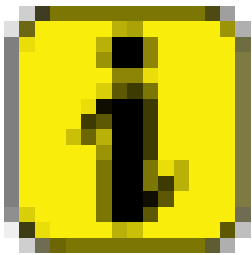

Information

- Replace any damaged clips (or pin-type retainers).
[Front door body side weatherstrip]
- Detach the clips, then remove the front door body side weatherstrip (A).

