

Component Procedures: Trunk / Liftgate Weatherstrip

Table of Contents

1. Trunk Lid Weatherstrip - Repair Procedures (Article 45133)


Component Procedures: Trunk / Liftgate Weatherstrip

Trunk Lid Weatherstrip - Repair Procedures (Article 45133)

- Replacement
- Remove the trunk lid weatherstrip (A). Do not apply sealant to the body.
Do not apply sealant to the body.

NOTICE

- Do not apply sealant to the body.

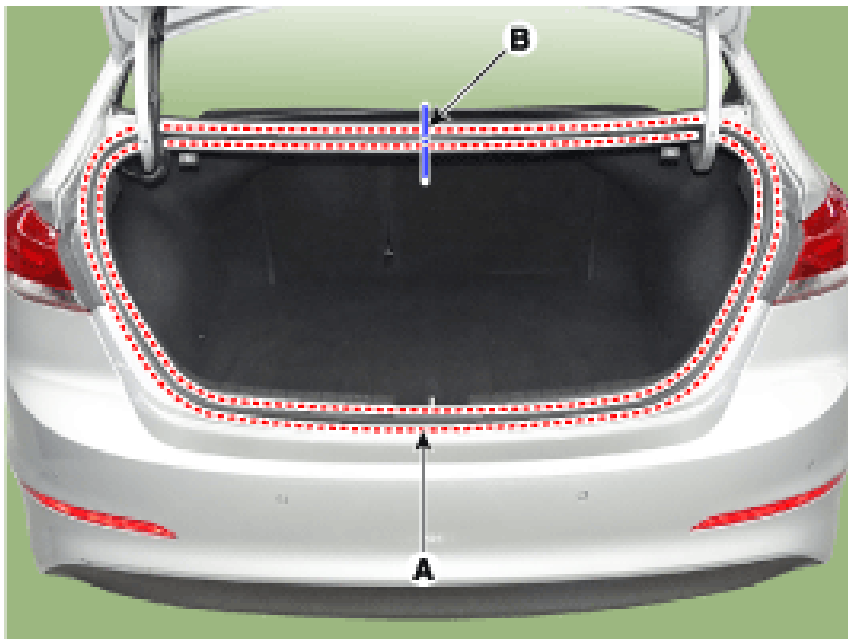

- To install, reverse the removal procedure. When installing the trunk lid weatherstrip, check the center-marking line (B)

When installing the trunk lid weatherstrip, check the center-marking line (B)



Information

- When installing the trunk lid weatherstrip, check the center-marking line (B)