

Component Procedures: Hood Weatherstrip

Table of Contents

1. Hood Weatherstrip - Repair Procedures (Article 45122)


Component Procedures: Hood Weatherstrip

Hood Weatherstrip - Repair Procedures (Article 45122)

- Replacement
- Remove the hood weatherstrip (A). Be careful not to scratch the hood weatherstrip .
Be careful not to scratch the hood weatherstrip .

NOTICE

- Be careful not to scratch the hood weatherstrip .

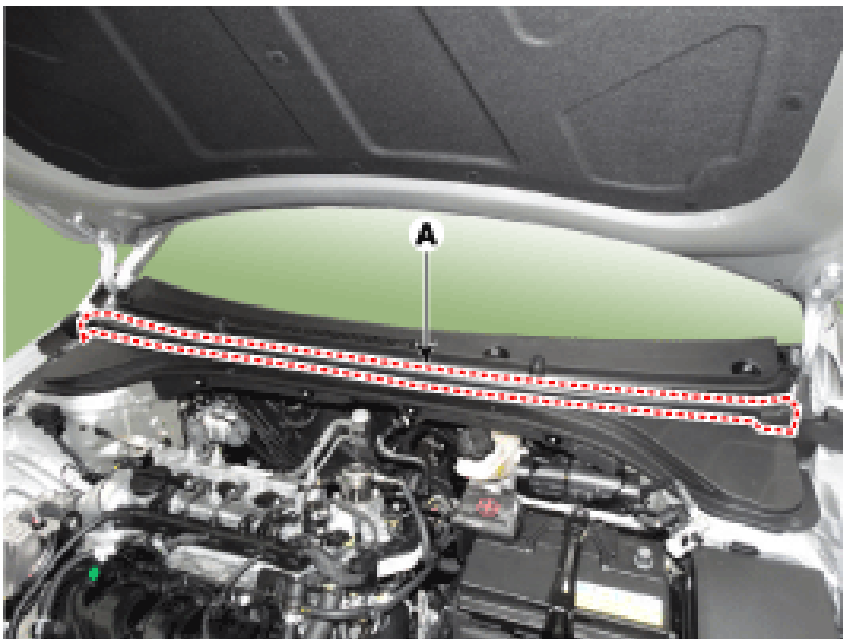

- To install, reverse the removal procedure.