

Component Procedures: Grille


Table of Contents

1. Radiator Grille - Components and Components Location (Article 45063)
2. Radiator Grille - Repair Procedures (Article 45064)

Component Procedures: Grille

Radiator Grill - Components and Components Location (Article 45063)

- Component Location

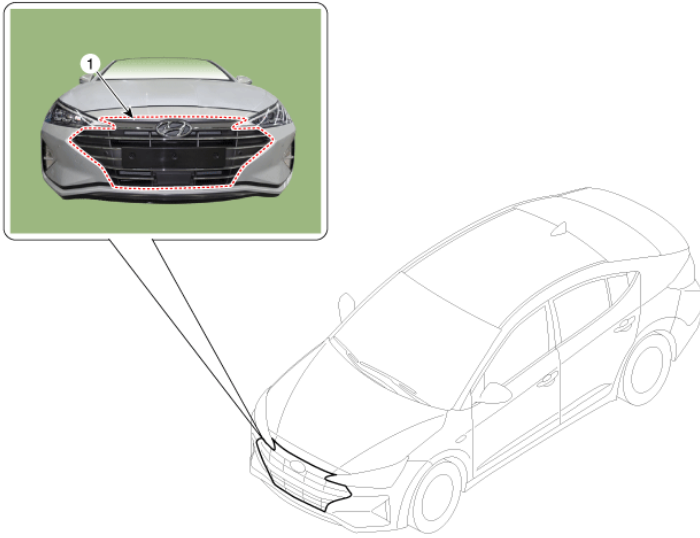

1. Radiator grill

Radiator Grill - Repair Procedures (Article 45064)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.

When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Use a plastic panel removal tool to remove interior trim pieces without marring the surface. Take care not to bend or scratch the trim and panels.




- When removing with a flat - tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Use a plastic panel removal tool to remove interior trim pieces without marring the surface.


- Take care not to bend or scratch the trim and panels.

- Remove the front bumper cover. (Refer to Front Bumper - "Front Bumper Cover")


- Separate the front bumper wiring (A).

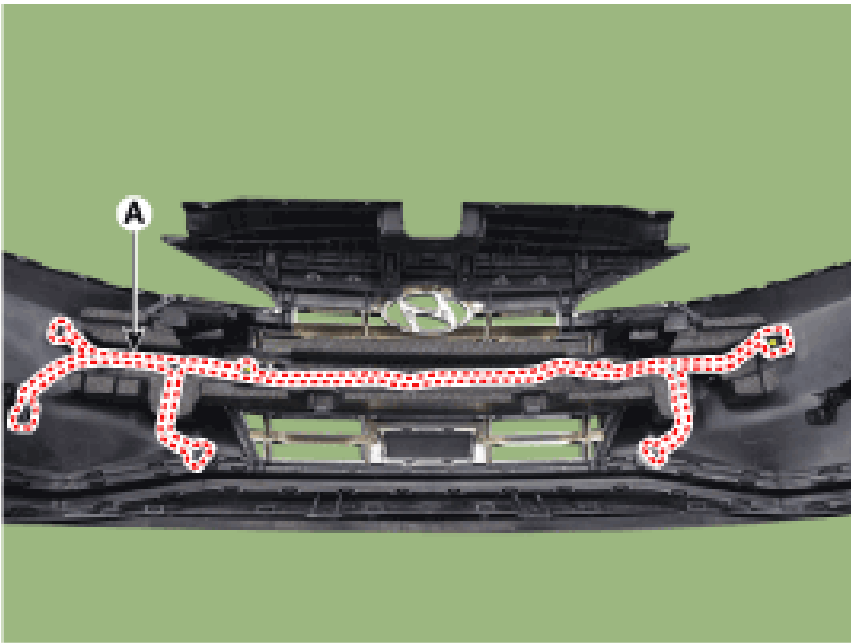


- Remove the fixing clip and then the front bumper energy absorber (A).

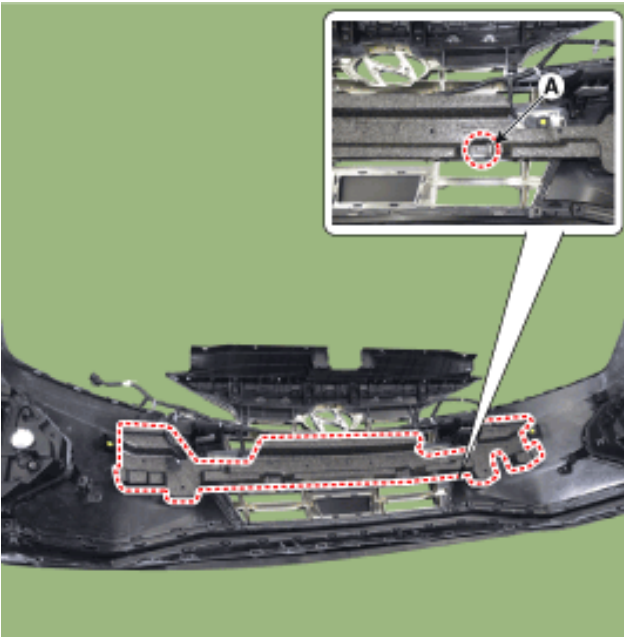


- Using a screwdriver or remover, remove the radiator grill cover (A).

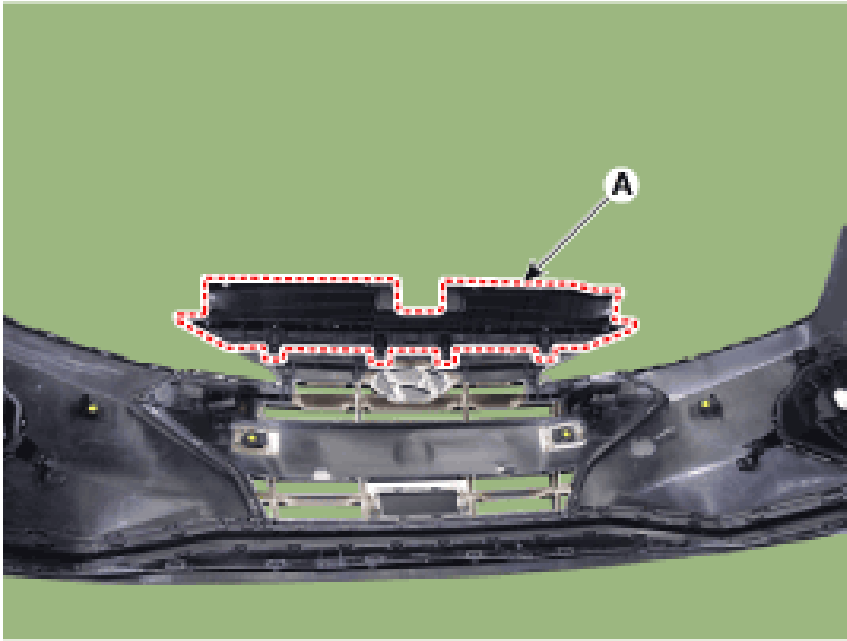


- Loosen the mounting screws and remove the radiator grill bracket (A) and remove the radiator grill (B).

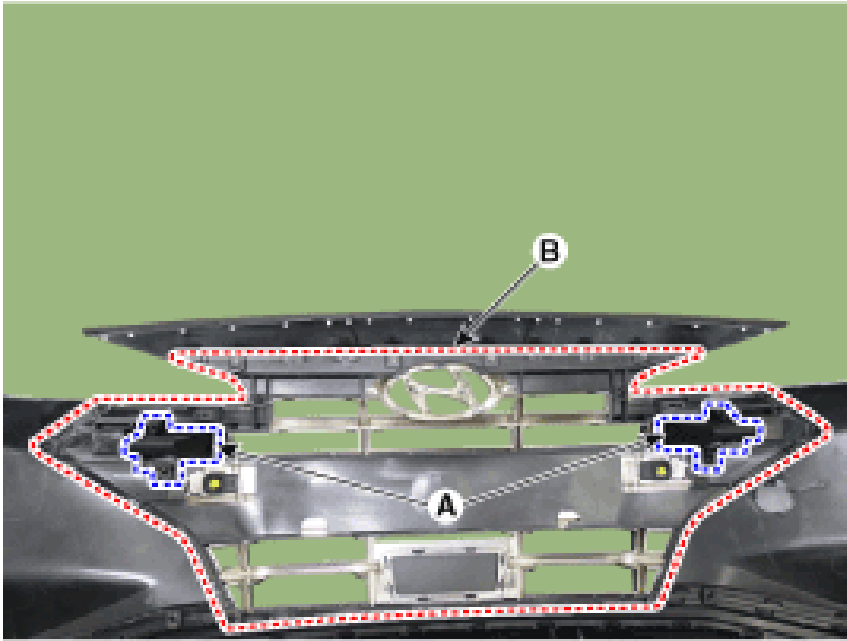

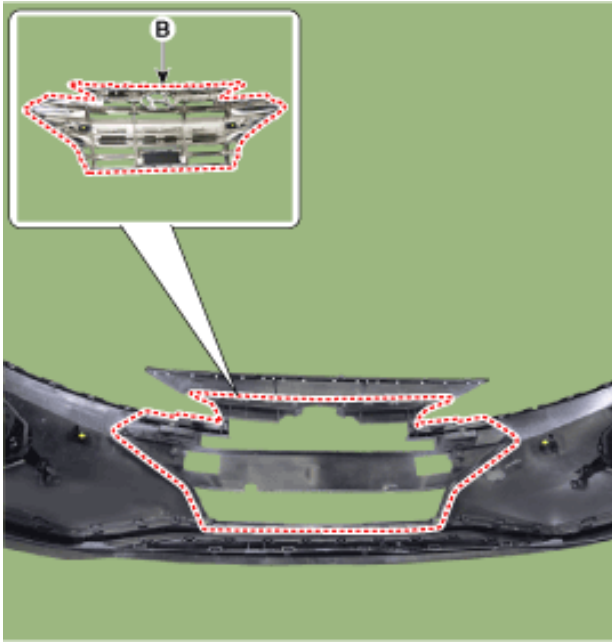

- To install, reverse the removal procedure. Replace any damaged clips (or pin - type retainers).
Replace any damaged clips (or pin - type retainers).

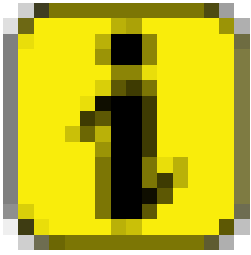

Information

- Replace any damaged clips (or pin - type retainers).