

# **Component Procedures: Trunk / Liftgate Interior Trim Panel**


## **Table of Contents**

1. Trunk Lid Trim - Components and Components Location (Article 45130)
2. Trunk Lid Trim - Repair Procedures (Article 45131)
3. Trunk Trim - Repair Procedures (Article 45053)

# Component Procedures: Trunk / Liftgate Interior Trim Panel

## Trunk Lid Trim - Components and Components Location (Article 45130)

- Component Location

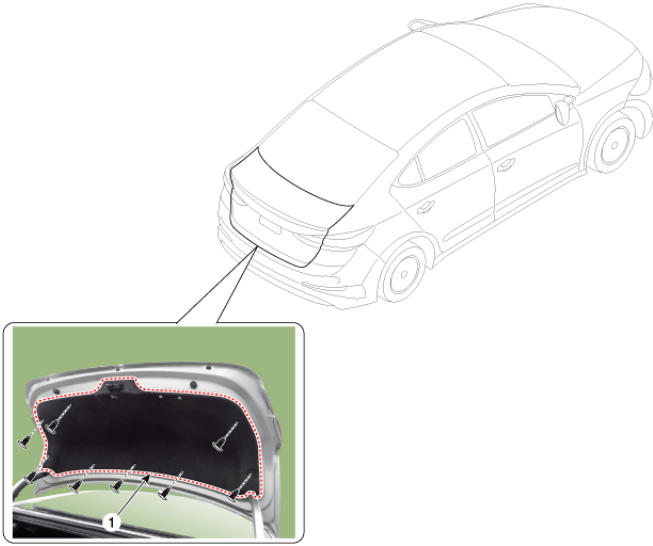

1. Trunk lid trim

## Trunk Lid Trim - Repair Procedures (Article 45131)

- Replacement

Put on gloves to prevent hand injuries.



- Put on gloves to prevent hand injuries.


When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. Take care not to scratch the body surface.




- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.

- Take care not to scratch the body surface.


- Raise the cover (A) using an auger.

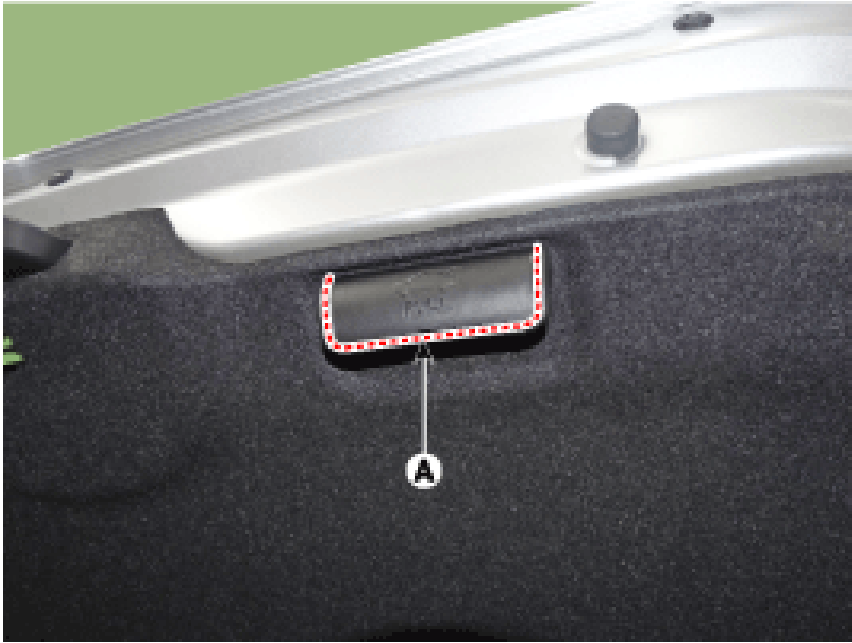

- Loosen the mounting screw and remove the trunk handle (A).

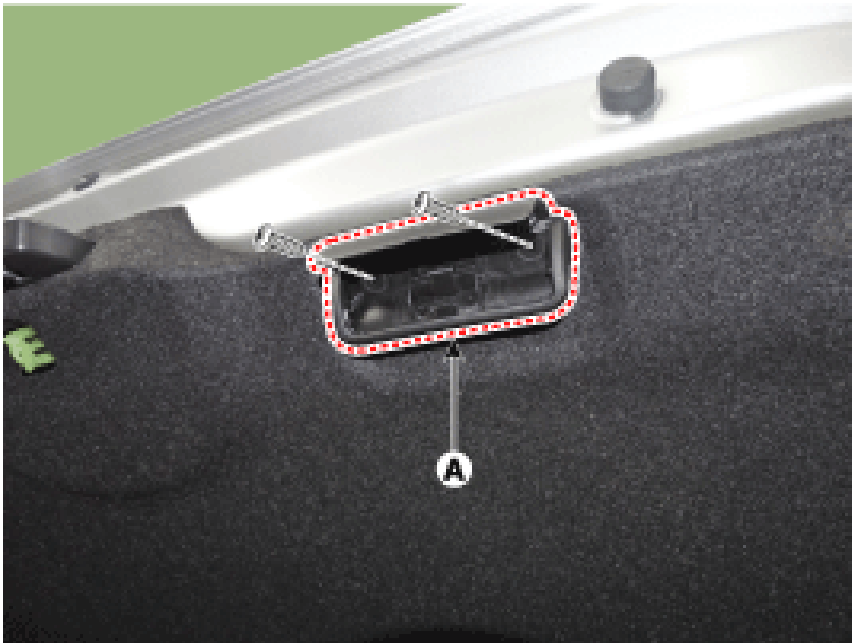

- After loosening the mounting screw and clips, then remove the trunk lid trim (A).

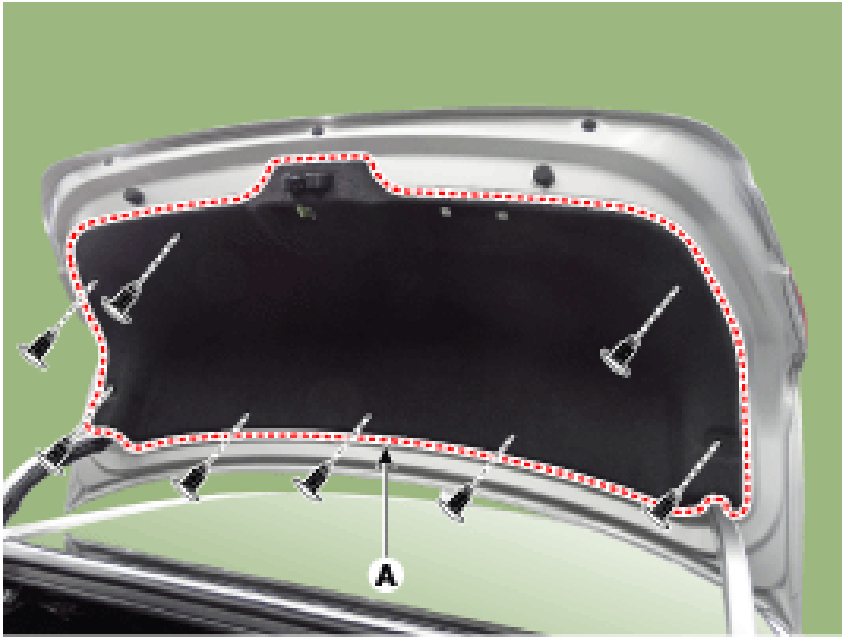

- To install, reverse the removal procedure. Replace any damaged clips.  
Replace any damaged clips.



# Information

- Replace any damaged clips.

## Trunk Trim - Repair Procedures (Article 45053)

- Replacement

Put on gloves to prevent hand injuries.




- Put on gloves to prevent hand injuries.

When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components. When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface. Take care not to bend or scratch the trim and panels.


# NOTICE

- When removing with a flat-tip screwdriver or remover, wrap protective tape around the tools to prevent damage to components.
  - When removing the interior trim pieces, use a plastic panel removal tool not to damage the surface.
  - Take care not to bend or scratch the trim and panels.
  - Remove the rear seat cushion assembly. (Refer to Rear Seat - "Rear Seat Assembly")
  - Remove the rear seat back assembly. (Refer to Rear Seat - "Rear Seat Assembly")
  - Remove the rear door scuff trim. (Refer to Interior Trim - "Door Scuff Trim")
  - After loosening the mounting screws, then remove the partition center trim (A).
  - Remove the luggage covering mat (B).
  - Remove the rear transverse trim (C).
  - Remove the rear wheel house trim (D).
  - After loosening the mounting screws, remove the luggage side trim (E).
  - To install, reverse the removal procedure. Replace any damaged clips.
- Replace any damaged clips.

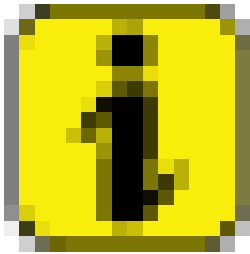

# Information

- Replace any damaged clips.
- [Folding type]

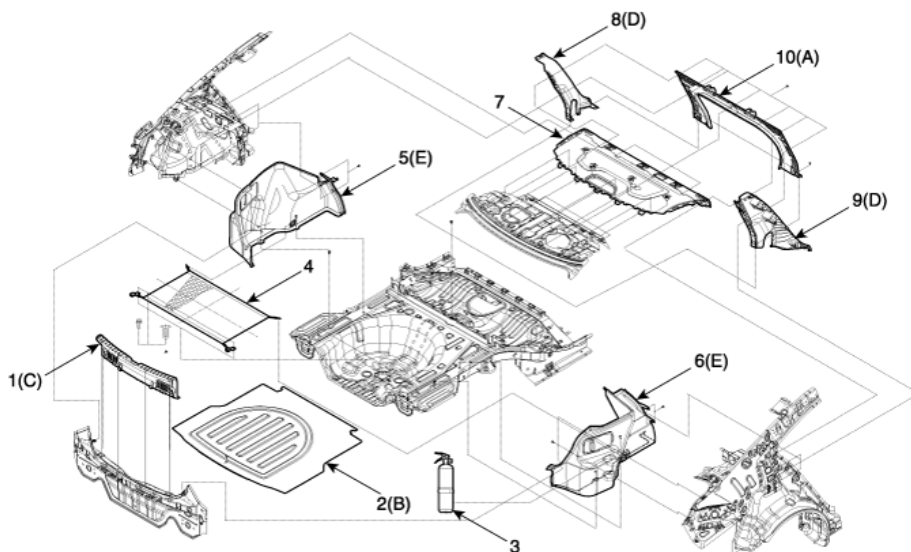

1. Rear transverse trim 2. Luggage covering mat 3. Fire extinguisher 4. Luggage net 5. Luggage side trim [LH]  
6. Luggage side trim [RH] 7. Rear package tray trim 8. Rear wheel house trim [LH] 9. Rear wheel house trim

[RH] 10. Partition center trim  
[Bench type]

