

Component Procedures: Tail Lamp


Table of Contents

1. Rear Combination Lamp - Repair Procedures (Article 44646)
2. All New Technical Service Bulletins (itype_432)
3. All Technical Service Bulletins (itype_100)

Component Procedures: Tail Lamp

Rear Combination Lamp - Repair Procedures (Article 44646)


- Removal
- Disconnect the negative (-) battery terminal.
- Remove the combination lamp cover (A).

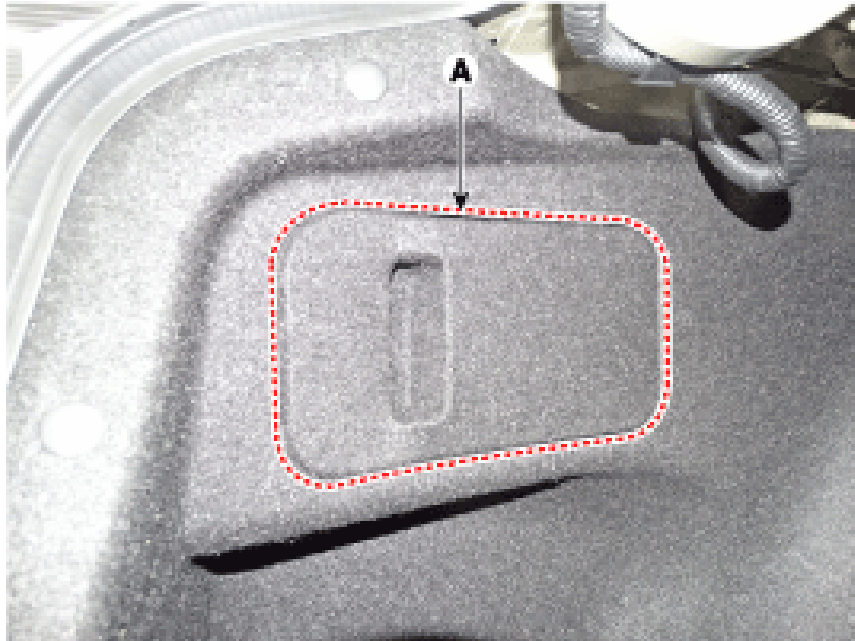

- Loosening the mounting nuts.



- Disconnect the rear combination lamp connector (A).

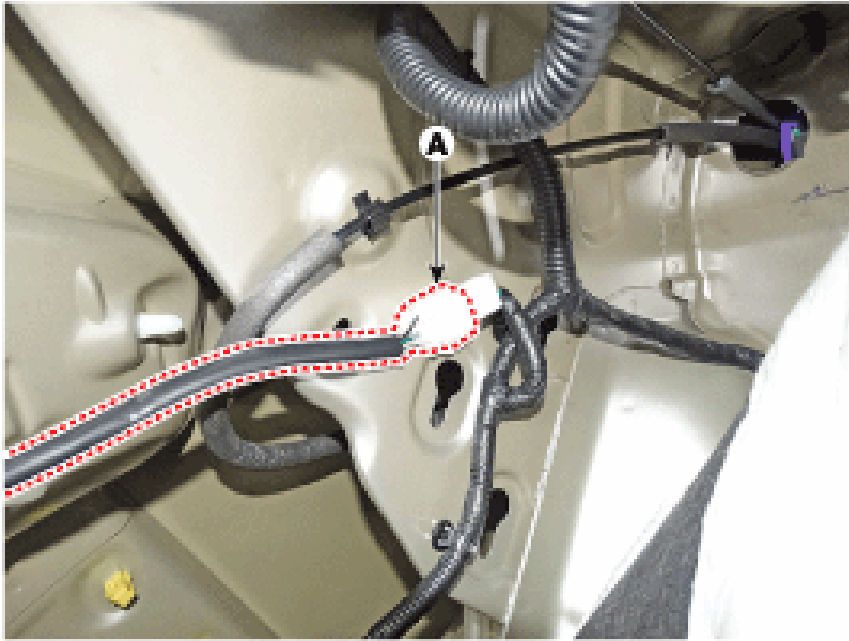

- Remove the rear combination lamp (A).



- Remove the trunk lid trim.
- Disconnect the inside rear combination lamp connector (A) and then remove the rear combination lamp after loosening mounting nuts.



- Replacement
Outside Combination Lamp
- Turn the head lamp power off.
- Remove the bulb socket and turn signal lamp bulb (A) from the lamp assembly.



- Inside Combination Lamp
- Installation
- Connecting the lamp connector
- Install the inside/outside rear combination lamp assembly.
- Install the trunk lid trim. [Inside combination lamp only]

All New Technical Service Bulletins (itype_432)

- Tsbs
- INFORMATION FOR LAMP CONDENSATION (25-BD-012H, 2025/11/05)

All Technical Service Bulletins (itype_100)

- Tsbs
- INFORMATION FOR LAMP CONDENSATION (25-BD-012H, 2025/11/05)