

# **Component Procedures: Blind Spot Indicator**


## **Table of Contents**

1. Blind-Spot Radar Warning Indicator - Components and Components Location (Article 44702)
2. Blind-Spot Radar Warning Indicator - Repair Procedures (Article 44703)

# Component Procedures: Blind Spot Indicator

## Blind-Spot Radar Warning Indicator - Components and Components Location (Article 44702)

- Components

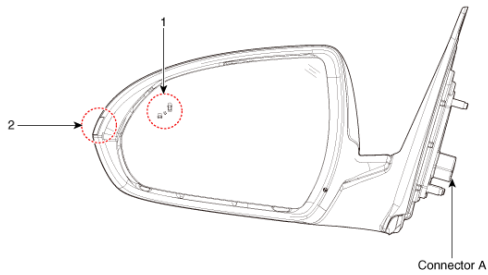

Connector A			
No	Description	No	Description
1	Mirror vertical motor	9	-
2	Mirror vertical COM	10	-
3	Mirror horizontal motor	11	BCW (+)
4	Mirror heater (+)	12	Mirror vertical sensor
5	Side repeater lamp (-)	13	Mirror horizontal sensor
6	Mirror folding	14	Mirror sensor ground
7	Mirror unfolding	15	Mirror sensor power
8	Side repeater lamp (+)	16	BCW Ground

1. BSD Indicator 2. Side repeater lamp

## Blind-Spot Radar Warning Indicator - Repair Procedures (Article 44703)

- Removal

Blind-Spot Radar Warning Indicator

- Disconnect the negative (-) battery terminal.
- Remove the mirror (A).




- Installation

- Install the outside mirror.

- Connect the negative (-) battery terminal.

- Inspection

- Apply battery voltage to each terminal as shown in the table and verify that the mirror operates properly.

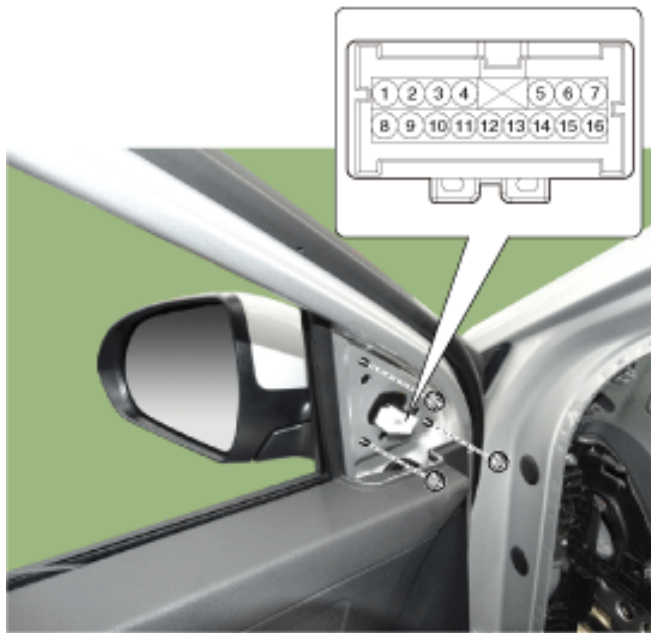

Terminal Position	11	16
ON	⊕	⊖